



BLUMOTION
inside

AVENTOS

Various applications for lift systems

AVENTOS – Moving solutions for every lift system



Use AVENTOS to address individual customer requests



AVENTOS is the lift system programme that provides perfect motion in the wall cabinet area: Even wide lift systems will open easily and close silently and effortlessly thanks to BLUMOTION. The variable stop ensures that AVENTOS lift systems always remain in the desired position. Your customers will be amazed at how easy it is to use.

These excellent solutions for Bi-Fold, up & over, lift up & stay lift applications can accommodate many new design options. We have further enhanced this range with a new product specifically for small stay-lifts. With these products you can fulfil all your customers' desires by offering the correct solution for any wall cabinet.

Contents

4 - 7	The lift system programme	18 - 29	AVENTOS HF
8 - 10	Inspirational action	30 - 37	AVENTOS HS
10 - 11	Inspiring quality	38 - 45	AVENTOS HK
12 - 13	Easy assembly and adjustment	46 - 53	AVENTOS HK
14 - 15	Programme with many options	54 - 61	AVENTOS HK-S
16 - 17	Harmonious design	62 - 63	The Blum brand

The lift system programme



AVENTOS HF for bi-fold lift systems

- Ideal for higher wall cabinets because the handle remains easy to reach in any position.
- Due to the two-part front, the space requirement at the top is low for very high cabinet heights.
- AVENTOS HF can also be used with fronts of different heights.



AVENTOS HS for up & over lift systems

- Ideal for large-area, single fronts.
- Space requirement above the cabinet is minimised due to highly engineered movement.
- You can also use cornice or crown moulding with AVENTOS HS.



AVENTOS HL for lift ups

- Ideal for applications in high or wall cabinets with fronts above as well as recessed cabinets.
- Well-suited for small-area, single fronts.
- AVENTOS HL can be used in isolation with low wall cabinets.

Versatile application

There are many good reasons why AVENTOS lift systems are a good choice for the wall cabinet.

Because lift systems open upwards, they provide an excellent view into the cabinet interior. This enables comfortable and ergonomic access to the items stored. The furniture user retains freedom of motion, unhindered by the lift mechanism.

Additionally, lift systems can offer a huge variety of design options for wide fronts. The visual effect achieved on the base units can often be replicated on the wall cabinets.



AVENTOS HK for stay lifts

- Ideal solution for low cabinet heights in the wall cabinet.
- AVENTOS HK requires only a small amount of space at the top due to the pivot action.
- No hinges are required.



AVENTOS HK-S for small stay lifts


- Ideal solution for small cabinets, e.g. over the larder unit or refrigerator.
- AVENTOS HK-S requires only a small amount of space at the top due to the pivot action.
- No hinges are required.

The lift system programme

Choosing the right lift system

The following graphic shows where the four AVENTOS programme types can be used in a common kitchen system.

AVENTOS HK-S AVENTOS HL AVENTOS HF AVENTOS HS AVENTOS HS AVENTOS HF AVENTOS HS AVENTOS HS AVENTOS HK AVENTOS
AVENTOS HL AVENTOS HL AVENTOS HL AVENTOS HK

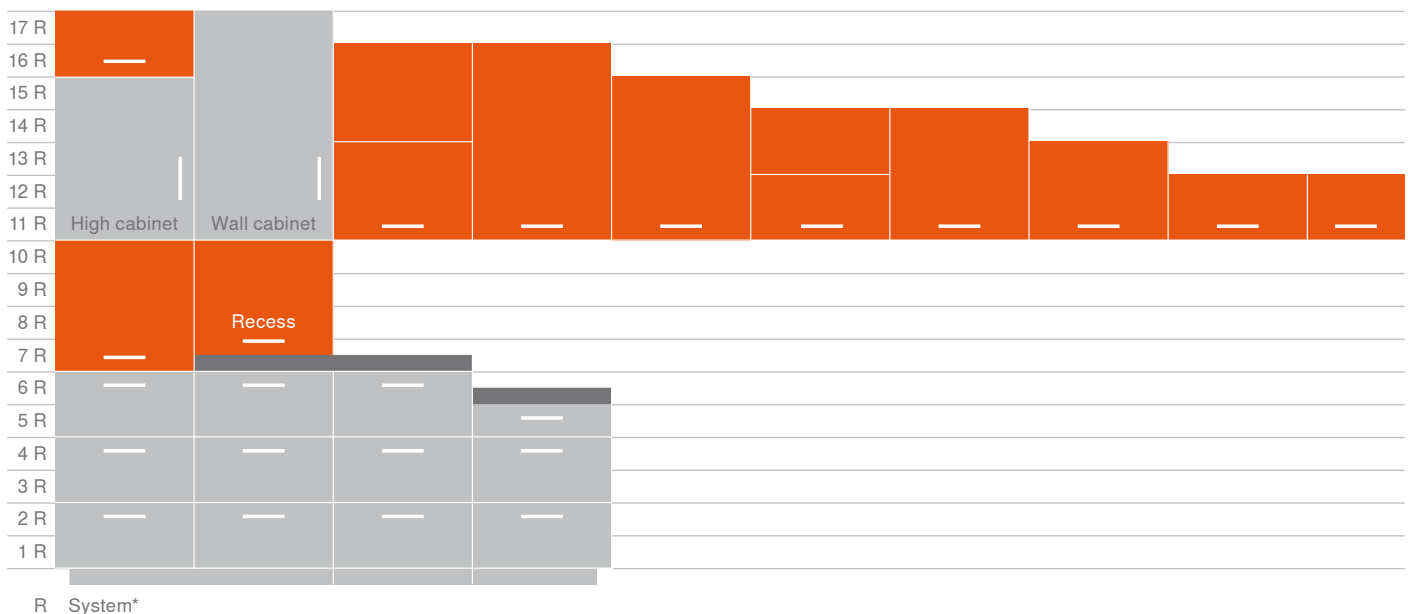

* AVENTOS can also be used in common 4 systems in the wall cabinet area.



AVENTOS

at a glance

	HF	HS	HL	HK	HK-S
Area of application					
Higher wall cabinets	X	X			
Medium wall cabinets	X	X	X	X	
Low wall cabinets			X	X	X
High cabinets			X	X	X
Room planning					
Min. top space requirement	X	X		X	X
Design					
Single front		X	X	X	X
Two-part front	X				
Can be combined with cornice or crown moulding		X	X	X	X
Cabinet height dimensions in mm	480–1.040	350–800	300–580	up to 600*	max. 400
Cabinet width dimensions in mm	up to 1.800	up to 1.800	up to 1.800	up to 1.800	**
Ergonomics					
Handles within easy reach	X	X	X	X	X
Good access to cabinet interior	X	X	X	X	X

* For ergonomic reasons, we recommend a maximum cabinet height of 600 mm. However, higher lift systems can also be used subject to the power factor limits (see page 48).

** Depending on the power factor

DYNAMIC SPACE is a marketing tool from Blum that helps to make good arguments for adding high-quality equipment to a kitchen: Better ergonomics, more comfort and more fun in the kitchen.

www.dynamicspace.com



Motion that inspires

BLUMOTION

inside





Four ways of experiencing Perfect Motion


Surprise and fascinate your customers:

Frontals open effortlessly with all AVENTOS options. Even heavy fronts only require light operating forces. The variable stop means that fronts always remain in the desired position. This ensures that the handle is always within easy reach.


AVENTOS also offers a high degree of elegance and comfort when closing. The intelligent technology of the BLUMOTION adaptive system ensures that fronts always close silently and effortlessly – regardless of the size, weight and closing speed.

Quality


AVENTOS HF

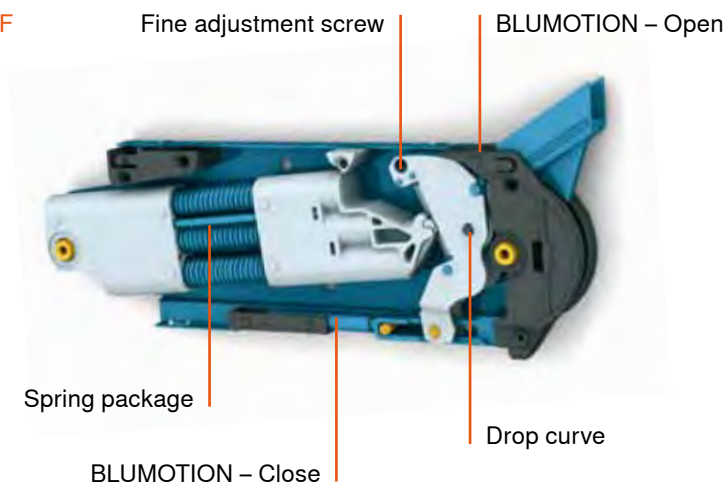

AVENTOS HS

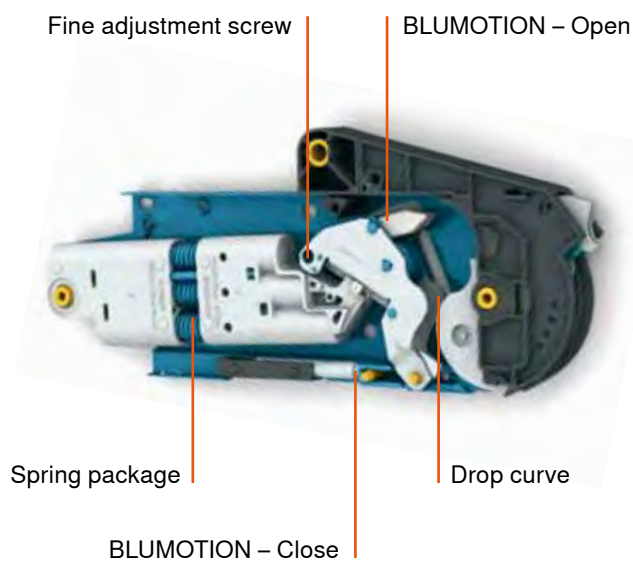

AVENTOS HL

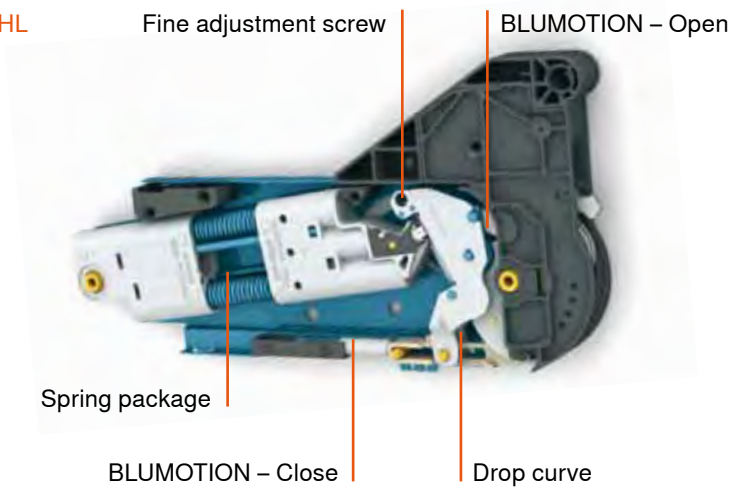


Quality –

for the lifetime of the furniture


AVENTOS lift systems will bring your customers years of happiness.

The core of these fitting solutions is the lift mechanism with BLUMOTION and a robust spring package. This ensures high durability and ease of use when opening and closing.

AVENTOS HK

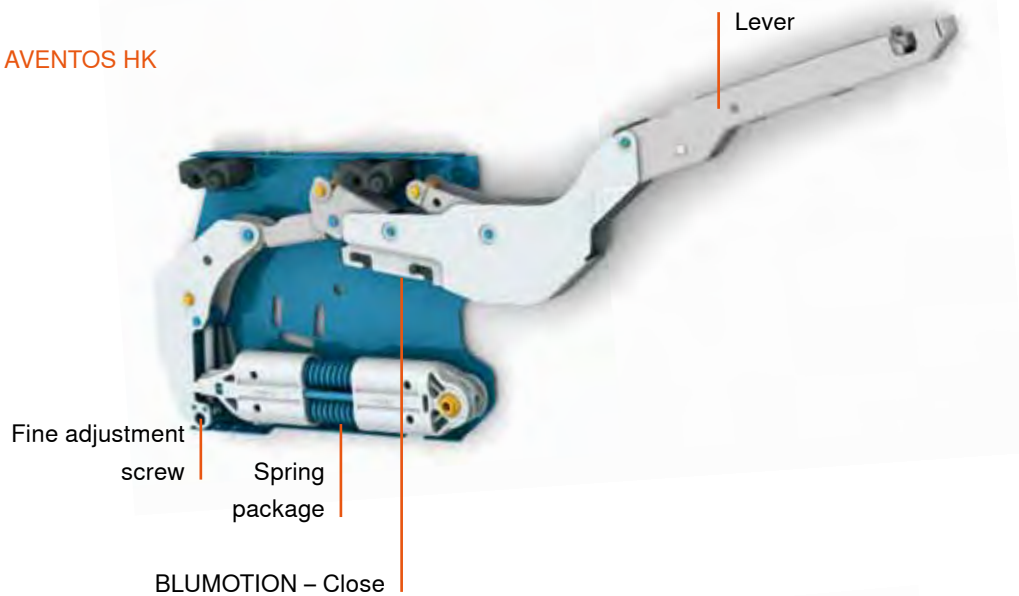

AVENTOS HK-S

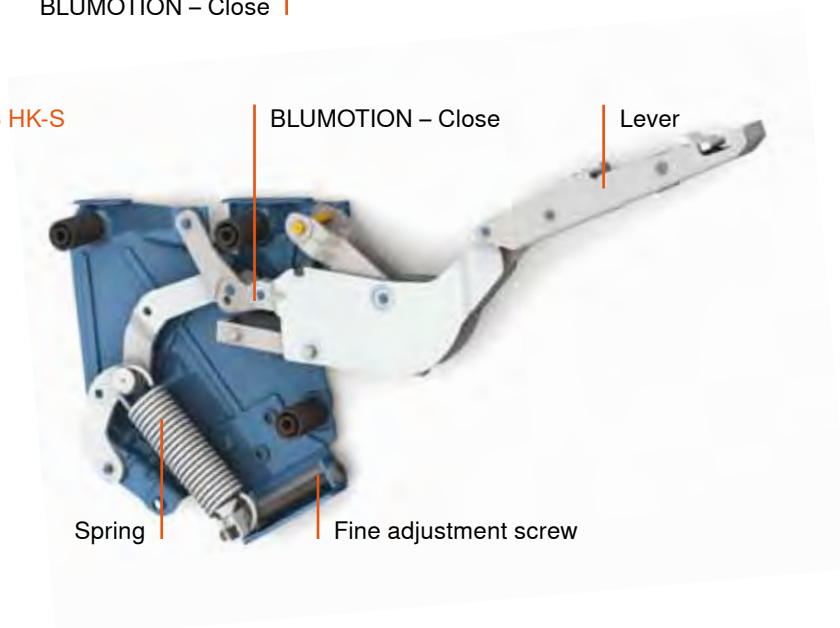

Assembly





Perfect assembly and accurate adjustment **made easy**

Assembly and adjustment need to be precise if you are to guarantee that your customers receive the full “AVENTOS experience”.

The lift force can be adjusted (according to the frontal weight) using a power screw driver (Pozidriv®, size 2, length 39 mm). To make adjustment easier all AVENTOS mechanisms include a calibrated scale.

AVENTOS components are light, regardless of the frontal size, and can be assembled quickly and easily. Thanks to proven CLIP technology, assembly is almost entirely tool-free. Fronts can be adjusted in 3 dimensions to ensure the correct gap alignment.



Programme




Every conceivable application within a concise programme

The AVENTOS programme comprises of a minimum number of symmetrical parts that can be used in multiple applications.

With a straightforward programme of lift mechanisms and lever arms, practically all front sizes and door weights are covered. The programme encompasses cabinet widths up to 1800 mm as well as every conceivable cabinet height.

AVENTOS opens up numerous design options:

All programmes can be combined with composite frontals (wood, MFC, MDF, etc) as well as narrow and wide aluminium frames.

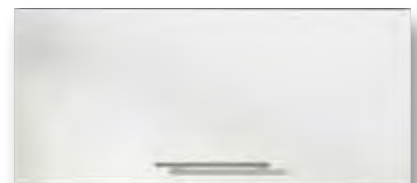






Harmonious design and high functionality

Technology that inspires.

Along with high functionality, the AVENTOS programme also inspires through its simple yet elegant design. This was also the opinion of the expert jury at the 2007 Interzum Awards. As winner of the "best of the best" category. This award was won by AVENTOS on the combined strengths of; unsurpassed function and sleek design. The lift system won the "red dot award for product design" in 2008 and was nominated for the "Design Prize from the Federal Republic of Germany" in 2009.



AVENTOS HF

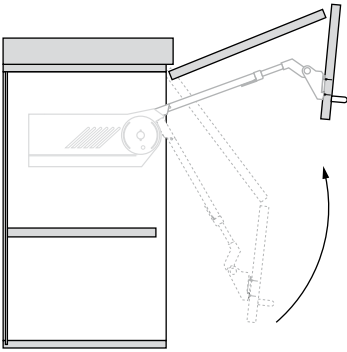


The bi-fold lift system can be used in the kitchen and living area.

Whether wooden fronts, narrow or wide alu frames or a combination of different materials: AVENTOS HF creates numerous design options. It can also be used with fronts of different heights.



Other persuasive advantages

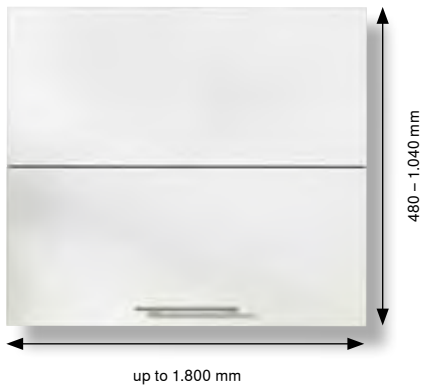


Small programme – wide range of solutions

AVENTOS HF completely covers all common lift system widths and heights with just one small programme. The product line comprises 3 lift mechanisms and 4 telescopic arms. What's more; all main components are symmetrical.


The narrow programme range simplifies ordering, commissioning and warehousing.

AVENTOS HF is suitable for cabinet widths up to 1.800 mm and for cabinet heights from 480 to 1.040 mm.

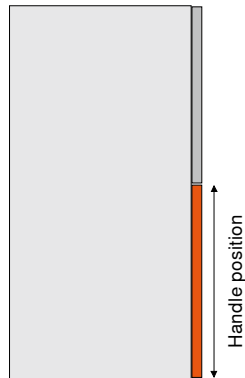

Free positioning of handles

Every type of handle can be used alongside AVENTOS HF. Ideally the handle should be located near the bottom edge of the lower frontal to ensure that it is always within easy reach. AVENTOS HF can also be used with handle-less frontals (where the lower frontal slightly overhangs the underside of the cabinet).

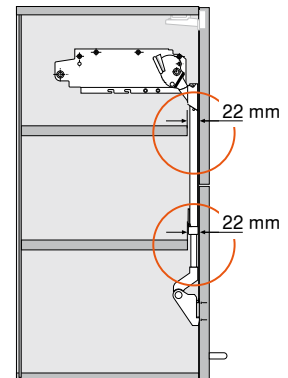

Similar shelves possible

Optimal use of storage space: Lift mechanisms are attached so that depending on the height of the cabinet up to two identical shelves can be used (with a space allowance/cut back of only 22 mm).



Includes a finger safety feature

The CLIP top centre hinge is characterized by an innovative "release" feature that ensures finger safety.



No protruding parts

As the telescopic arm can be removed, there are no protruding parts to obstruct internal transport during furniture manufacturing. This is also an advantage during kitchen assembly.

AVENTOS HF

Assembly in just a few steps

Nearly all steps are tool-free thanks to CLIP assembly. We recommend removing the front for safe and easy cabinet assembly onsite. This is also made very easy with CLIP technology.




1. The telescopic arms are attached to the lift mechanism using CLIP technology.



2. The upper front is placed on the telescopic arm and CLIP top hinges are attached.



3. CLIP top centre hinges are used to connect both fronts.

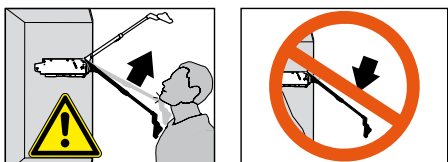

Warning

There is a danger of injury if the telescopic arm springs upward. Remove the telescopic arm rather than pushing it down.

Special warning and safety information must be sent out when used in North America.



4. The telescopic arm and lower front are connected to each other via the CLIP mechanism.

Quick adjustment, precise adjustment

Both bi-fold lift system fronts can be adjusted in all 3 dimensions for a precise gap design.

The fine adjustment for the opening and closing forces for AVENTOS HF is carried out using a power screwdriver. The force can be adjusted precisely to the corresponding door weight. It's child's play thanks to the integrated calibrated scale.

Perfect motion requires precise adjustment:



1. Simple and infinitely variable: A power screwdriver is used to properly set the lift mechanism (Pozidriv®, size 2, length 39 mm).

If the front falls when let go, it must be turned clockwise.

If the front rises when let go, it must be turned anti-clockwise.




2. The telescopic arms adjust themselves by closing the front. They are fastened using the centre lever. This process also adjusts the tensions in the front.



3. You can set the desired gap between the fronts using the CLIP top centre hinge.

Order specifications

Wooden fronts and wide alu frames symmetrical/asymmetrical

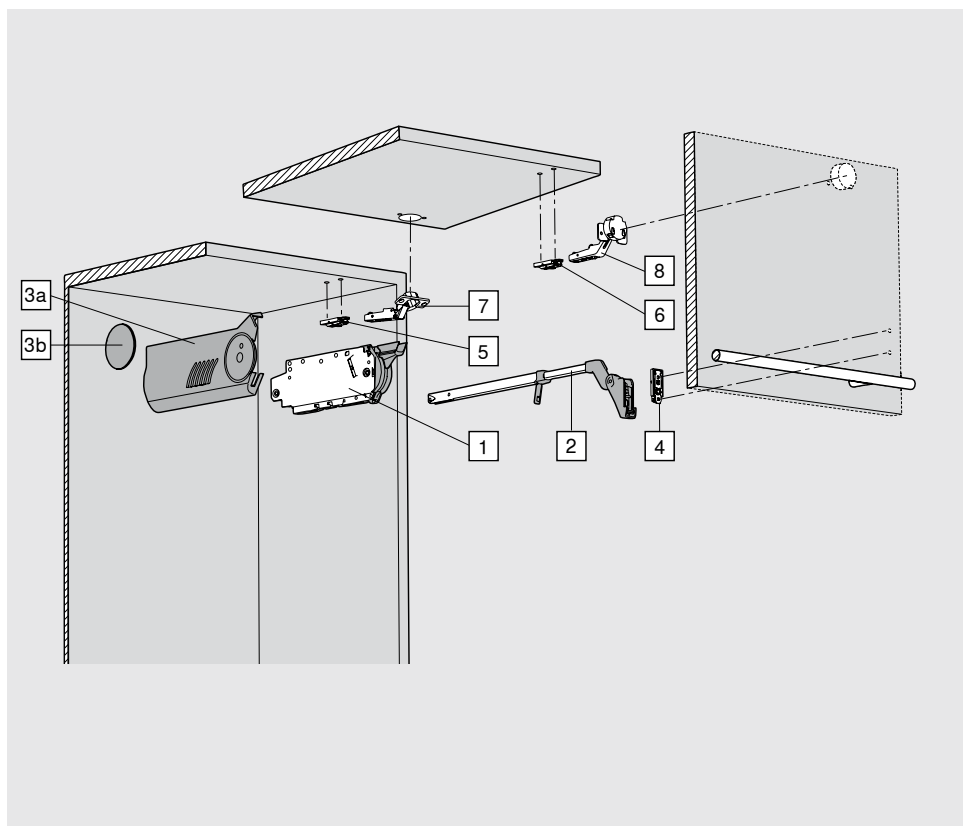

3 types of lift mechanisms are enough to cover a wide range of applications.


Using the power factor, you can calculate the required lift mechanisms. The power factor required depends on the weight of the lower and upper front (incl. handle) and cabinet height.

The power factor and the door weight can be increased by 50% when a third lift mechanism is used.

The larger front must be at the top for asymmetrical fronts.



This is how it's done: Power factor LF = cabinet height¹⁾ [mm] x door weight including handle [kg]

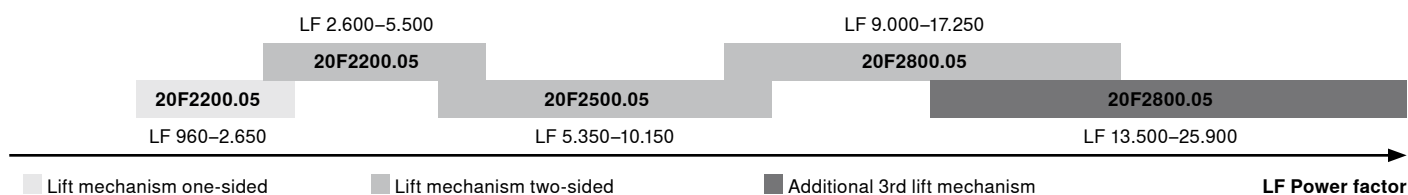

A trial application is recommended when you are in a borderline area for the individual lift mechanism.

1	Lift mechanism set	
	Power factor LF	
	2.600-5.500	20F2200.05
	5.350-10.150	20F2500.05
	9.000-17.250	20F2800.05
	Composed of:	
	2 x symmetrical lift mechanisms	
	10 x chipboard screws, Ø 4 x 35 mm	

2	Telescopic arm set	
	Nickel plated steel	
	Cabinet height ¹⁾ 480-570 mm	20F3200
	Cabinet height ¹⁾ 560-710 mm	20F3500
	Cabinet height ¹⁾ 700-900 mm	20F3800
	Cabinet height ¹⁾ 760-1,040 mm	20F3900
	Composed of:	
	2 x symmetrical telescopic arms	

¹⁾ "Theoretical cabinet height" for asymmetrical fronts = upper front height (FHO) x 2 (including gaps)



3	Cover cap set	
	light grey, silk white, nickel plated	
		20F8000
	Composed of:	
3a	2 x cover plates left/right	
3b	2 x round cover caps	

4	Mounting plate for telescopic arm	
	All horizontal mounting plates with 0 mm distance	
	Recommendation	
	Screws ²⁾ Spacing 0 mm	175H5400
	EXPANDO Spacing 0 mm	177H5400E
	Knock-in Spacing 0 mm	177H5100

5	Mounting plate for CLIP top 120° hinge	
	Standard mounting plates, spacing depends on the top gap	
	Recommendation	
	Screws ²⁾ Spacing 0 mm	175H5400
	EXPANDO Spacing 0 mm	177H5400E
	Knock-in Spacing 0 mm	177H5100

6	Mounting plate for CLIP top centre hinge	
	Standard mounting plates with 0 mm distance	
	Recommendation	
	Screws ²⁾ Spacing 0 mm	175H5400
	Only use a cruciform mounting plate for wide alu frames under a 55 mm frame width	

7	CLIP top 120° hinge	
	Boss: Steel boss Screws ²⁾ unsprung	70T5550.TL
	Boss: Steel boss INSERTA unsprung	70T5590BTL

8	CLIP top centre hinge	
	Boss: Zinc boss Screws ²⁾ unsprung	78Z5500T
	Boss: Zinc boss EXPANDO unsprung	78Z553ET

	Opening angle stop	
	83°	20F7011
	104°	20F7051


	Bit PZ cross slot	
	Size 2, length 39 mm	BIT-PZ KS2

²⁾ Use chipboard screws (609.1x00) for wooden fronts. Use self tapping screw, countersunk head (608.085) for wide alu frames.

Planning Information

Wooden fronts and wide alu frames symmetrical


Peg positions for lift mechanism

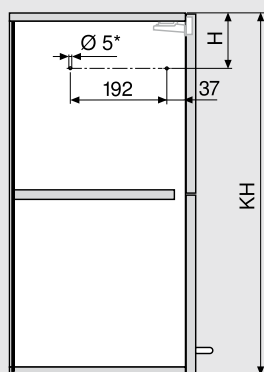

* Drilling depth 5 mm


Cabinet height KH	H
480–549 mm	KH x 0.3 - 28 mm
550–1.040 mm	KH x 0.3 - 57 mm

Fixing positions for lift mechanism

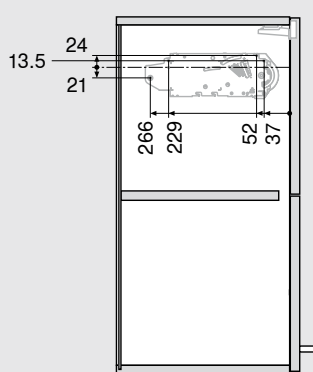


4 x Ø 4 x 35 mm

Space requirement

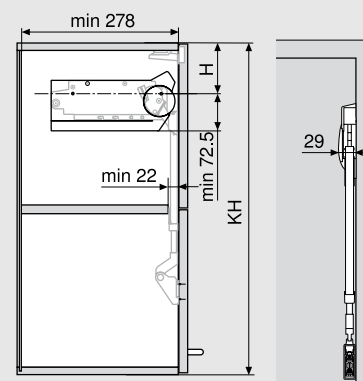

KH Cabinet height

Front assembly

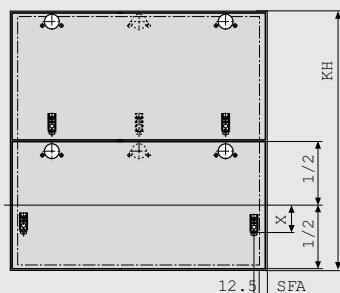


SFA Side front overlay

3 hinges starting at cabinet width 1200 mm
and/or 12 kg door weight
4 hinges starting at cabinet width 1800 mm
and/or 20 kg door weight

Cabinet height KH	X Screw-on/ EXPANDO	X Knock-in
480–549 mm	68 mm	70 mm
550–1.040 mm	45 mm	47 mm

CLIP top 120° hinge unsprung

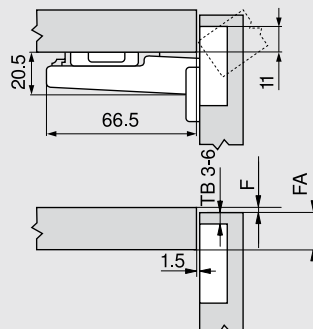


F Gap

Drilling distance TB

	Front overlay FA																
	5	6	7	8	9	10	11	12	13	14	15	16	17				
0																	
3																	
6																	
9																	

▲ Mounting plate

CLIP top centre hinge

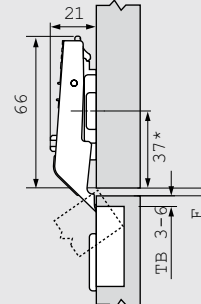

* 37 mm for cruciform mounting plates (37/32)


Min. gap F = 1.5 mm

Drilling distance TB


	Centre gap F																
	3	4	5	6													
0																	
3																	
6																	
9																	

▲ Mounting plate


Screw-on

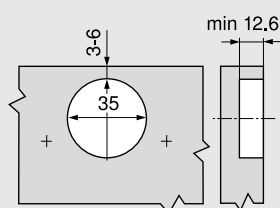

INSERTA/knock-in/EXPANDO assembly

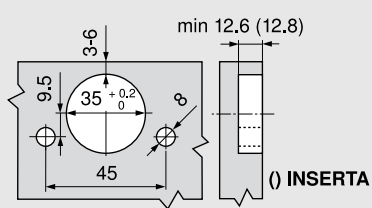

Space requirement




Without OEB	$Y = FH \times 0.44 + 38$
OEB 104°	$Y = FH \times 0.24 + 34$
OEB 83°	$Y = 0$



Wooden fronts and wide alu frames asymmetrical


Peg positions for lift mechanism

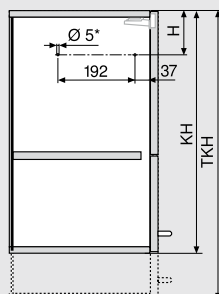

* Drilling depth 5 mm


TKH	H
480–549 mm	TKH x 0.3 - 28 mm
550–1.040 mm	TKH x 0.3 - 57 mm

Fixing positions for lift mechanism

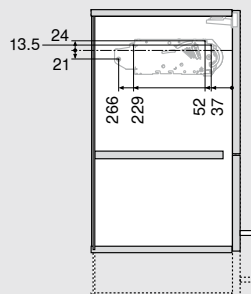

4 x Ø 4 x 35 mm

Space requirement

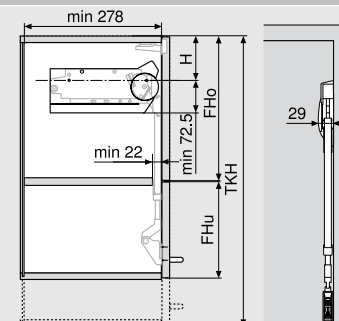


TKH Theoretical cabinet height

FHo Upper front height

FHu Lower front height

TKH = FHo mm x 2 (including gaps)

Front assembly

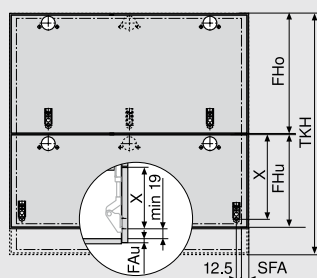

FHo Upper front height


TKH Theoretical cabinet height

SFA Side front overlay

FAu Lower front overlay

TKH	X Screw-on/ EXPANDO	X Knock-in
480–549 mm	FHo/2 + 68 mm	FHo/2 + 70 mm
550–1.040 mm	FHo/2 + 45 mm	FHo/2 + 47 mm

CLIP top 120° hinge unsprung

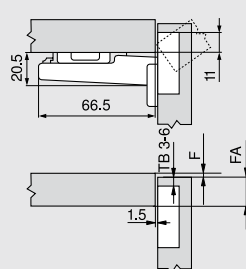


F Gap

Drilling distance TB

	Front overlay FA															
	5	6	7	8	9	10	11	12	13	14	15	16	17			
0																
3								3	4	5	6					
6				3	4	5	6									
9	3	4	5	6												

▲ Mounting plate

CLIP top centre hinge

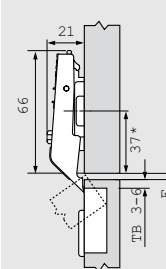

* 37 mm for cruciform mounting plates (37/32)


Min. gap F = 1.5 mm

Drilling distance TB

	Centre gap F															
0																
3																
6																
9																

▲ Mounting plate

Min. lower front height

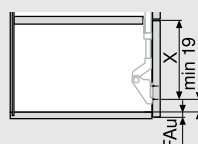


X + 19 + FAu

FAu Lower front overlay

Number of Hinges

3 hinges starting at cabinet width 1200 mm and/or 12 kg door weight
4 hinges starting at cabinet width 1800 mm and/or 20 kg door weight


Space requirement

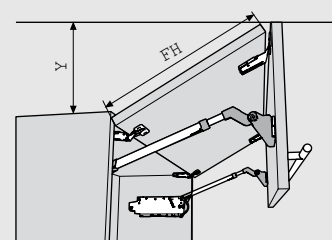


OEB = Opening angle stop

Without OEB	Y = FH x 0.44 + 38
OEB 104°	Y = FH x 0.24 + 34
OEB 83°	Y = 0

Screw-on

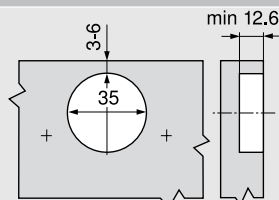


INSERTA/knock-in/EXPANDO assembly

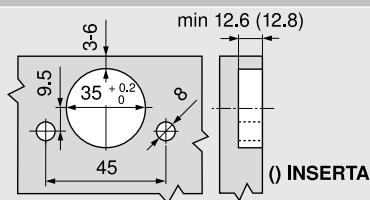

Order specifications

Narrow alu frames symmetrical/asymmetrical

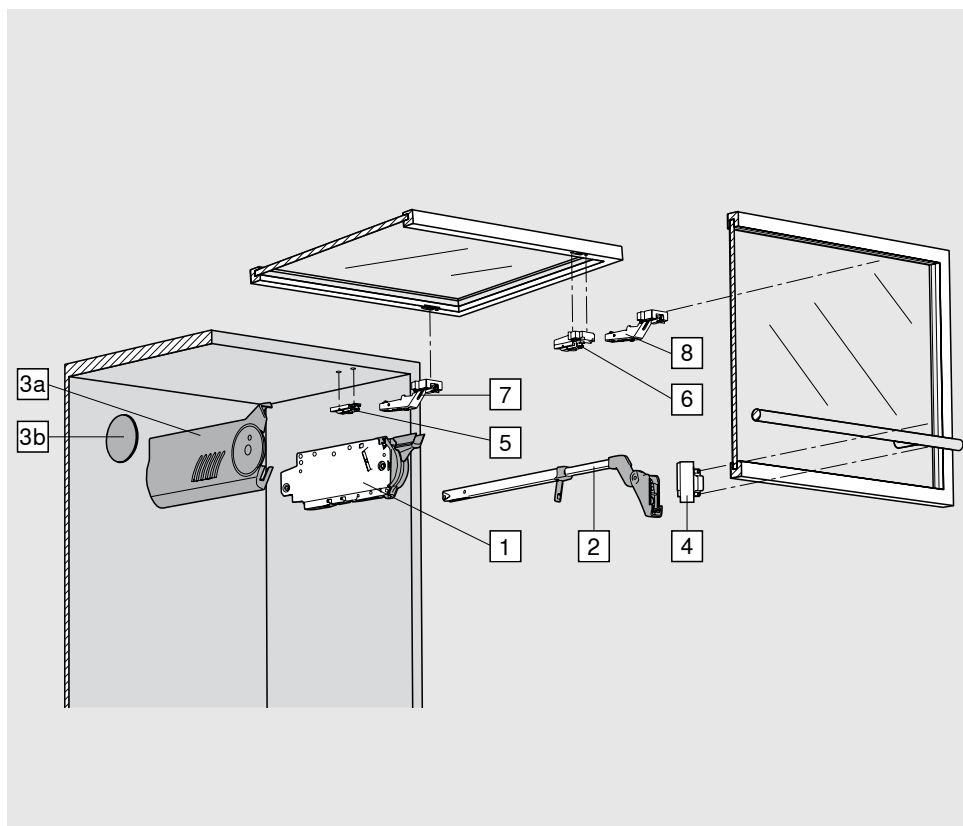


3 types of lift mechanisms are enough to cover a wide range of applications.

Using the power factor, you can calculate the required lift mechanisms. The power factor required depends on the weight of the lower and upper front and the cabinet height.

The larger front must be at the top for asymmetrical fronts.

i

This is how it's done: Power factor LF = cabinet height¹⁾ [mm] x door weight including handle [kg]

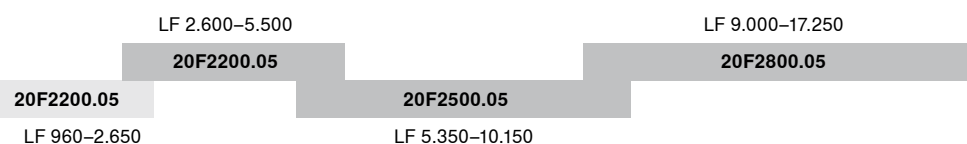

■ Lift mechanism one-sided

■ Lift mechanism two-sided

LF Power factor

A trial application is recommended when you are in a borderline area for the individual lift mechanism.

1	Lift mechanism set	
	Power factor LF	
	2.600–5.500	20F2200.05
	5.350–10.150	20F2500.05
	9.000–17.250	20F2800.05
	Composed of:	
	2 x symmetrical lift mechanisms	
	10 x chipboard screws, Ø 4 x 35 mm	

2	Telescopic arm set	
	Nickel plated steel	
	Cabinet height ¹⁾ 480-570 mm	20F3200
	Cabinet height ¹⁾ 560-710 mm	20F3500
	Cabinet height ¹⁾ 700-900 mm	20F3800
	Cabinet height ¹⁾ 760-1,040 mm	20F3900
	Composed of:	
	2 x symmetrical telescopic arms	

¹⁾ "Theoretical cabinet height" for asymmetrical fronts = upper front height (FHO) x 2 (including gaps)



3	Cover cap set	
	light grey, silk white, nickel plated	
		20F8000
	Composed of:	
3a	2 x cover plates left/right	
3b	2 x round cover caps	

4	CLIP adapter plate for telescopic arms	
	Distance 0 mm left/right	175H5B00

5	Mounting plate for CLIP top 120° hinge	
	Standard mounting plates, spacing depends on the top gap	
	Recommendation	
	Screw-on Spacing 0 mm	175H5400
	EXPANDO Spacing 0 mm	177H5400E
	Knock-in Spacing 0 mm	177H5100

6	CLIP adapter plate for centre hinges	
	Symmetrical	175H5A00

7	CLIP top 120° alu frame hinge	
	Boss: Screw-on	72T550A.TL
	Steel boss unsprung	

8	CLIP top alu frame centre hinge	
	Boss: Screw-on	78Z550AT
	Zinc boss unsprung	


	Opening angle stop	
	83°	20F7011
	104°	20F7051

	Bit PZ cross slot	
	Size 2, length 39 mm	BIT-PZ KS2

Planning Information

Narrow alu frames symmetrical


Peg positions for lift mechanism

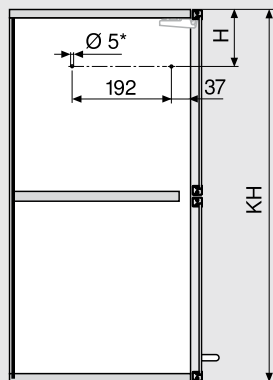

* Drilling depth 5 mm


Cabinet height KH	H
480–549 mm	KH x 0.3 - 28 mm
550–1.040 mm	KH x 0.3 - 57 mm

Fixing positions for lift mechanism

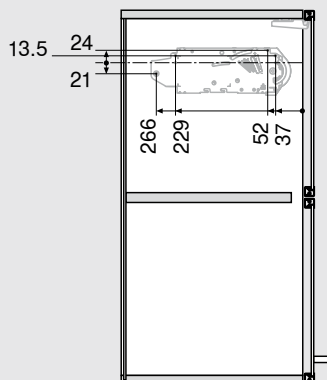


4 x Ø 4 x 35 mm

Space requirement

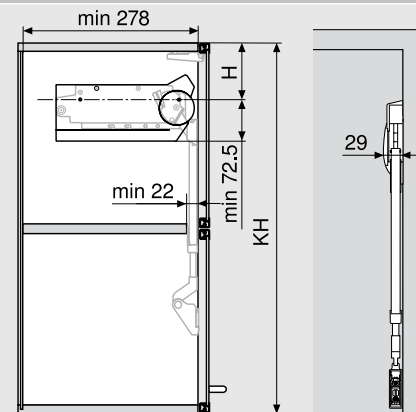

KH Cabinet height


Front assembly

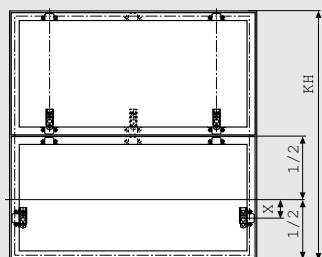


3 hinges starting at cabinet width 1200 mm
and/or 12 kg door weight
4 hinges starting at cabinet width 1800 mm
and/or 20 kg door weight

Cabinet height KH	X
480–549 mm	54 mm
550–1.040 mm	31 mm

CLIP top 120° alu frame hinge unsprung

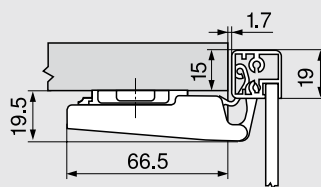


CLIP top alu frame centre hinge

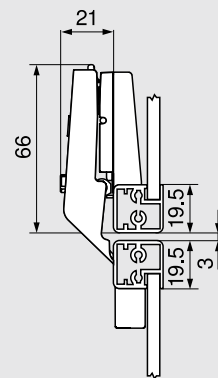

Min. gap F = 1.5 mm


An adjustment has to be made for frame
thicknesses over 20.5 mm

Front assembly

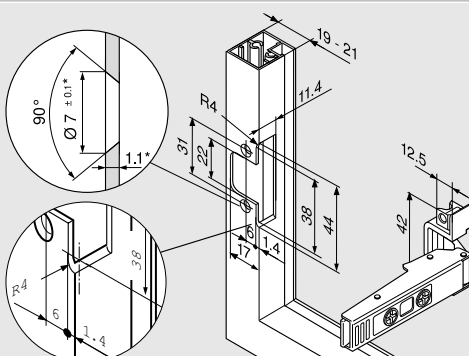

* When changing material thickness, adjust
the assembly dimensions accordingly

Space requirement

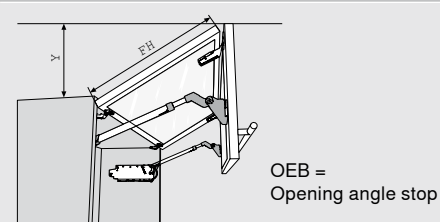


Without OEB	$Y = FH \times 0.44 + 38$
OEB 104°	$Y = FH \times 0.24 + 34$
OEB 83°	$Y = 0$



Narrow alu frames asymmetrical


Peg positions for lift mechanism

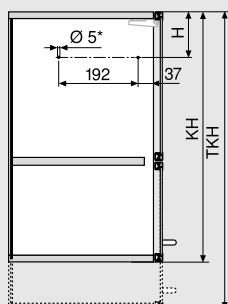

* Drilling depth 5 mm


TKH	H
480–549 mm	TKH x 0.3 - 28 mm
550–1.040 mm	TKH x 0.3 - 57 mm

Fixing positions for lift mechanism

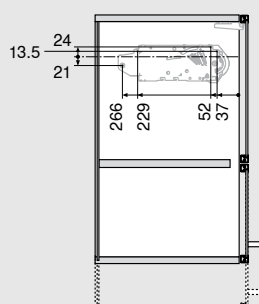

4 x Ø 4 x 35 mm

Space requirement

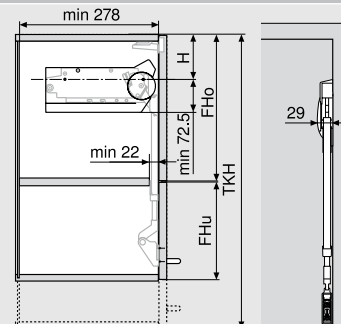


TKH Theoretical cabinet height

FHo Upper front height

FHu Lower front height

TKH = FHo mm x 2 (including gaps)

Front assembly

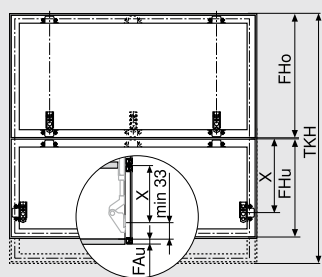


FHo Upper front height

TKH Theoretical cabinet height


FAu Lower front overlay

TKH	X
480–549 mm	FHo/2 + 54 mm
550–1.040 mm	FHo/2 + 31 mm

CLIP top 120° alu frame hinge unsprung

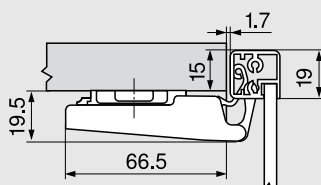


CLIP top alu frame centre hinge

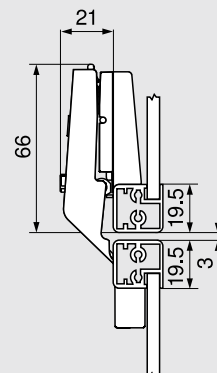

Min. gap F = 1.5 mm

An adjustment has to be made for frame thicknesses over 20.5 mm

Min. lower front height

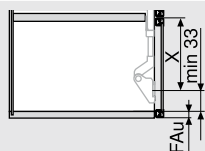


X + 33 + FAu

FAu Lower front overlay

Number of Hinges

3 hinges starting at cabinet width 1200 mm and/or 12 kg door weight
4 hinges starting at cabinet width 1800 mm and/or 20 kg door weight

Space requirement

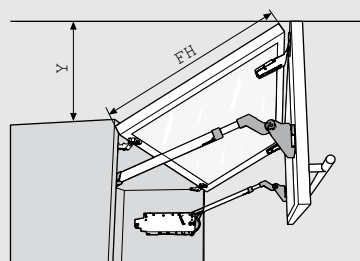


OEB = Opening angle stop

Without OEB $Y = FH \times 0.44 + 38$

OEB 104° $Y = FH \times 0.24 + 34$


OEB 83° $Y = 0$

Screw-on

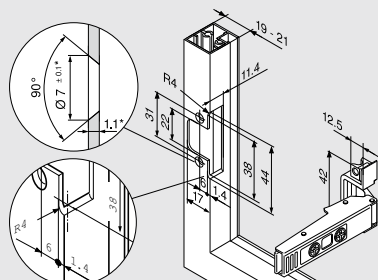

* When changing material thickness, adjust the assembly dimensions accordingly

AVENTOS HS

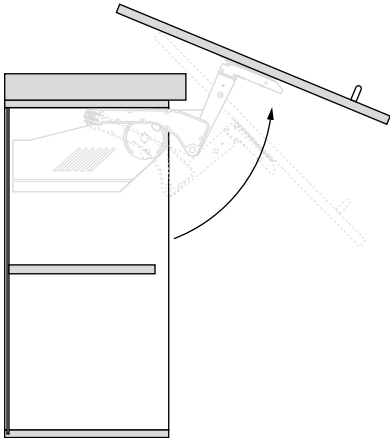



Design freedom for cornice or crown mouldings.

The AVENTOS HS up & over lift system can easily be combined with cabinets fitted with cornice or crown mouldings because the frontal swings up over the cabinet with enough space.

AVENTOS HS opens up a variety of design options.



Other persuasive advantages

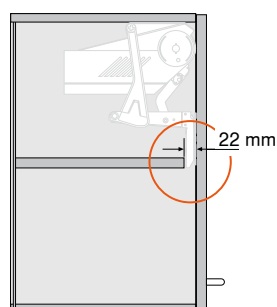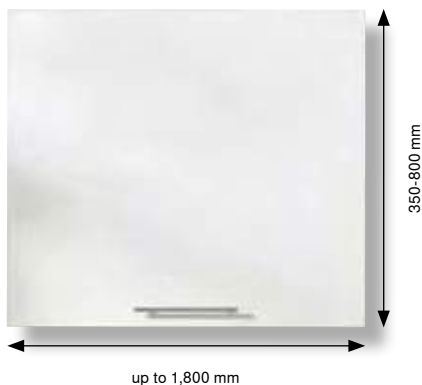

Small programme, huge application variety

AVENTOS HS completely covers all common frontal widths and heights with one simple programme: 9 different lift mechanisms and only 1 lever arm cover every size and front weight.

AVENTOS HS is suitable for cabinet widths up to 1800 mm and for cabinet heights from 350 to 800 mm. The narrow programme range simplifies ordering, commissioning and warehousing. Because of its symmetrical design, the lift mechanism can be used on both the right and left.

Option of shelves

With AVENTOS HS, storage space is optimised in wall cabinets. Even smaller wall cabinets can be easily fitted with a shelf. A shelf with a recess of only 22 mm from the front can be used starting at a cabinet height of 500 mm. Starting with a cabinet height of 740 mm, two shelves are possible.

No protruding parts

There are no protruding parts thanks to the removable lever arm. This guarantees a high degree of safety during internal transport, furniture manufacturing and delivery to the customer.

AVENTOS HS

Assembly in just a few steps

AVENTOS HS assembly is almost entirely tool-free. For final assembly onsite, the wall cabinet front can be removed and then later reattached without the use of tools thanks to proven CLIP technology. This makes cabinet assembly easier, faster and safer.




- 1.** The lift mechanism is attached.
Installing the lever arm requires no tools.



- 2.** The cross stabiliser is attached to the lift mechanism for optimal side stability.



- 3.** The symmetrical front fixing bracket is attached to the front.

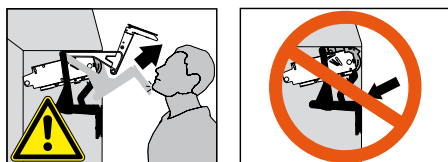

Warning

There is a danger of injury if the lever arm HL springs upward. Remove the lever arm HL rather than pushing it down.

Special warning and safety information must be added for use in North America.



- 4.** The lever arm and the front are connected via the CLIP mechanism.

Quick adjustment, precise adjustment

The front can be adjusted quickly in all 3 dimensions. Width, depth and height adjustment can be carried out onsite for perfect gap alignment.

Perfect motion requires a precise setting:



1. Lift mechanisms are set to the respective door weight using a power screwdriver (Pozidriv®, size 2, length 39 mm).



If the lift system falls when let go, it must be turned to the right.




If the lift system rises when let go, it must be turned to the left.




2. The front can be manually adjusted in all 3 dimensions.

Order specifications

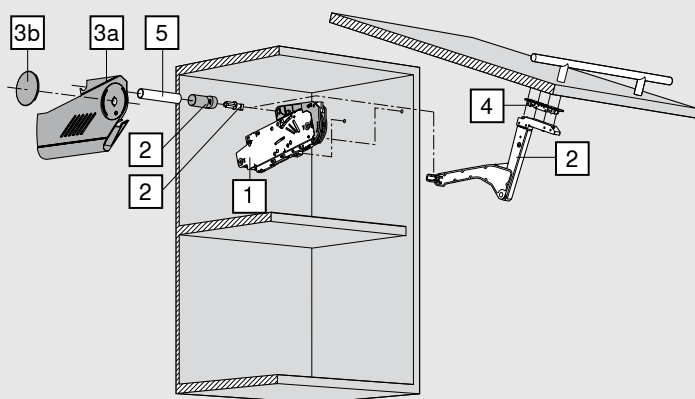

1	Lift mechanism set			
	Cabinet height 350-525	20S2A00.05	20S2B00.05	20S2C00.05
	Cabinet height 526-675	20S2D00.05	20S2E00.05	20S2F00.05
	Cabinet height 676-800	20S2G00.05	20S2H00.05	20S2I00.05
	Composed of:			
	2 x symmetrical lift mechanisms			
	10 x chipboard screws, Ø 4 x 35 mm			

2	Lever arm set	
	Nickel plated steel	20S3500.05
	Composed of:	
	2 x level arm left/right	
	2 x stabiliser adapters	
	2 x cross stabiliser cover caps	

4	Front fixing bracket set	
	Nickel plated	
	Wooden fronts and wide alu frames ¹⁾	20S4200
	Narrow alu frames	20S4200A
	Composed of:	
	2 x symmetrical front fixing brackets	

3	Cover cap set	
	light grey, silk white, nickel plated	
		20S8000
	Composed of:	
3a	2 x cover plates left/right	
3b	2 x round cover caps	

5	Cross stabiliser rod round	
	Alu, Ø 16 mm	
	For cutting to size, 1061 mm	20Q1061U

	Connecting piece for cross stabiliser set	
	Alu, Ø 16 mm, KB 1219 mm and higher	20Q091Z
	Composed of:	
	1 x connecting piece, 1 x fixing, 2 x connectors, 2 x cover caps	

	Bit PZ cross slot	
	Size 2, length 39 mm	BIT-PZ KS2

¹⁾ Use 4 chipboard screws (609.1x00) for wooden fronts. Use 4 self tapping screw, countersunk head (608.085) for wide alu frames.



The cabinet front and door weight is required in order to select the correct lift mechanism.

Example: Cabinet height KH = 600 mm
Weight of front = 10 kg
Lift mechanism selection =

20S2E00.05

Cabinet height KH = 602 mm rounded to KH = 600 mm

Cabinet height KH = 603 mm rounded to KH = 605 mm

KH (mm)	Door weight (kg)		
	20S2G00.05	20S2H00.05	20S2I00.05
800	4.00–7.00	6.00–12.25	10.50–20.00
795	4.00–7.00	6.00–12.25	10.50–20.00
790	4.00–7.00	6.00–12.25	10.75–20.00
785	4.00–7.00	6.25–12.50	10.75–20.00
780	4.00–7.00	6.25–12.50	10.75–20.25
775	3.75–7.00	6.25–12.50	11.00–20.25
770	3.75–7.00	6.25–12.50	11.00–20.25
765	3.75–7.25	6.50–12.50	11.00–20.25
760	3.75–7.25	6.50–12.75	11.25–20.25
755	3.75–7.25	6.50–12.75	11.25–20.50
750	3.50–7.25	6.50–12.75	11.50–20.50
745	3.50–7.25	6.50–12.75	11.50–20.50
740	3.50–7.25	6.50–12.75	11.75–20.75
735	3.50–7.50	6.50–13.00	11.75–20.75
730	3.50–7.50	6.75–13.00	11.75–21.00
725	3.50–7.50	6.75–13.00	12.00–21.00
720	3.50–7.50	6.75–13.00	12.00–21.25
715	3.50–7.50	6.75–13.00	12.00–21.25
710	3.50–7.75	6.75–13.25	12.25–21.25
705	3.50–7.75	6.75–13.25	12.25–21.50
700	3.50–7.75	6.75–13.25	12.50–21.50
695	3.50–7.75	6.75–13.25	12.50–21.50
690	3.50–7.75	6.75–13.25	12.75–21.50
685	3.50–8.00	7.00–13.25	12.75–21.50
680	3.50–8.00	7.00–13.50	13.00–21.50
676	3.50–8.00	7.00–13.50	13.00–21.50


KH (mm)			
	20S2D00.05	20S2E00.05	20S2F00.05
675	3.00–5.25	5.00–11.00	09.75–19.00
670	3.00–5.25	5.00–11.00	09.75–19.00
665	3.00–5.25	5.00–11.00	09.75–19.00
660	3.00–5.50	5.25–11.25	10.00–19.00
655	3.00–5.50	5.25–11.25	10.00–19.00
650	3.00–5.50	5.25–11.25	10.00–19.00
645	3.00–5.50	5.25–11.25	10.00–18.75
640	3.00–5.50	5.25–11.25	10.00–18.75
635	3.00–5.50	5.25–11.50	10.25–18.75
630	3.00–5.75	5.50–11.50	10.25–18.75
625	3.00–5.75	5.50–11.50	10.25–18.75
620	3.00–5.75	5.50–11.50	10.25–18.75
615	3.00–5.75	5.50–11.50	10.25–18.75
610	3.00–6.00	5.50–11.75	10.50–18.50
605	3.00–6.00	5.50–11.75	10.50–18.50

600	3.00–6.00	5.50–11.75	10.50–18.50
595	3.00–6.00	5.50–11.75	10.50–18.50
590	3.00–6.00	5.50–12.00	10.75–18.25
585	3.00–6.25	5.75–12.00	10.75–18.25
580	3.00–6.25	5.75–12.00	11.00–18.00
575	3.00–6.25	5.75–12.00	11.00–18.00
570	3.00–6.25	5.75–12.25	11.25–17.75
565	3.00–6.25	5.75–12.25	11.25–17.75
560	3.00–6.50	6.00–12.25	11.25–17.50
555	3.00–6.50	6.00–12.50	11.50–17.50
550	3.00–6.50	6.00–12.50	11.50–17.25
545	3.00–6.50	6.00–12.50	11.50–17.25
540	3.00–6.50	6.00–12.75	11.75–17.00
535	3.00–6.75	6.25–12.75	11.75–16.75
530	3.00–6.75	6.25–12.75	11.75–16.75
526	3.00–6.75	6.25–13.00	12.00–16.50

KH (mm)			
	20S2A00.05	20S2B00.05	20S2C00.05
525	2.50–4.00	3.25–7.50	7.25–15.00
520	2.50–4.00	3.50–7.50	7.25–15.00
515	2.50–4.00	3.50–7.50	7.25–14.75
510	2.50–4.00	3.50–7.75	7.50–14.75
505	2.50–4.00	3.50–7.75	7.50–14.75
500	2.50–4.25	3.50–7.75	7.50–14.75
495	2.50–4.25	3.75–7.75	7.50–14.50
490	2.50–4.25	3.75–8.00	7.75–14.50
485	2.50–4.25	3.75–8.00	7.75–14.25
480	2.50–4.25	3.75–8.00	7.75–14.25
475	2.50–4.25	3.75–8.00	7.75–14.00
470	2.50–4.25	4.00–8.25	8.00–14.00
465	2.25–4.25	4.00–8.25	8.00–13.75
460	2.25–4.25	4.00–8.25	8.00–13.75
455	2.25–4.25	4.00–8.50	8.25–13.50
450	2.25–4.25	4.00–8.50	8.25–13.50
445	2.25–4.50	4.25–8.50	8.25–13.25
440	2.25–4.50	4.25–8.50	8.25–13.00
435	2.25–4.50	4.25–8.75	8.50–13.00
430	2.25–4.50	4.25–8.75	8.50–12.75
425	2.25–4.50	4.25–8.75	8.50–12.75
420	2.25–4.50	4.25–8.75	8.50–12.50
415	2.25–4.50	4.25–8.75	8.50–12.50
410	2.25–4.50	4.25–9.00	8.75–12.25
405	2.25–4.50	4.25–9.00	8.75–12.00
400	2.00–4.75	4.25–9.00	8.75–12.00
395	2.00–4.75	4.50–9.00	8.75–11.75
390	2.00–4.75	4.50–9.00	8.75–11.50
385	2.00–4.75	4.50–9.25	9.00–11.50
380	2.00–4.75	4.50–9.25	9.00–11.25
375	2.00–4.75	4.50–9.25	9.00–11.25
370	2.00–4.75	4.50–9.25	9.00–11.00
365	2.00–4.75	4.50–9.25	9.00–11.00
360	2.00–4.75	4.50–9.50	9.25–10.75
355	2.00–4.75	4.50–9.50	9.25–10.50
350	2.00–5.00	4.50–9.50	9.25–10.50

Planning Information


Peg positions for lift mechanism

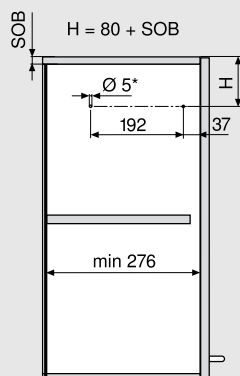

* Drilling depth 5 mm

SOB Top panel thickness

Fixing positions for lift mechanism

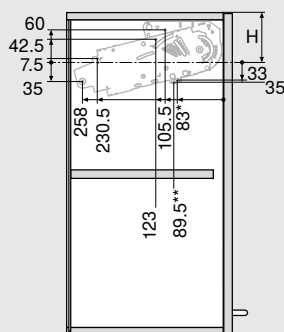


5 x Ø 4 x 35 mm


* Left

** Right

Space requirement

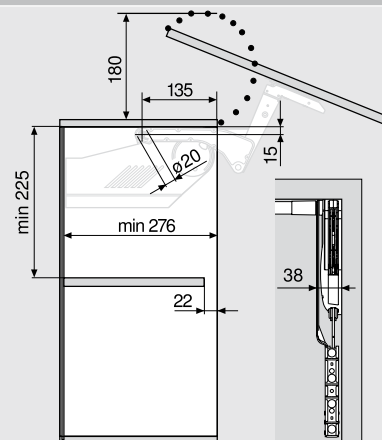

Front assembly

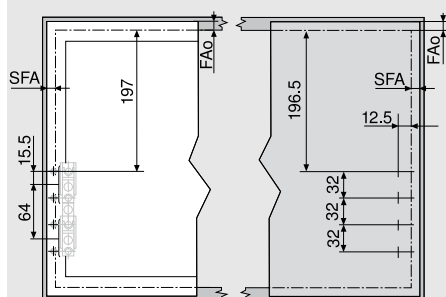

Narrow alu frames



Wooden fronts
and wide alu
frames¹⁾

FAo Upper front overlay

SFA Side front overlay

Wall application: Requires 5 mm min. gap

Planning narrow alu frames

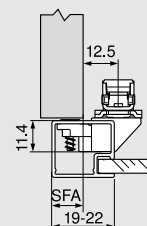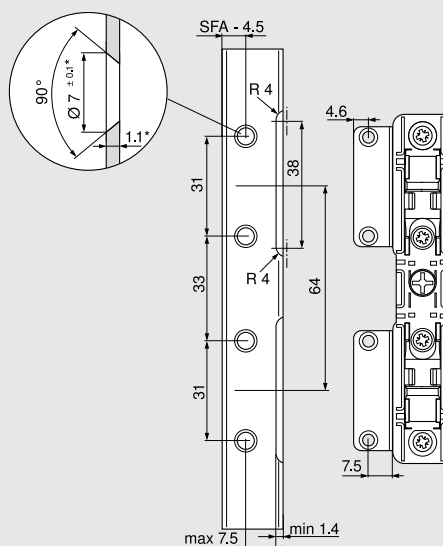

SFA Side front overlay


For frame width 19 mm:
SFA of 11-18 mm possible

* When changing material thickness, adjust the
assembly dimensions accordingly

¹⁾ Use 4 chipboard screws (609.1x00) for wooden fronts. Use 4 self tapping screw, countersunk head (608.085) for wide alu frames.




Front setting

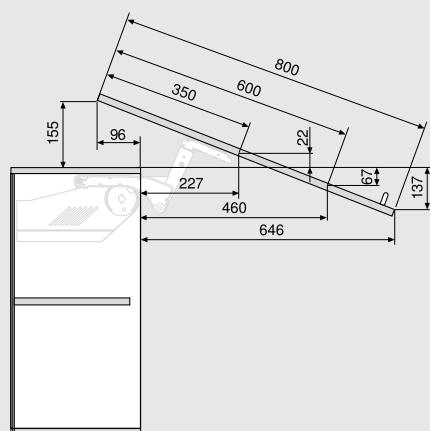


Dimensions depend on tilt adjustment

Cornice and crown moulding clearance

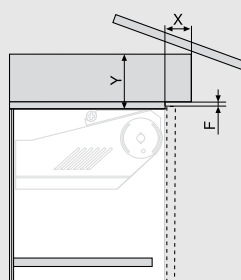


Gap F	X max	Y max
3 mm	35 mm	101 mm
2 mm	31 mm	101 mm
1.5 mm	28 mm	101 mm

Cross stabiliser



[1] KB (KS 16–19mm) - 158 mm
and/or inner width -120 mm

Connecting piece

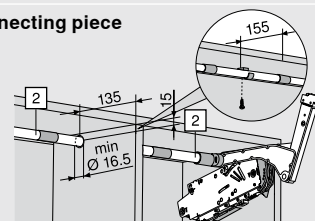


[2] half KB (KS 16–19mm) -158 mm

KB Cabinet width

KS Cabinet thickness

AVENTOS HL

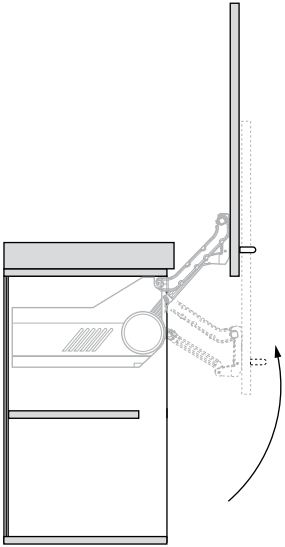


Full access.

Because the AVENTOS HL parallel lift can be completely raised it provides excellent access to the cabinet interior. The different lever arms always ensure the best access to storage items in the cabinet interior - even for mid height cabinets.



Other persuasive advantages

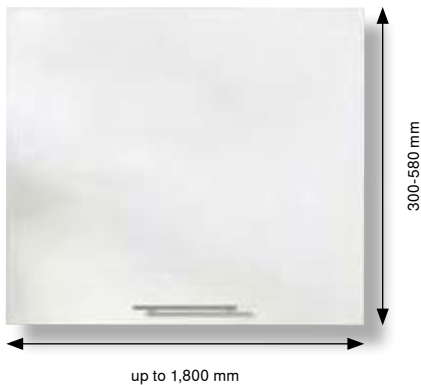

Small programme – wide range of solutions

AVENTOS HL completely covers all common lift system widths and heights, and is also suitable for wide fronts.

AVENTOS HL is suitable for cabinet widths up to 1800 mm and for cabinet heights from 300 to 580 mm.

This small programme comprises just 5 different lift mechanisms and 4 lever arms. This selection enables a variable stop for every front size and weight.

The straightforward programme range simplifies ordering, commissioning and warehousing.



Numerous design options

Because the AVENTOS HL opens parallel to the cabinet, it can be used in wall cabinets or in the upper half of tall units. At mid-height it can be adapted to conceal small appliances (i.e. microwaves).



No protruding parts

There are no protruding parts thanks to the removable lever arm. This makes furniture manufacturing, transport and final assembly both easier and safer.

AVENTOS HL

Assembly in just a few steps

Nearly all steps for AVENTOS HL assembly are tool-free.

We recommend removing and reattaching the fronts later on (again tool-free) for simple, safe and quick cabinet assembly onsite.




1. The lever arm is attached to the lift mechanism without the need for tools.



2. The cross stabiliser is attached to the lift mechanism for optimal side stability.



3. The symmetrical front fixing bracket is attached to the front.

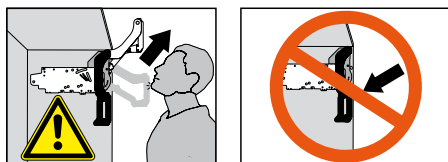

Warning

There is a danger of injury if the lever arm HL springs upward. Remove the lever arm HL rather than pushing it down.

Special warning and safety information must be added for use in North America.



4. The lever arm and the front are connected via the CLIP mechanism.

Quick adjustment, precise adjustment

The front can be adjusted in all 3 dimensions in only a few steps. Therefore the; front height, width and tilt positions can be precisely set. A calibrated scale is used for the fine adjustment of lift mechanism opening and closing forces.

Perfect motion requires a precise setting:



1. Lift mechanisms are set to the respective door weight using an electric screwdriver (Pozidriv®, size 2, length 39 mm).


If the lift system falls when let go, it must be turned to the right.

If the lift system rises when let go, it must be turned to the left.



2. Optimal front adjustment via the 3-dimensional setting.

Order specifications

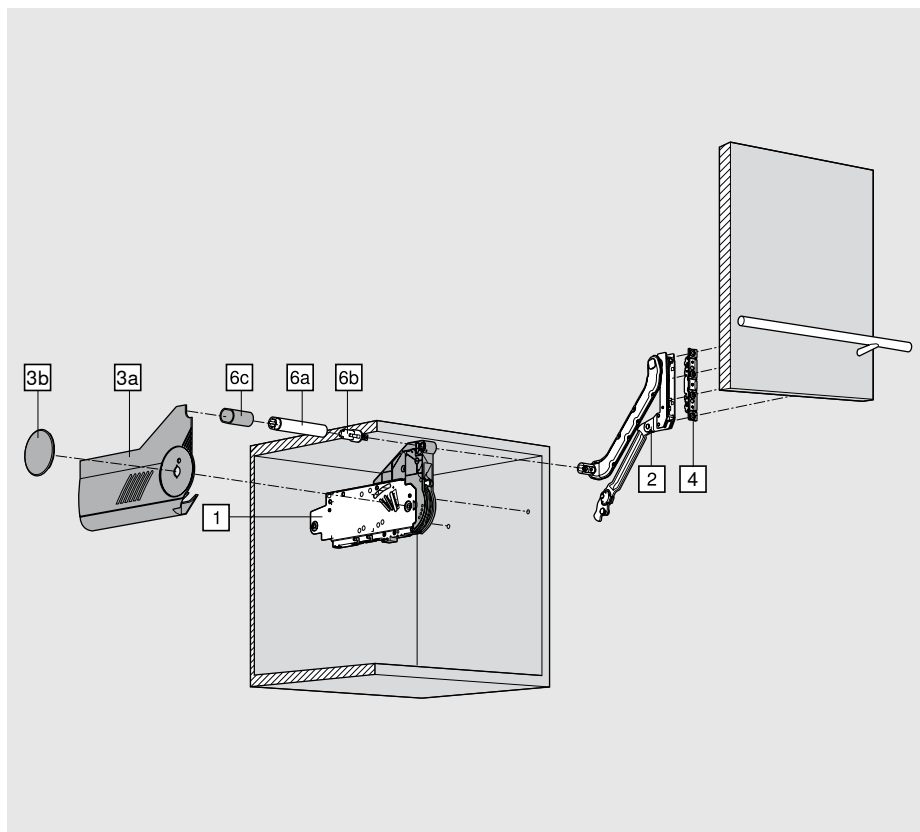

5 types of lift mechanisms are enough to cover a wide range of applications.

In order to select the correct lift mechanism, it is necessary to establish both; the cabinet height and the weight of the front (including the handle)

Cabinet height	Lever arm	Lift mechanism					
		20L2100.05	20L2300.05	20L2500.05	20L2700.05	20L2900.05	
300–349 mm	20L3200.05	1.25–4.25 kg	3.50–7.25 kg	6.50–12.00 kg	11.00–20.00 kg		
350–399 mm	20L3500.05	1.25–2.50 kg	1.75–5.00 kg	4.25–9.00 kg	8.00–14.75 kg	13.50–20.00 kg	
400–550 mm	20L3800.05		1.75–3.50 kg	2.75–6.75 kg	5.75–11.75 kg	10.50–20.00 kg	
450–580 mm	20L3900.05			2.00–5.25 kg	4.25–9.25 kg	8.25–16.50 kg	

A trial application is recommended when you are in a borderline area for the individual lift mechanism.

1	Lift mechanism set	
		20L2100.05
		20L2300.05
		20L2500.05
		20L2700.05
		20L2900.05
	Composed of:	
	2 x symmetrical lift mechanisms	
	10 x chipboard screws, Ø 4 x 35 mm	


2	Lever arm set		
	Nickel plated steel		
	Cabinet height 300-349 mm	left/right	20L3200.05
	Cabinet height 350-399 mm	left/right	20L3500.05
	Cabinet height 400-550 mm	left/right	20L3800.05
	Cabinet height 450-580 mm	left/right	20L3900.05
	Composed of:		
2	2 x lever arm variants		
6b	2 x oval stabiliser adapters		
6c	2 x oval cross stabiliser cover caps		



3	Cover cap set	
	light grey, silk white, nickel plated	
		20L8000.01
	Composed of:	
3a	2 x cover plates left/right	
3b	2 x round cover caps	

4	Front fixing bracket set	
	Nickel plated	
	Wooden fronts and wide alu frames ¹⁾	20S4200
	Narrow alu frames	20S4200A
	Composed of:	
	2 x symmetrical front fixing brackets	

6a	Cross stabiliser rod oval	
	Alu	
	For cutting to size, 1061 mm	20Q1061UA


	Connecting piece for cross stabiliser set	
	Alu, Ø 16 mm, cabinet width 1219 mm and higher	20Q091ZA
	Composed of:	
	1 x connecting piece	
	1 x fixing	
	2 x attachments	
	2 x cover caps	

	Bit PZ cross slot	
	Size 2, length 39 mm	BIT-PZ KS2

¹⁾ Use 4 chipboard screws (609.1x00) for wooden fronts. Use 4 self tapping screw, countersunk head (608.085) for wide alu frames.

Planning Information


Peg positions for lift mechanism

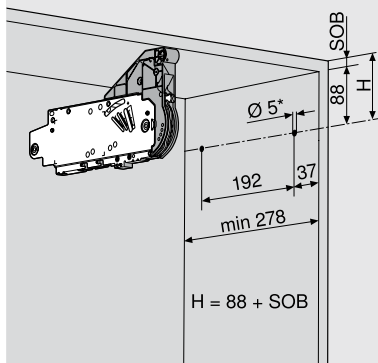

SOB Top panel thickness

* Drilling depth 5 mm

Fixing positions for lift mechanism

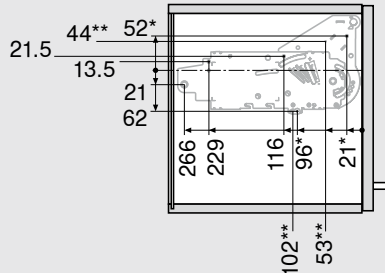


* Left

** Right

5 x Ø 4 x 35 mm


Space requirement

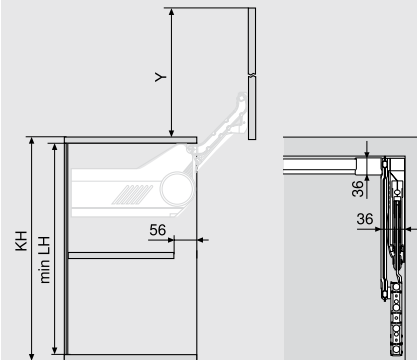


Lever arm	min. LH (mm)*	Y (mm)*
20L3200.05	262	264
20L3500.05	312	352
20L3800.05	362	440
20L3900.05	412	529

* Dimensions apply to lower gap = 0 mm

Front assembly

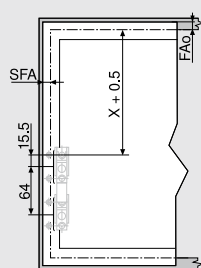


Narrow alu frames

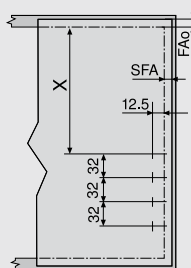

Wooden fronts and wide alu frames¹⁾

Lever arm	X (mm)	FAo Upper front overlay
20L3200.05	153	SFA Side front overlay
20L3500.05	203	Wall application: Requires 5 mm min. gap
20L3800.05	253	
20L3900.05	303	

Planning narrow alu frames

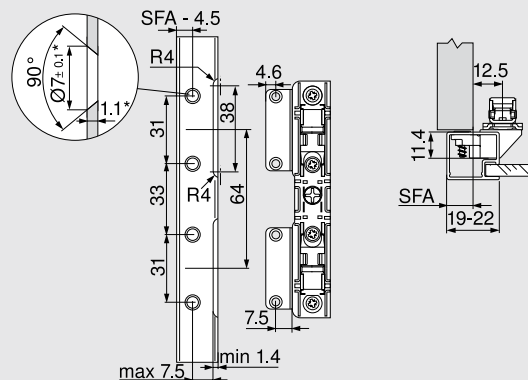

SFA Side front overlay


For frame width 19 mm: SFA of 11-18 mm possible

* When changing material thickness, adjust the assembly dimensions accordingly

¹⁾ Use 4 chipboard screws (609.1x00) for wooden fronts. Use 4 self tapping screw, countersunk head (608.085) for wide alu frames.




Front setting

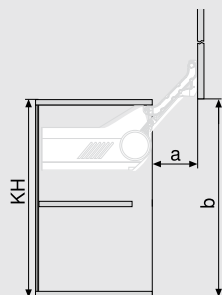

Lever arm	a (mm)*	b (mm)*
20L3200.05	114	257
20L3500.05	146	345
20L3800.05	178	433
20L3900.05	210	522

* Dimensions apply to lower gap = 0 mm


Cornice/Crown moulding clearance

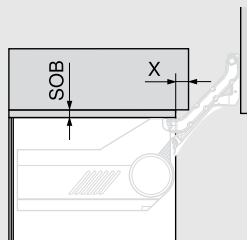

SOB (mm)	X (mm)
16	28
18	30
19	31


SOB Top panel thickness

Cross stabiliser



[1] KB (KS 16-19 mm) -158 mm
and/or inner width -120 mm

Connecting piece

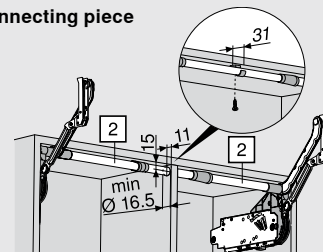


[2] half KB (KS 16-19 mm) -158 mm

KB Cabinet width

KS Cabinet thickness

AVENTOS HK

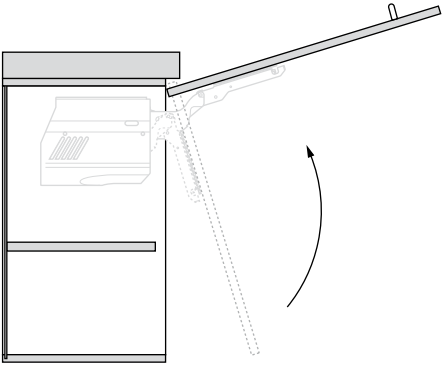


Design freedom for cornice or crown mouldings.

When developing AVENTOS HK, we also took into account cabinets with cornices and crown moulding. This provides more design freedom for kitchen planning.



Other persuasive advantages

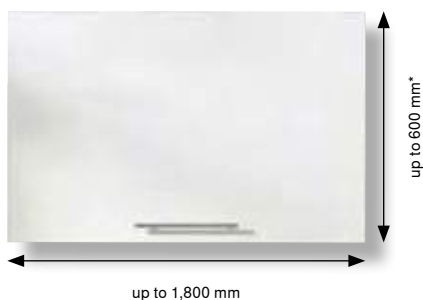

Small programme – wide range of solutions

The AVENTOS HK programme only has 4 lift mechanism types. This completely covers all common lift system widths and heights. The small programme range simplifies ordering, commissioning and warehousing. Because of its symmetrical design, the lift mechanism can be used on both the left and right. Hinges are not necessary.

AVENTOS HK can be used for cabinet widths up to 1800 mm.

No protruding parts

The AVENTOS HK fitting is delivered with a closed lever. This way no parts protrude over the cabinet front edge. The result is safer, more convenient transport - both within and out of the factory.

* For ergonomic reasons, we recommend a maximum cabinet height of 600 mm. However, higher flaps can also be used subject to the power factor limits.

Assembly in just a few steps

AVENTOS HK assembly can be carried out by hand. The front of the wall cabinet can be removed, without the need of tools, thanks to CLIP technology. This makes cabinet assembly easier, faster and safer.




1. Lift mechanism assembly: The symmetrical design enables it to be used on both the left and the right.



2. The symmetrical front fixing bracket is attached to the front.



3. Tool-free front assembly to the lift mechanism using CLIP technology.

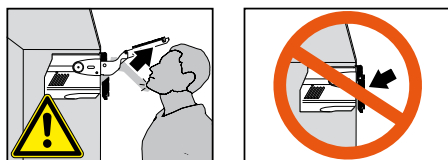

Warning

There is a danger of injury if the lever springs upward. After opening, do not push down on the lever.

Special warning and safety information must be added for use in North America.

Quick adjustment, precise adjustment

The AVENTOS HK front can be adjusted in all 3 dimensions. This enables you to create perfect gap alignment onsite - it's quick, precise and easy.

The power calibration feature of AVENTOS HF is used to make the fine adjustment to the opening and closing power.

The force adjustment can be set exactly to the respective door weight. A calibrated scale facilitates the correct setting.

Perfect motion requires a precise setting:



1. The fine adjustment to the opening and closing forces on the lift mechanism are made using an electric screwdriver (Pozidriv®, size 2, length 39 mm).


If the lift system falls when let go, it must be turned to the right.

If the lift system rises when let go, it must be turned to the left.



2. The front can be manually adjusted in all 3 dimensions.

Order specifications

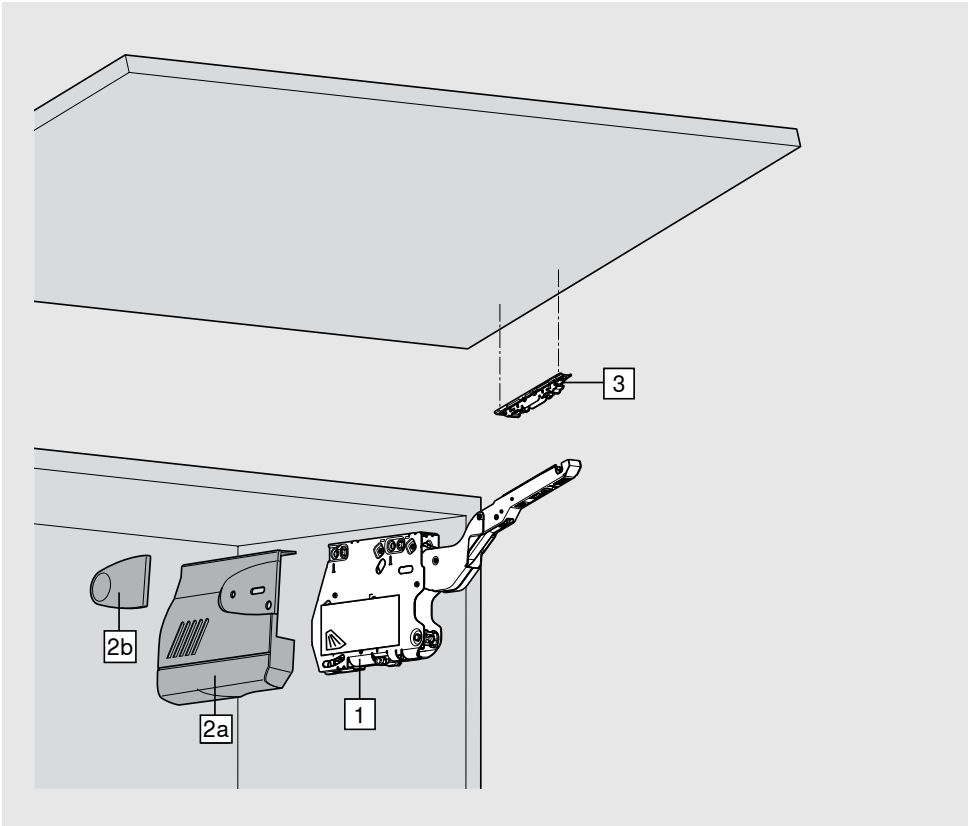


4 types of lift mechanisms are enough to cover a wide range of applications.

By establishing the power factor you can calculate the type and quantity of lift mechanisms. The power factor required depends on the weight of the lower and upper front (incl. double the handle weight) and cabinet height.

The power factor and the door weight can be increased by 50% when a third lift mechanism is used.

i This is how it's done: Power factor = cabinet height (KH) [mm] x front weight including double the handle weight [kg]

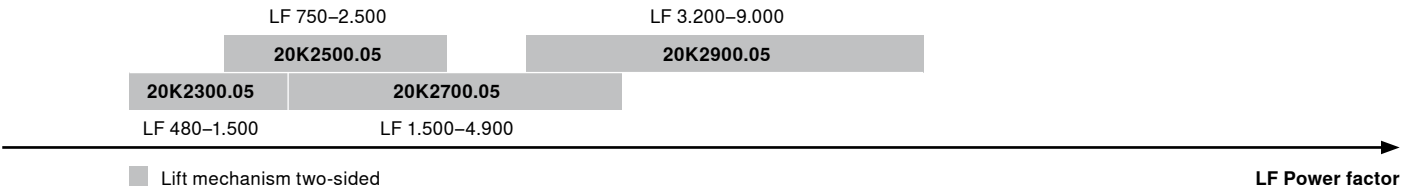


A trial application is recommended when you are in a borderline area for the individual lift mechanism.

1	Lift mechanism set		
	Power factor LF	Opening angle	
	480-1.500	107°	20K2300.05
	750-2.500	107°	20K2500.05
	1.500-4.900	107°	20K2700.05
	3.200-9.000	100°	20K2900.05
	Max. door weight 18 kg for two lift mechanisms		
	Composed of:		
	2 x symmetrical lift mechanisms		
	10 x chipboard screws, Ø 4 x 35 mm		

Note
We recommend a lift mechanism attached to the centre panel for wide cabinets.
The reason for this is to prevent the middle of the front from sagging when open.



2	Cover cap set	
	light grey, silk white, nickel plated	
		20K8000
	Composed of:	
2a	2 x cover plates left/right	
2b	2 x round cover caps	

	Bit PZ cross slot	
	Size 2, length 39 mm	BIT-PZ KS2


3	Front fixing bracket set	
	Nickel plated	
	Wooden fronts and wide alu frames ¹⁾	20S4200
	Narrow alu frames	20S4200A
	Composed of:	
	2 x symmetrical front fixing brackets	

	Opening angle stop	
	Nylon	
	100°	20K7041
	75°	20K7011

¹⁾ Use 4 chipboard screws (609.1x00) for wooden fronts. Use 4 self tapping screw, countersunk head (608.085) for wide alu frames.

Planning Information


Peg positions for lift mechanism

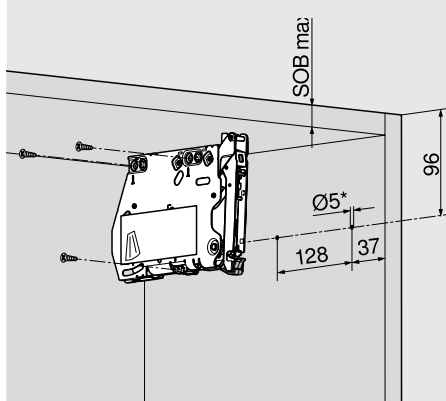

* Drilling depth 5 mm

SOB Top panel thickness

Fixing positions for lift mechanism

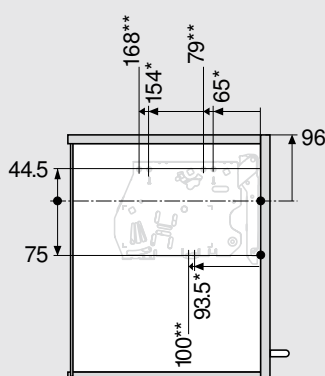


3 x Ø 4 x 35 mm

* Left


** Right

Space requirement

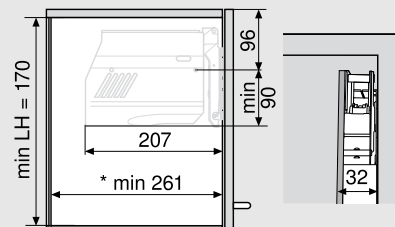

* min. 261 with visible wall hanging bracket

Front assembly

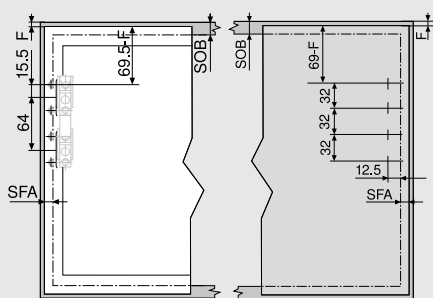

Narrow alu frames



Wooden fronts
and wide alu
frames¹⁾

SOB Top panel thickness

F Gap

SFA Side front overlay

Planning narrow alu frames

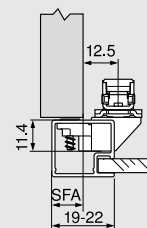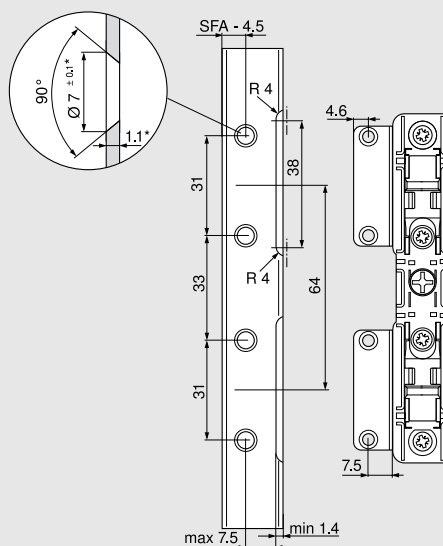

SFA Side front overlay


For frame width 19 mm, a SFA of 11-18 mm is possible

* When changing material thickness, adjust the assembly dimensions accordingly

¹⁾ Use 4 chipboard screws (609.1x00) for wooden fronts. Use 4 self tapping screw, countersunk head (608.085) for wide alu frames.



Cornice and crown moulding clearance

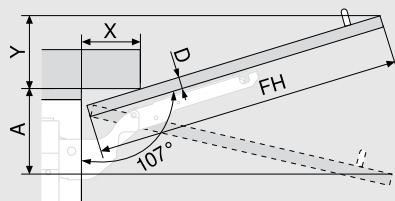

D (mm)	16	19	22	26	28
X (mm)	70	59	49	35	26

Without OEB $Y = FH \times 0.29 - 15 + D$


OEB 100° $Y = FH \times 0.17 - 15 + D$

OEB 75° $A = FH \times 0.26 + 15 - D$

FH Front height


OEB Opening angle stop

Min. gap

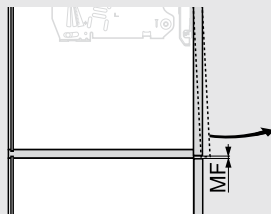

MF Minimum gap for opening (2 mm)

Cabinet assembly

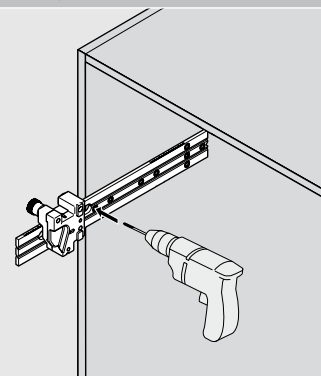


Drilling template

65.1051.01

Can be used for all lift systems

AVENTOS HK-S

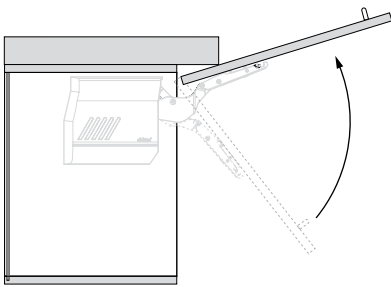


Used in small stay lift applications

AVENTOS HK-S is well-suited for small cabinets, e.g. over the larder unit or refrigerator. Therefore there is a corresponding lift system for any installation situation. If the height of the room allows, you can even use design elements such as cornice or crown moulding.




Other persuasive advantages

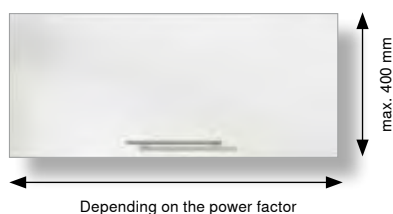

The fitting for small stay lift applications

The performance of the lift mechanism was specially designed for smaller stay lift applications. AVENTOS HK-S is suited for cabinet heights up to a max. of 400 mm.

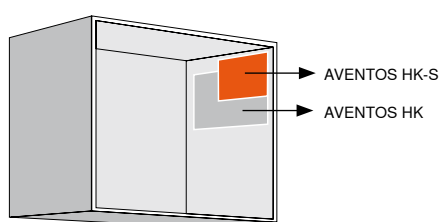

Compact proportions

Due to its minimal size, AVENTOS HK-S fits harmoniously into smaller cabinets. In a direct comparison, this version is even more compact than AVENTOS HK.



No protruding parts

The AVENTOS HK-S fitting is delivered with a closed lever. Thus no protruding parts, providing the best possible safety during internal transport.

AVENTOS HK-S

Assembly in just a few steps

AVENTOS HK-S is quick and easy to install. The front of the wall cabinet can be removed tool-free for cabinet assembly onsite. This is due to our proven CLIP technology.





1. Lift mechanism assembly: It can be installed on the left or the right – thanks to its symmetrical design.



2. The symmetrical front fixing bracket is attached to the front.



3. CLIP technology enables tool-free front assembly to the lift mechanism.

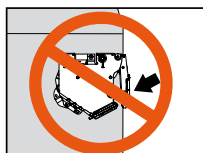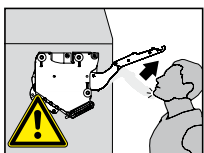

Warning

There is a danger of injury if the lever springs upward. After opening, do not push down on the lever.

Special warning and safety information must be added for use in North America.

Quick adjustment, precise adjustment

The AVENTOS HK-S lift system front can also be adjusted in 3 dimensions: To ensure correct visual effect. The fine adjustment to opening and closing forces is very easy and carried out via the lift mechanism. A calibration feature makes this easy.

Perfect motion requires a precise setting:



1. The fine adjustment of the lift mechanism requires an electric screwdriver (Pozidriv®, size 2, length 39 mm).



If the lift system falls when let go, it must be turned to the right.




If the lift system rises when let go, it must be turned to the left.



2. The front can be manually adjusted in all 3 dimensions.

Order specifications

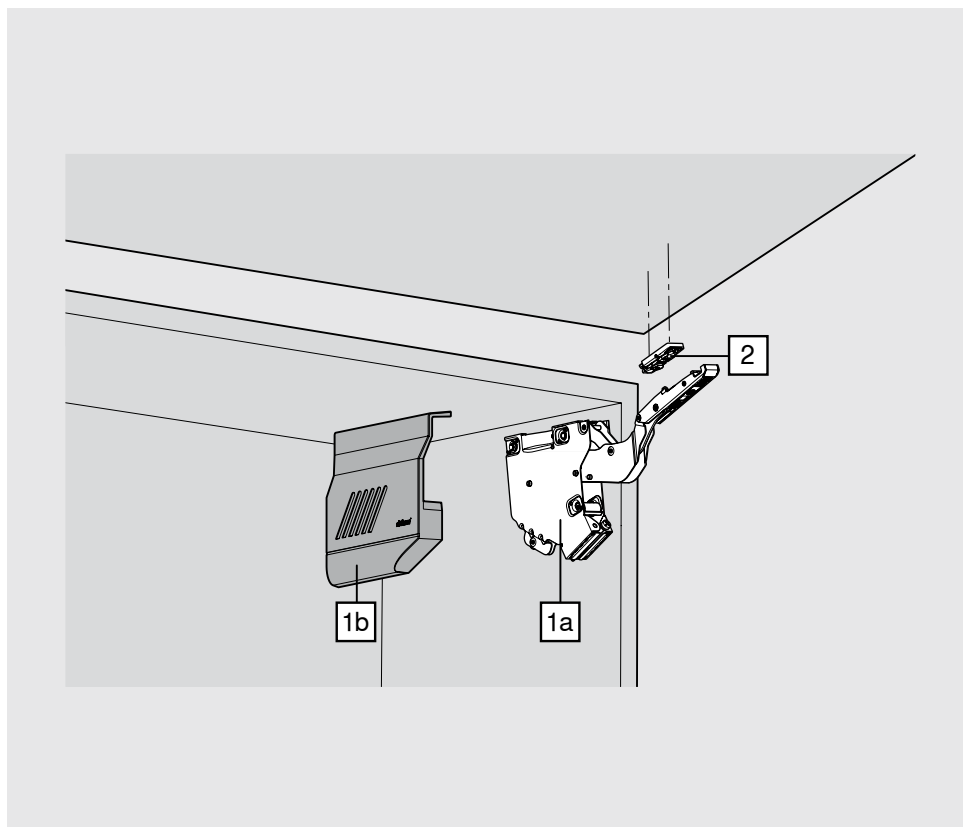

3 types of lift mechanisms are enough to cover a wide range of applications.

By establishing the power factor you can calculate the type and quantity of lift mechanisms. The power factor required depends on the weight of the lower and upper front (incl. double the handle weight) and cabinet height.

The power factor and the door weight can be increased by 50% when a third lift mechanism is used.



This is how it's done: Power factor = cabinet height (KH) [mm] x front weight including double the handle weight[kg]



A trial application is recommended when you are in a borderline area for the individual lift mechanism.


1	Lift mechanism set			
	Power factor LF	Spring	Opening angle	
	220–500	Weak	107°	20K2B00
	400–1.000	Medium	107°	20K2C00
	960–2.215*	Strong	107°	20K2E00
	Composed of:			
1a	2 x symmetrical lift mechanisms			
1b	2 x cover caps left/right			
	10 x chipboard screws, Ø 4 x 35 mm			


* autumn 2010

Note

We recommend a lift mechanism attached to the centre panel for wide cabinets. The reason for this is to prevent the middle of the front from sagging when open.



2	Front fixing bracket set	
	Nickel plated	
	Wooden fronts and wide alu frames ¹⁾	20K4A00
	Narrow alu frames	20K4A00A
	Composed of: 2 x symmetrical front fixing brackets	


	Opening angle stop	
	Nylon	
	100°	20K7A41
	75°	20K7A11

	Bit PZ cross slot	
	Size 2, length 39 mm	BIT-PZ KS2

¹⁾ Use 2 chipboard screws (609.1x00) for wooden fronts. Use 2 self tapping screw, countersunk head (608.085) for wide alu frames.


Planning Information

Peg positions for lift mechanism

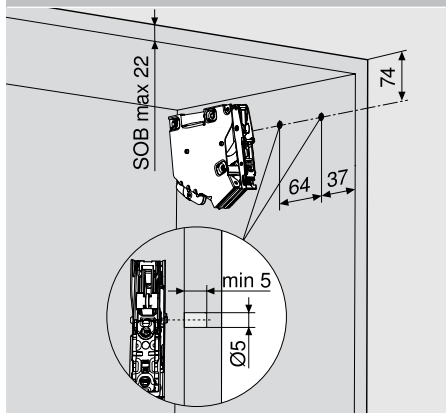


SOB Top panel thickness

Fixing positions for lift mechanism

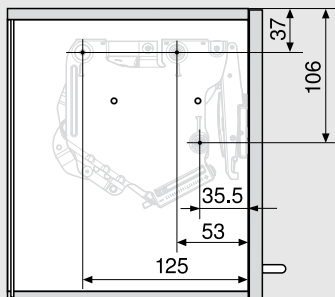


3 x  Ø 4 x 35 mm

Space requirement

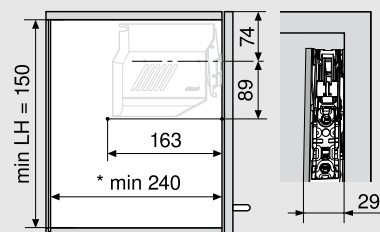


* min. 240 with visible wall hanging bracket

Front assembly

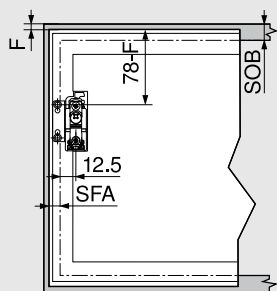


Narrow alu frames

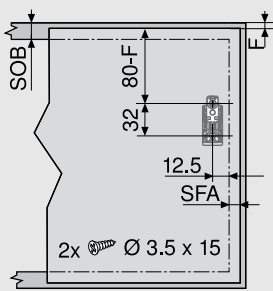

Wooden fronts and wide alu frames¹⁾

F	Gap
SFA	Side front overlay
SOB	Top panel thickness

Planning narrow alu frames

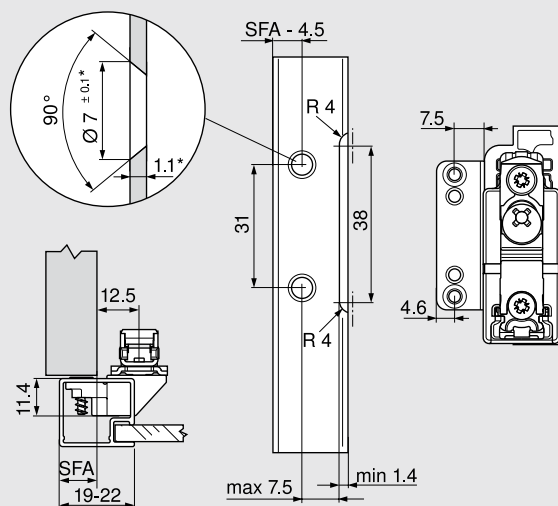


* When changing material thickness, adjust the assembly dimensions accordingly

¹⁾ Use 2 chipboard screws (609.1x00) for wooden fronts. Use 2 self tapping screw, countersunk head (608.085) for wide alu frames.




Cornice and crown moulding clearance

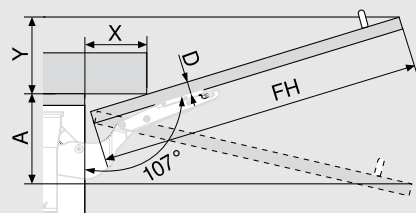

D (mm)	16	19	22	26
X (mm)	70	59	49	35


Without OEB	$Y = FH \times 0.29 - 15 + D$
OEB 100°	$Y = FH \times 0.17 - 15 + D$
OEB 75°	$A = FH \times 0.26 + 15 - D$
OEB Opening angle stop	

Min. gap

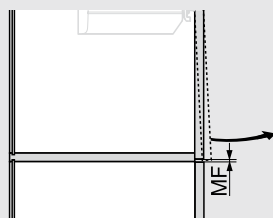

MF Min. gap top and bottom (2 mm)

Cabinet assembly

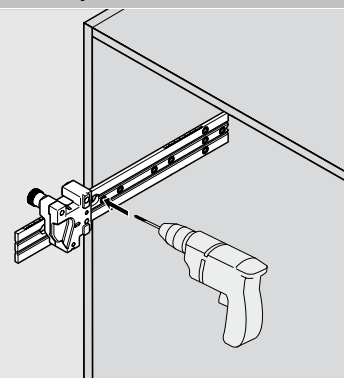

Drilling template 65.1051.01

Can be used for all lift systems

Perfecting motion



Our understanding of perfect motion

Blum turns the opening and closing of furniture into an experience that significantly increases the comfort of motion in the kitchen. Several thousand employees are continually working worldwide implementing our concept of perfect motion. Within this process, we place the needs of the kitchen user as the focus of our actions. We are only satisfied when the kitchen user is satisfied. All of our partners who participate in the furniture making process profit from this focus.

For over 50 years, quality has been the highest principle for the development and manufacture of our products. Our fittings systems shout “high quality” with their well-thought-out function, recognised design and high durability. They are designed to inspire and trigger fascination for perfect motion. We also set the bar very high for the services we offer. They must provide the best possible support to our partners.

So that we can target our efforts at all levels, we are in a constant dialogue with kitchen users and regularly exchange information with furniture manufacturers, joiners and distributors.





Blum Fittings

For the lifetime of your kitchen



Marketed by:

Kitch (M) Sdn Bhd (566346-V)
85, Jln Klang Lama, Batu 3, K.L.
Tel: 03 7982 8233

Penang Showroom:

170, Jalan Kelawai. 10250 Penang
Tel: 04 226 3232 Fax: 04 226 3636

Kuala Lumpur Showroom:

G16 & G17, Bangunan Perdagangan d7
No : 800, Jalan Sentul
51000 Kuala Lumpur
Tel : 018-599 8233
Email: info@kitch.com.my
www.kitch.com.my

