

REVEGO

Pocket systems for new space concepts

Ordering and planning information

www.blum.com



GERMAN DESIGN AWARD WINNER 2022

reddot winner 2022

DESIGN AWARD 2022

More and more people are merging their kitchen, dining, living and working space. This trend places high demands on modern living concepts. Pocket systems make it possible to quickly, easily and intuitively open up entire spaces when needed, and close them off again when not in use. This gives you completely new design possibilities for a wide range of applications.

Blum's new product category is the solution for optimum space utilisation: REVEGO pocket systems is a unique slide-in door system with sophisticated technology integrated into its own narrow cabinet — the pocket.



Contents

10 Overview of product range

12 Planning approach and product selection

14 REVEGO uno, single door

24 REVEGO uno + uno
Two single doors combined

34 REVEGO duo, double door

46 REVEGO uno + duo,
single door and double door combined

64 REVEGO duo + duo,
two double doors combined

76 Calculations and assembly of the profiles

81 EXPANDO T – for thin fronts

82 Assembly devices

83 Testing and inspection regulations



Efficient manufacturing

REVEGO comes with all essential components thanks to the unique pocket construction with fully integrated fittings. You can easily pre-assemble pocket systems in your workshop or premises and transport them to end users in a carefully packaged state. This makes installation on site easier and increases efficiency.

Download on the App Store

Get a life-like experience of REVEGO.
Download the AR application and get started:

www.blum.com/rev3



Rapid on-site installation

Final assembly on site is simplicity itself: set up, align and mount the pockets; install the doors and track; make adjustments to the gap layout – and that's it! The 3-dimensional adjustment options are easily accessible and intuitive to use. And thanks to the integrated service interface, it is really simple to remove the fittings – even from built-in furniture.



Easy planning

Standardised pocket widths of 100 mm for REVEGO uno single door and 150 mm for REVEGO duo double door give you the freedom to design the furniture around the pocket exactly as you wish. Single and double door applications can be individually combined.



The ultimate in convenience

No need for handles thanks to TIP-ON motion technology; users can open cabinet doors with a single touch and slide them away completely into the pocket. To close off the space, the user simply presses the door to release it from the pocket and then presses it again to elegantly conceal the entire area.



REVEGO at a glance

– Fast and easy installation thanks to pre-mounted fittings
– Unique pocket construction with fully integrated technology
– Easy planning thanks to predefined pocket widths
– Enhanced ease and mesmerising motion
– Individual design possibilities through the combination of REVEGO uno (1) and REVEGO duo (2)
– Different nominal lengths allow you to adapt applications to the installation situation
– Smooth opening and closing without a handle thanks to integrated TIP-ON motion technology
– Can be designed with or without plinth option or as a worktop-mounted cabinet
– Precise and easily accessible 3-dimensional adjustment options
– Full overlay fronts completely conceal the pocket when closed for a perfect gap layout
– Pocket systems can be used in all living areas
– Suitable for systems to conceal runs of cabinets or walk-in solutions such as dressing rooms or pantries, etc.
– Fittings can be easily removed (even from built-in furniture) thanks to an integrated service interface



Use REVEGO uno single doors on their own, or combine them with REVEGO duo double doors as desired.
The full overlay fronts with a height of up to 2980 mm conceal the pocket completely when closed.



It is easy to implement solutions with internal cabinetry or walk-in solutions such as dressing rooms or pantries.



From a front height of 1130 mm, REVEGO can also be implemented as a worktop-mounted cabinet.

Easy product selection
Our Product Configurator makes it easy for you to choose your products and provides checked parts lists, planning information and CAD data.



www.blum.com/rev1

Our services at a glance

Our services support you every step of the way – from planning and design through to manufacturing and assembly. Take advantage of our tried-and-tested and user-friendly services for your projects with REVEGO.

Concept, planning and product selection

Our Product Configurator will help you select the right products quickly and efficiently. It gives you checked parts lists and planning information, as well as accurate production drawings.

Design

You can export REVEGO projects in various CAD formats for use in your own design software. Together with selected partners, we have also established interfaces for the straightforward transfer of data and completion of your project in your design software.

Ordering

Simply transfer your parts lists from the Product Configurator directly to the web shop of selected distributors. Your REVEGO configurations are easily saved to "My projects", where you can then manage your customer projects.

Manufacturing

Speed up your production process with our Product Configurator. Transfer the planning results to MINIPRESS top with EASYSTICK (using BXF) or directly to your CNC machine. In order to transfer the data to your CNC machine, you'll receive specially prepared CAM data (CAM DXF or complete WOP drilling programs) in the Product Configurator. This makes production processes on the CNC machine even quicker and easier.



Find out more about our digital services:
www.blum.com/pcfg1

Register now free of charge to take advantage of the digital services.
www.blum.com/esvs1

Overview of applications and planning notes

REVEGO uno – single door right or left



Page 14

- Number of fronts: 1
- Installation width: 450 to 900 mm
- Internal width within the application: 350 to 800 mm
- Front width: 442–898 mm

REVEGO uno + uno – two single doors combined



Page 24

- Number of fronts: 2
- Installation width: 900 to 1800 mm
- Internal width within the application: 700 to 1600 mm
- Front width: 442–898 mm

REVEGO duo – double door right or left



Page 34

- Number of fronts: 2
- Installation width: 900 to 1500 mm
- Internal width within the application: 750 to 1350 mm
- Front width: 442–748 mm

Overview of applications and planning notes

REVEGO uno + duo – single door and double door combined



Page 46

- Number of fronts: 3
- Installation width: 1350 to 2400 mm
- Internal width within the application: 1100 to 2150 mm
- Front width: 442–748 mm and 442–898 mm

REVEGO duo + duo – two double doors combined




Page 64

- Number of fronts: 4
- Installation width: 1800 to 3000 mm
- Internal width within the application: 1500 to 2700 mm
- Front width: 442–748 mm

Watch assembly video:

www.blum.com/rev2

Planning approach and product selection

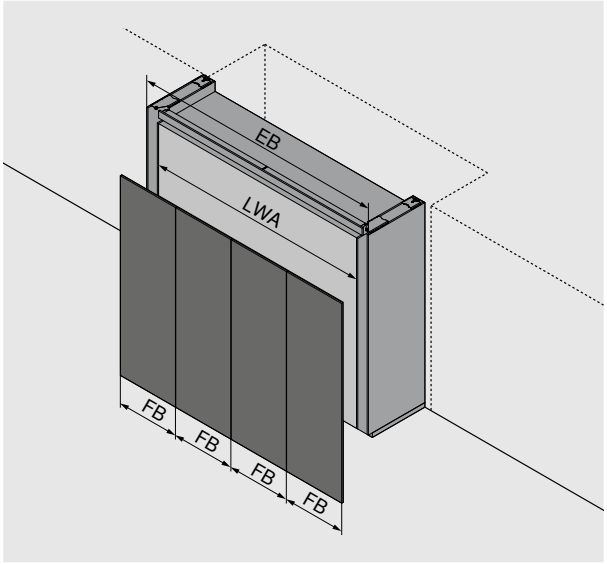

EB	Installation width
LWA	Internal width within the application
FB	Front width

Niche installation

Planning approach from outside moving inward with fixed installation width EB for the entire application. The space available determines the installation width EB and is the decisive factor for the number of fronts, front widths FB and thus for the choice of application. The fittings and cabinet dimensions within the application can be determined in the next step.

1.	2.	3.
What recess width is available for the application?	Determine the possible number of fronts and front widths FB based on the installation width EB.	The pocket dimensions, front protrusion FU and internal dimensions can now be defined on the planning pages of the respective application, and additional fittings can be selected.
The recess width is the installation width EB for the application.	This will determine the type of application.	

Free-standing installation

Planning approach from the inside moving outward with focus on the cabinet width KB and cabinetry within the application. The cabinetry to be concealed is the decisive factor for the potential number of fronts, front widths FB and thus for the choice of application. The installation dimensions and fittings are determined in the next step.

1.	2.	3.
What is the cabinet width KB that needs to be concealed?	Determine the possible number of fronts and front widths FB based on the internal width within the application LWA.	The pocket dimensions and front protrusion FU can now be defined on the planning pages of the respective application, and additional fittings can be selected.
The cabinet width KB is the internal width within the application LWA.	This will determine the type of application and its installation width EB.	

Front width FB and number of fronts


Planning approach with pre-defined front widths FB and number of fronts. The pre-defined front width FB and the number of fronts determine the choice of application and are the decisive factor for the installation width of the entire application. The fittings and cabinet dimensions within the application can be determined in the next step.

1.	2.	3.
What front width FB and what number of fronts were selected?	The type of application and desired front width FB plus the side gaps determine the installation width.	The pocket dimensions, front protrusion FU and internal dimensions can now be defined on the planning pages of the respective application, and additional fittings can be selected.
The number of fronts defines the type of application.		


Planning approach and product selection

Min. distance

REVEGO uno

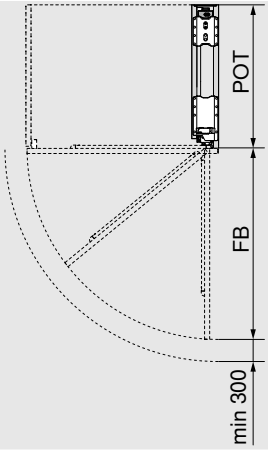

REVEGO duo

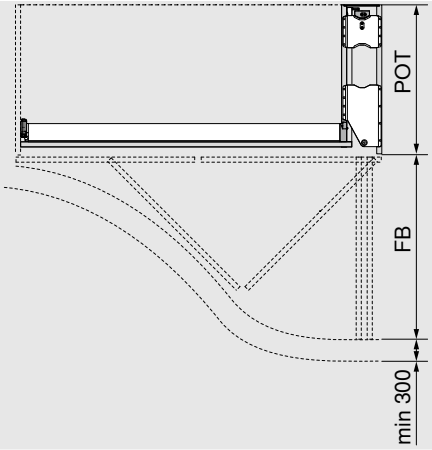


A minimum distance to the nearest element in front of the pocket must be kept free for safety reasons!

FB + min. 300 mm


FB	Front width
POT	Pocket depth

Front protrusion FU

The minimum front protrusion results from the combination of nominal length, front width and the TIP-ON trigger path (AW) when using standard nominal lengths (pocket profile set with TIP-ON). By cutting the profiles to size, the front protrusion (FU) can be customised (min. FU = 7 mm).

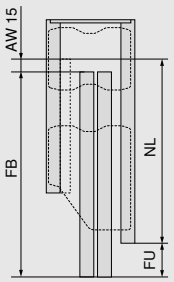

Example

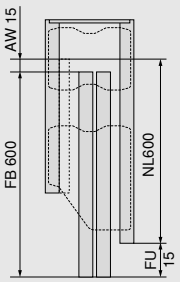


FU = FB + AW - NL

AW	TIP-ON trigger path
FB	Front width
FU	Front protrusion
NL	Nominal length

Depth requirement

The depth requirement is the pocket depth (POT) and is determined by the nominal length + 100 mm, plus the pocket back.

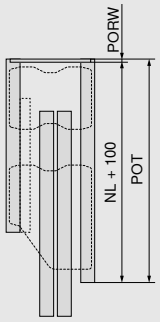

NL	Nominal length
PORW	Pocket back
POT	Pocket depth

Note

- The internal dimensions within the application (internal width | internal height | internal depth) define the maximum space available for internal cabinetry
- Design the widest front first for combined applications
- The manual operating force is less than 70 N according to the durability test
- Drilling patterns, cut-to-size dimensions and detailed parts lists can be found in the Product Configurator

Assembly

- You will need a CNC machine or **MINIPRESS top** with **EASYSTICK** from Blum to machine the wooden parts
- Please note that both horizontal drillings and additional wood machining (e.g. a track cut-out) will be needed
- We recommend using the drilling template for **REVEGO** for the horizontal drillings
- See appendix for calculation and assembly information for cutting profiles to size

For more safety information, please go to:


www.blum.com/rev4

REVEGO uno – single door right or left



Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	450–900	1155–3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 800	up to 2999	from 518
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	100	1142–2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442–898	1130–2980	18–26
Front weight FG	up to 35 kg per front		

Overview

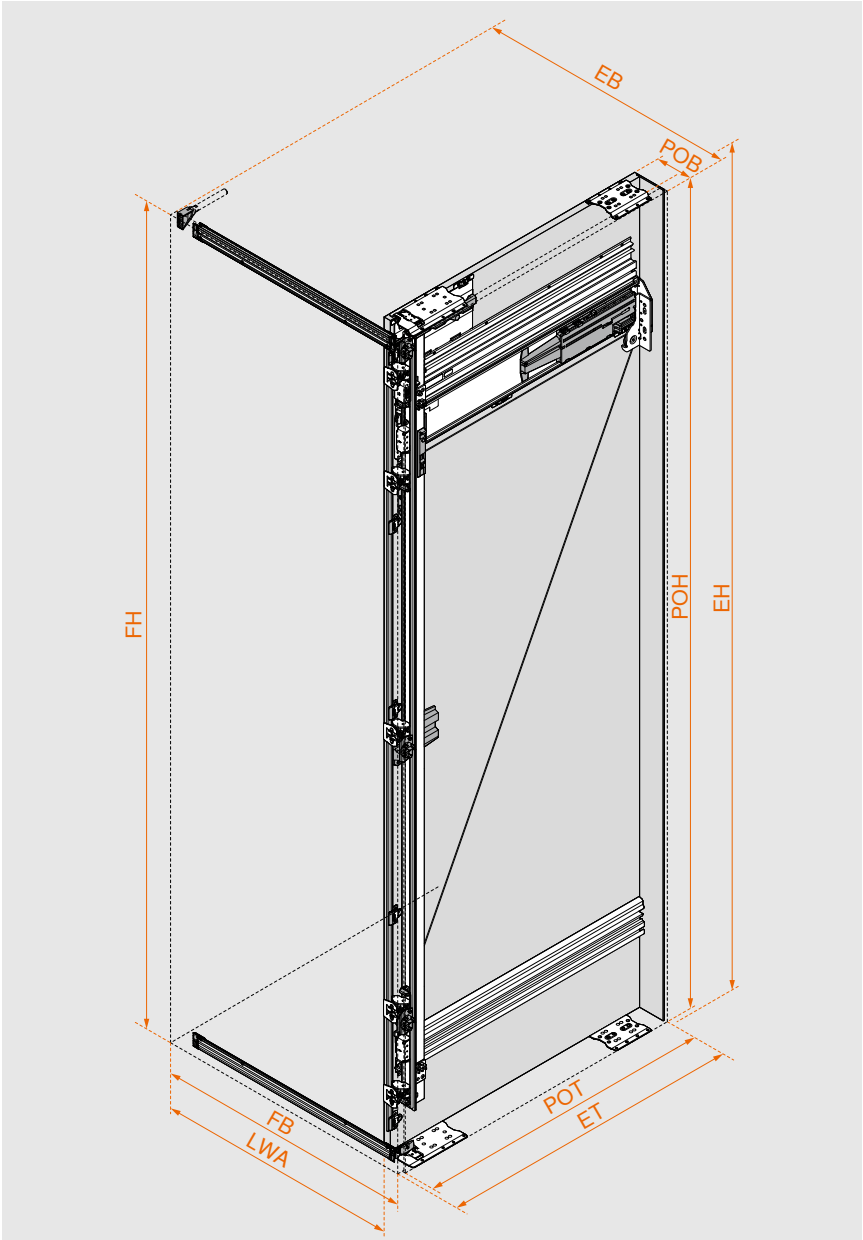

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.


Web code **DQIU7Y**

Product Configurator
www.blum.com/rev8

Assembly and adjustment
www.blum.com/rev5

Component overview


Pocket

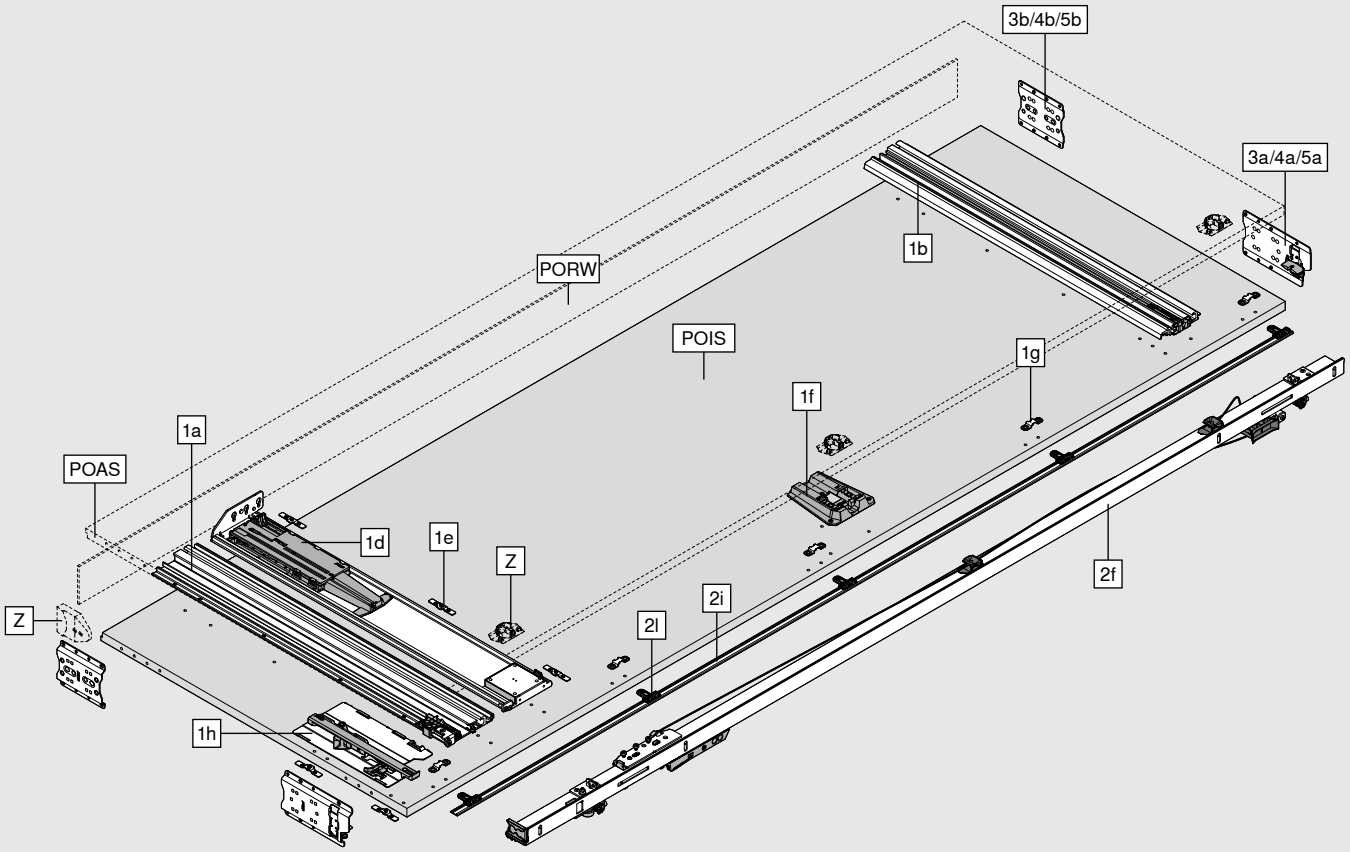

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1d	TIP-ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
1h	BLUMATIC unit
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Adapter for electrical appliance switch-off
	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

Component overview

Front

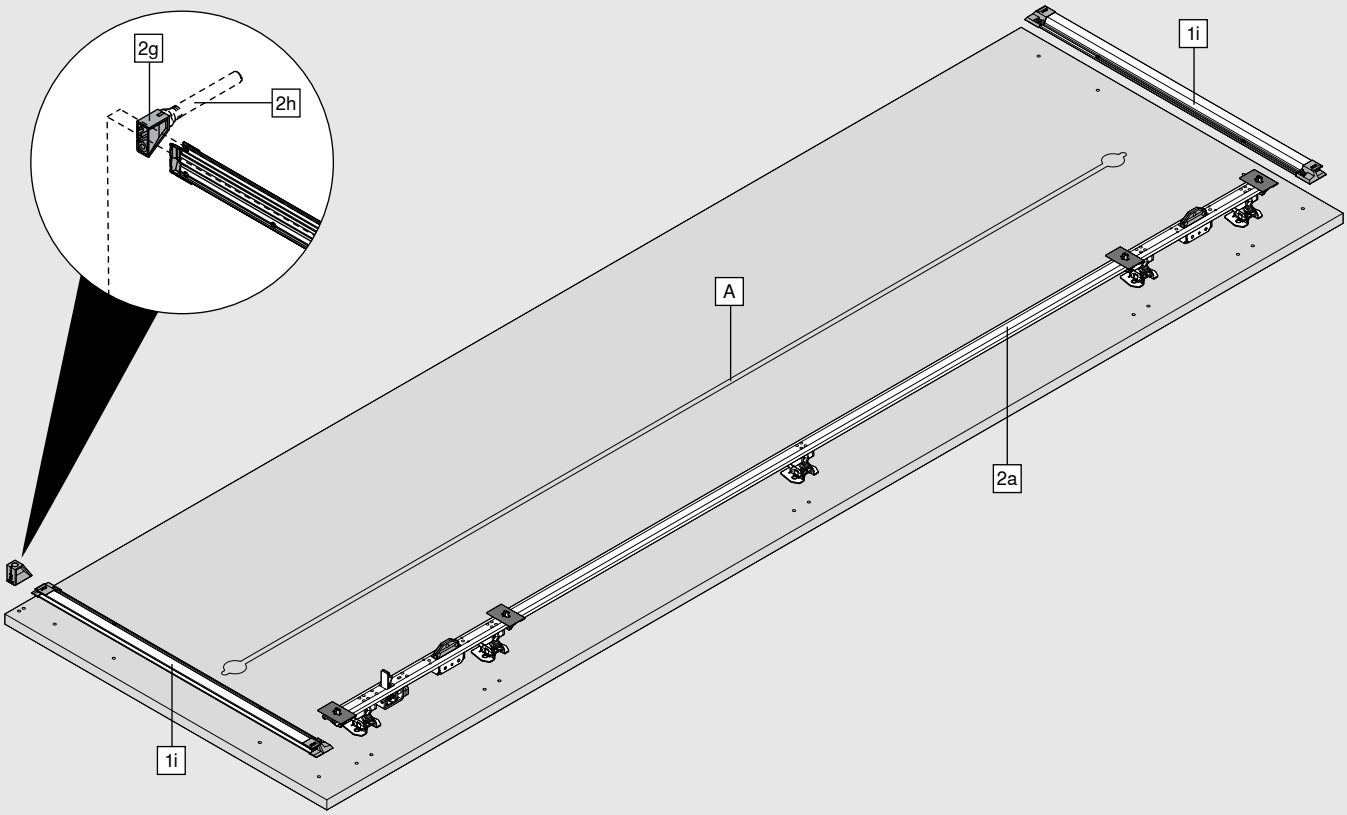

Consisting of:

1i	Door stabiliser
2a	Hinge strip
2g	TIP-ON spacer
2h	TIP-ON incl. catch plate

A We recommend at least one alignment fitting with a maximum installation height of 3 mm.
Alignment fittings with a height of more than 3 mm must not be used in the pocket.

Ordering information

1	Pocket profile set with TIP-ON			
	**Nominal length NL (mm)**	**Min. pocket depth POT* (mm)**	**Left**	**Right**
	450	550	801P450E.L3	801P450E.R3
	500	600	801P500E.L3	801P500E.R3
	600	700	801P600E.L3	801P600E.R3
	700	800	801P700E.L3	801P700E.R3
	800	900	801P800E.L3	801P800E.R3

* Specification without pocket back. A back construction with a thickness of at least 3 mm is required.
Pocket profiles and TIP-ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1d	1 x	TIP-ON unit pocket
1e	5 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip
1h	1 x	BLUMATIC unit
1i	2 x	Door stabiliser: runner profile incl. end cap, black anodised

2	Hinge bracket set		
	**Pocket height (mm)**	**Left**	**Right**
	1142–1356	801T1140.L3	801T1140.R3
	1357–1506	801T1350.L3	801T1350.R3
	1507–1656	801T1500.L3	801T1500.R3
	1657–1806	801T1650.L3	801T1650.R3
	1807–1956	801T1800.L3	801T1800.R3
	1957–2106	801T1950.L3	801T1950.R3
	2107–2256	801T2100.L3	801T2100.R3
	2257–2406	801T2250.L3	801T2250.R3
	2407–2556	801T2400.L3	801T2400.R3
	2557–2706	801T2550.L3	801T2550.R3
	2707–2856	801T2700.L3	801T2700.R3
	2857–2999	801T2850.L3	801T2850.R3

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip, black
2f	1 x	Hinge bracket
2g	1 x	TIP-ON spacer
2h	1 x	TIP-ON incl. catch plate, black
2i	1 x	Pocket cover strip, black anodised
2l	3–5 x	Mountings for pocket cover strip
-	21 x	System screws for 1i, 2a and 2g, 6 x 14.5 mm, black

Ordering information

Pocket connector set				
3	Application with plinth			
	Pocket side thickness (mm)	Colour		
	15–19	Black		801V505B
Pocket connector top + bottom: POVH 10 mm for 0–6 mm gap				
POVH Pocket connector height				
Consisting of:				
3a	2 x	Front pocket connector		
3b	2 x	Rear pocket connector		

Pocket connector set				
4	Application without plinth			
	Pocket side thickness (mm)	Colour	Left	Right
	15–19	Black	801V605B.L1	801V605B.R1
Top pocket connector: POVH 10 mm for 0–6 mm gap				
Bottom pocket connector: POVH 3 mm for gap from 7–13 mm				
POVH Pocket connector height				
Consisting of:				
4a	2 x	Front pocket connector		
4b	2 x	Rear pocket connector		

Pocket connector set				
5	Worktop-mounted cabinet application			
	Pocket side thickness (mm)	Colour	Left	Right
	15–19	Black	801V705B.L3	801V705B.R3
Top pocket connector: POVH 10 mm for 0–6 mm gap				
Bottom pocket connector: POVH 3 mm for gap from 3–6 mm				
POVH Pocket connector height				
Consisting of:				
5a	2 x	Front pocket connector		
5b	2 x	Rear pocket connector		

Ordering information

Z	Accessories

Adapter for electrical appliance switch-off



801ZG0BS

Suitable exclusively for electrical appliance switch-off with magnetic contact (part number 3623011) from Halemeier GmbH (www.halemeier.de)

Liability disclaimer: Blum does not accept any liability for the function of the electrical appliance switch-off

Consisting of:

1 x	Contact switch adapter
1 x	Ring magnet with catch plate
4 x	M4x12 countersunk screws for contact switch adapter
2 x	M4x5 round head screws for contact switch adapter

Scuff guard



For front thicknesses starting from 23 mm — 801ZA00S

For front thicknesses less than 23 mm, the scuff guard can be used as additional front protection

Consisting of:

3 x	External pocket side scuff guard (POAS)

Screws



6 x 14.5 mm system screws, nickel plated — 661.1450.HG



4 x 35 mm chipboard screws, nickel plated — 664.3500

Pocket connector



Rear pocket connector, pocket connector height (POVH) 10 mm — 801V5002

Additional pocket connector for set-back plinth leg

EXPANDO T – for thin fronts




EXPANDO T – single — 70T4532T

EXPANDO T suitable for thin fronts – see page 81

For front thicknesses less than 18 mm, we recommend a trial application

Screws are not included in the scope of delivery

Planning

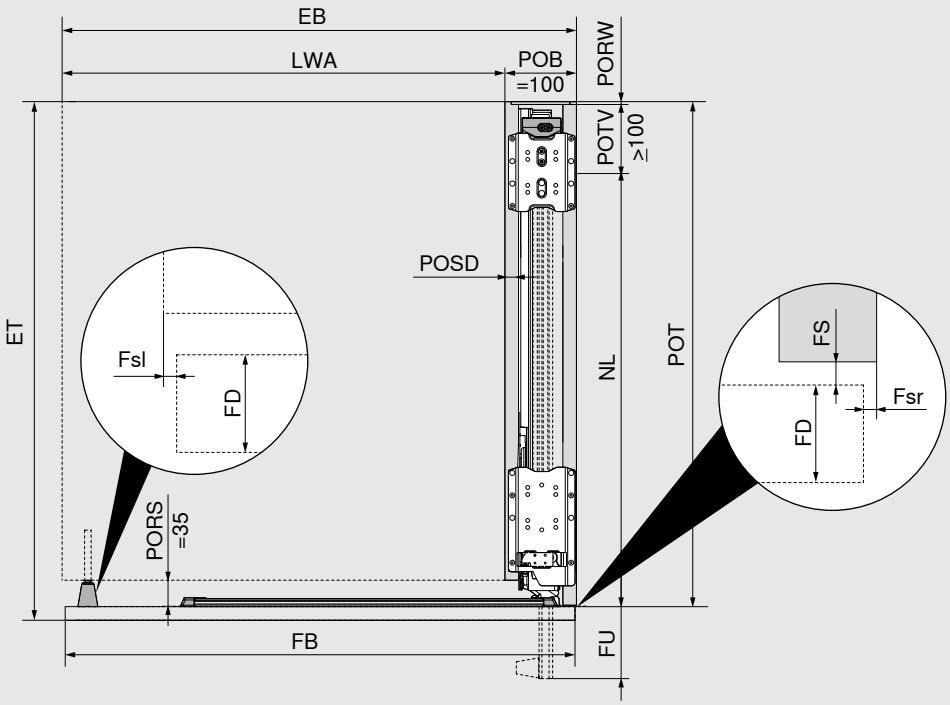

Installation depth/pocket depth
ET = POT + FS (2 mm) + FD
Min. POT = NL + POTV (≥ 100 mm) + PORW (≥ 3 mm)
Installation width/internal width within the application
EB = LWA + POB (100 mm)
FB = EB - Fsl - Fsr Fsl/Fsr = 1.0–4.0 mm
Max. NL = FB + 8 mm
FU = FB - NL + 15 mm (min. FU = 7 mm)
FD = 18–26 mm


- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- A partition side is required for a stand-alone application, or one adjacent to a worktop area.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18 mm (possible depending on material/stability), we recommend a trial application.

EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
NL	Nominal length
POB	Pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss


Planning

Minimum side gap

Pocket to pocket/adjacent cabinet

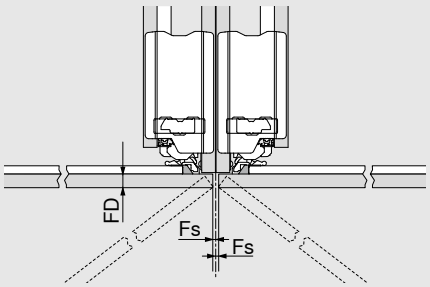

Pocket to wall/decor panel

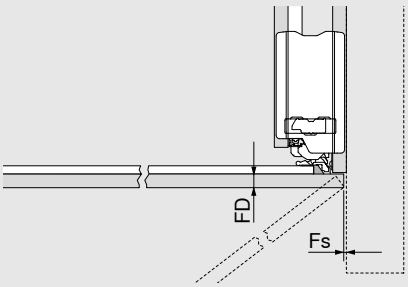


FD (mm)	Min. Fs (mm)
18 –20	2
20.1–23	2.5
23.1–26	3

For free-standing applications,
Fs must be minimum 1 mm

FD	Front thickness
Fs	Side gap

Installation height, front height

Application with plinth

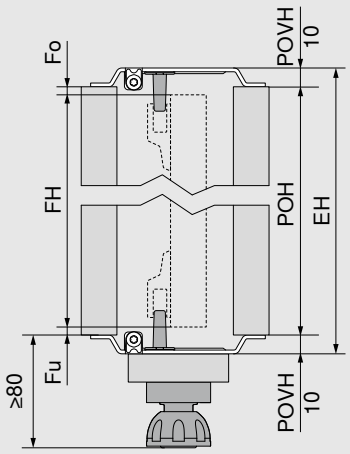

FH = POH - Fo - Fu

EH = POH + POVH top and bottom


POVH 10 mm: gap 0–6 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3 mm,
  for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80 mm

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Application with set-back plinth


Additional rear pocket connector

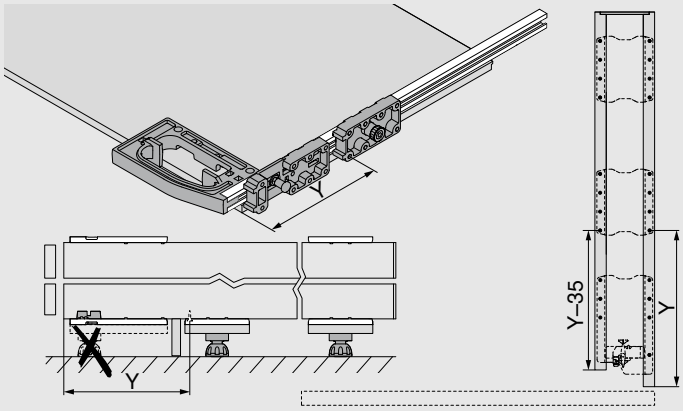

Planning

Installation height, front height

Application without plinth

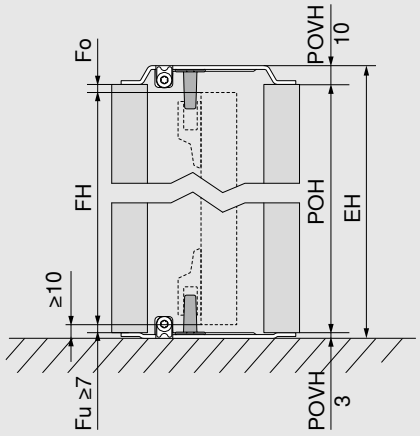

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm


POVH bottom 3 mm: gap from 7–13 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10 mm
- Minimum distance to the next movable element above 3 mm,
  for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Installation height, front height

Worktop-mounted cabinet application

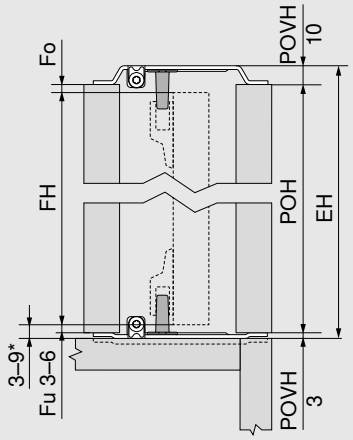

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm

POVH bottom 3 mm: gap from 3–6 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance between front and next element below with flush front/worktop is 3 mm
- Minimum distance between front and next element below with protruding front
  (e.g. protruding worktop) is 6 mm
- The minimum distance to the next movable element above is 3 mm,
  for non-movable elements a front insertion space of 6 mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

* If the distance between the front and the next element below is < 6 mm, the pocket connector must be embedded in the worktop

Planning


Max. front weights for worktop-mounted cabinets in kg per front

Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130–1349	22	20	18	16	15	14	13
1350–1499	23	21	19	18	17	16	15
1500–1649	25	23	21	19	18	17	16
1650–1803	27	25	23	21	20	19	18

Note

- The max. front width when planning a worktop-mounted cabinet is 750 mm
- The max. pocket height when planning a worktop-mounted cabinet is 1806 mm

Internal height and internal depth within the application

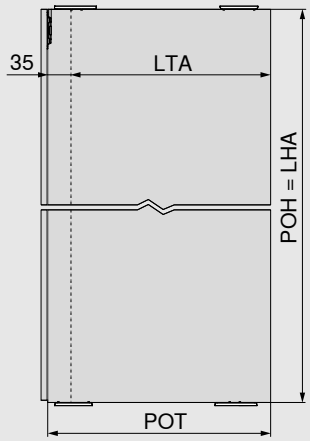

LHA = POH

LTA = POT - 35 mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry.


LHA	Internal height within the application
LTA	Internal depth within the application
POH	Pocket height
POT	Pocket depth

REVEGO uno + uno – single door right and single door left



Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	900–1800	1155–3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 1600	up to 2999	from 518
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	100	1142–2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442–898	1130–2980	18–26
Front weight FG	up to 35 kg per front		

Overview

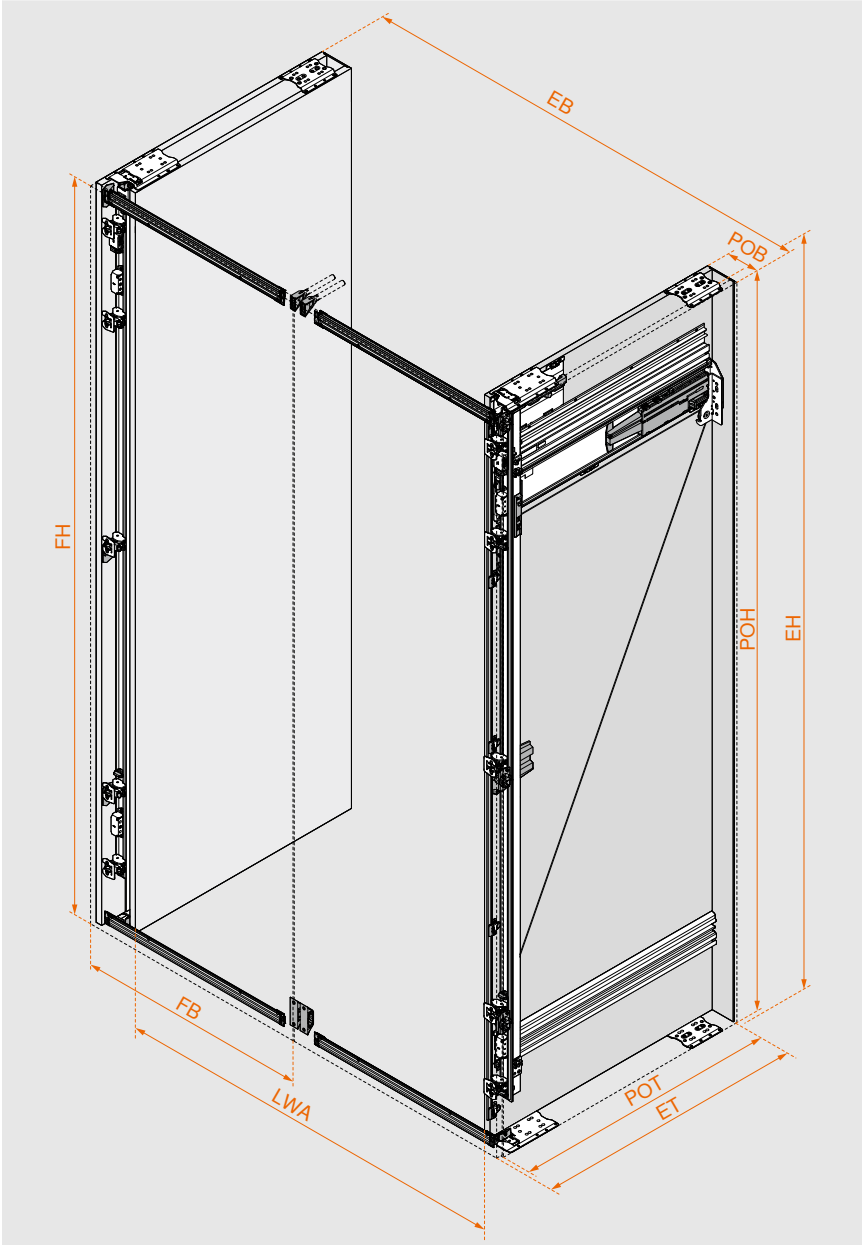

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.


Web code **DQDN1C**

Product Configurator
www.blum.com/rev9

Assembly and adjustment
www.blum.com/rev5

Component overview


Pocket

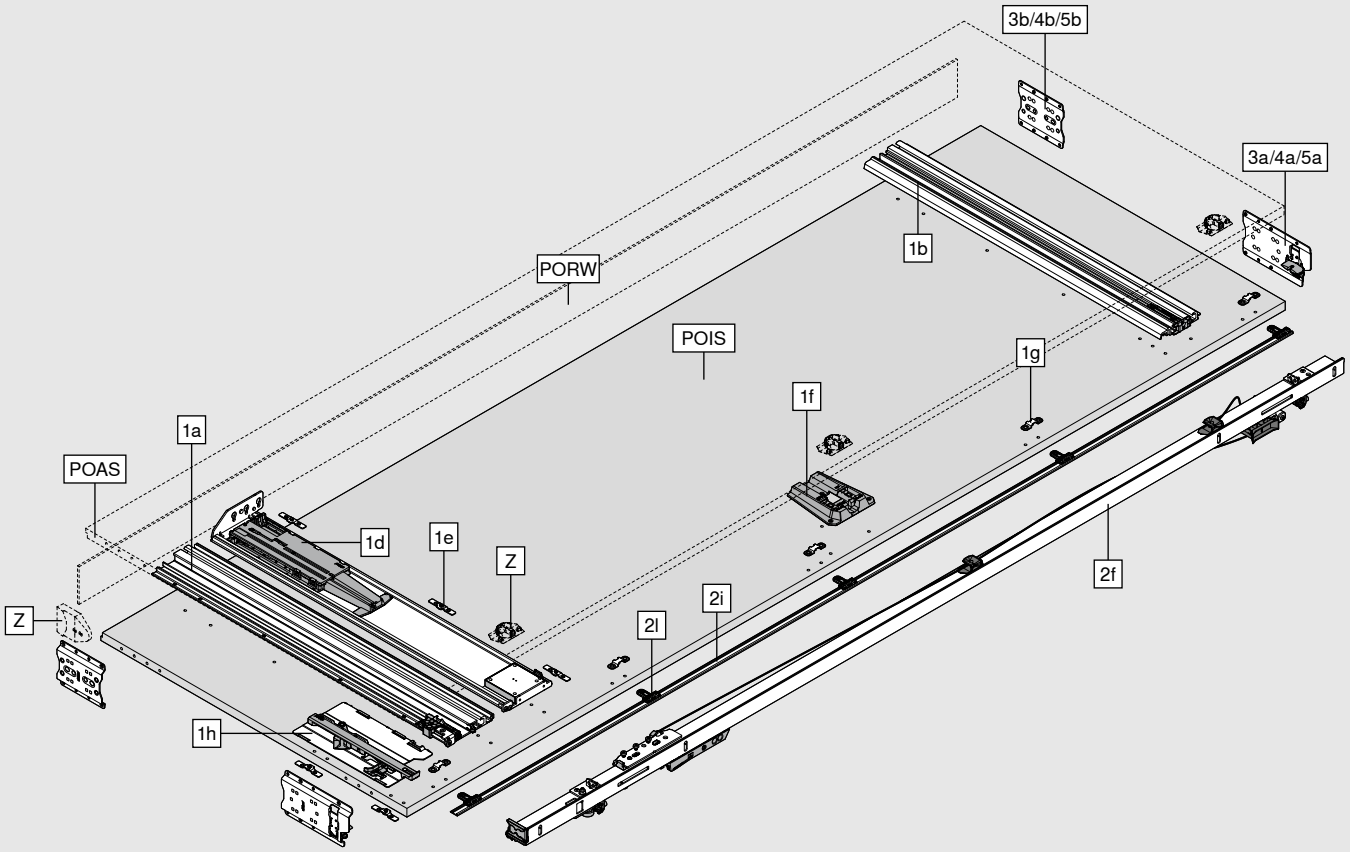

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1d	TIP-ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
1h	BLUMATIC unit
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Adapter for electrical appliance switch-off
	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

Component overview

Front

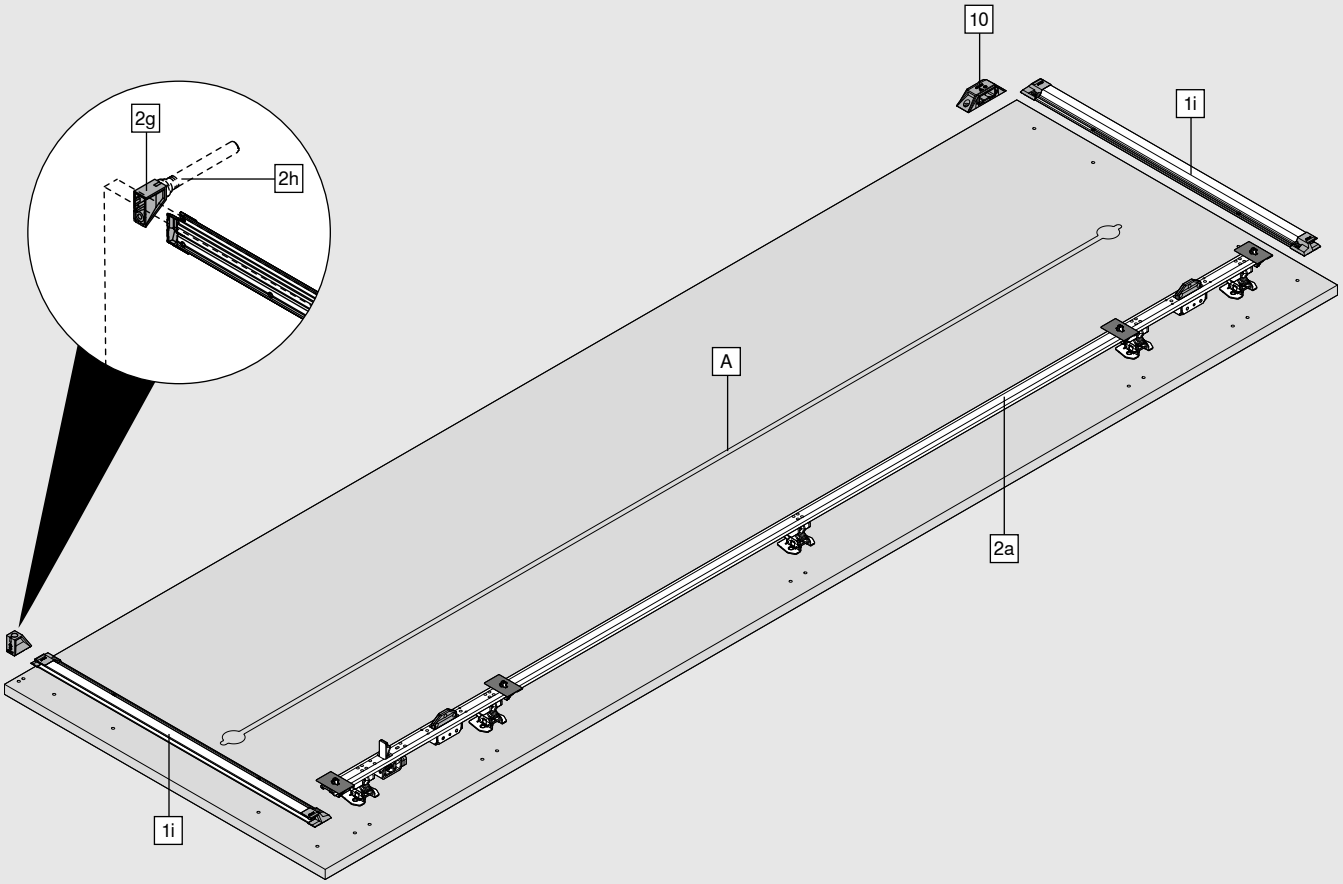

Consisting of:

1i	Door stabiliser
2a	Hinge strip
2g	TIP-ON spacer
2h	TIP-ON incl. catch plate
10	Inter-door support

A We recommend at least one alignment fitting with a maximum installation height of 3 mm.
Alignment fittings with a height of more than 3 mm must not be used in the pocket.

Ordering information

1	Pocket profile set with TIP-ON			
	**Nominal length NL (mm)**	**Min. pocket depth POT* (mm)**	**Left**	**Right**
	450	550	801P450E.L3	801P450E.R3
	500	600	801P500E.L3	801P500E.R3
	600	700	801P600E.L3	801P600E.R3
	700	800	801P700E.L3	801P700E.R3
	800	900	801P800E.L3	801P800E.R3

* Specification without pocket back. A back construction with a thickness of at least 3 mm is required.
Pocket profiles and TIP-ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1d	1 x	TIP-ON unit pocket
1e	5 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip
1h	1 x	BLUMATIC unit
1i	2 x	Door stabiliser: runner profile incl. end cap, black anodised

Order set for each single door, 1x left and 1x right

2	Hinge bracket set		
	**Pocket height (mm)**	**Left**	**Right**
	1142–1356	801T1140.L3	801T1140.R3
	1357–1506	801T1350.L3	801T1350.R3
	1507–1656	801T1500.L3	801T1500.R3
	1657–1806	801T1650.L3	801T1650.R3
	1807–1956	801T1800.L3	801T1800.R3
	1957–2106	801T1950.L3	801T1950.R3
	2107–2256	801T2100.L3	801T2100.R3
	2257–2406	801T2250.L3	801T2250.R3
	2407–2556	801T2400.L3	801T2400.R3
	2557–2706	801T2550.L3	801T2550.R3
	2707–2856	801T2700.L3	801T2700.R3
	2857–2999	801T2850.L3	801T2850.R3

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip, black
2f	1 x	Hinge bracket
2g	1 x	TIP-ON spacer
2h	1 x	TIP-ON incl. catch plate, black
2i	1 x	Pocket cover strip, black anodised
2l	3–5 x	Mountings for pocket cover strip
-	21 x	System screws for 1i, 2a, 2g and 10, 6 x 14.5 mm, black

Order set for each single door, 1x left and 1x right

Ordering information

Pocket connector set				
3	Application with plinth			
	Pocket side thickness (mm)	Colour		
	15–19	Black		801V505B
Pocket connector top + bottom: POVH 10 mm for 0–6 mm gap				
POVH Pocket connector height				
Consisting of:				
3a	2 x	Front pocket connector		
3b	2 x	Rear pocket connector		
Order 1x per single door				

Pocket connector set				
4	Application without plinth			
	Pocket side thickness (mm)	Colour	Left	Right
	15–19	Black	801V605B.L1	801V605B.R1
Top pocket connector: POVH 10 mm for 0–6 mm gap				
Bottom pocket connector: POVH 3 mm for gap from 7–13 mm				
POVH Pocket connector height				
Consisting of:				
4a	2 x	Front pocket connector		
4b	2 x	Rear pocket connector		
Order set for each single door, 1x left and 1x right				

Pocket connector set				
5	Worktop-mounted cabinet application			
	Pocket side thickness (mm)	Colour	Left	Right
	15–19	Black	801V705B.L3	801V705B.R3
Top pocket connector: POVH 10 mm for 0–6 mm gap				
Bottom pocket connector: POVH 3 mm for gap from 3–6 mm				
POVH Pocket connector height				
Consisting of:				
5a	2 x	Front pocket connector		
5b	2 x	Rear pocket connector		
Order set for each single door, 1x left and 1x right				

10	Assembly set for two single doors combined	
	Colour	
	Black	800ZA02S
Consisting of:		
1 x	Inter-door support (right + left)	

Ordering information

Z	Accessories

Adapter for electrical appliance switch-off



801ZG0BS

Suitable exclusively for electrical appliance switch-off with magnetic contact (part number 3623011) from Halemeier GmbH (www.halemeier.de)

Liability disclaimer: Blum does not accept any liability for the function of the electrical appliance switch-off

Consisting of:

1 x	Contact switch adapter
1 x	Ring magnet with catch plate
4 x	M4x12 countersunk screws for contact switch adapter
2 x	M4x5 round head screws for contact switch adapter

Scuff guard



For front thicknesses starting from 23 mm — 801ZA00S

For front thicknesses less than 23 mm, the scuff guard can be used as additional front protection

Consisting of:

3 x	External pocket side scuff guard

Screws



6 x 14.5 mm system screws, nickel plated — 661.1450.HG



4 x 35 mm chipboard screws, nickel plated — 664.3500

Pocket connector



Rear pocket connector, pocket connector height (POVH) 10 mm — 801V5002

Additional pocket connector for set-back plinth leg

EXPANDO T – for thin fronts




EXPANDO T – single — 70T4532T

EXPANDO T suitable for thin fronts – see page 81

For front thicknesses less than 18 mm, we recommend a trial application

Screws are not included in the scope of delivery

Planning

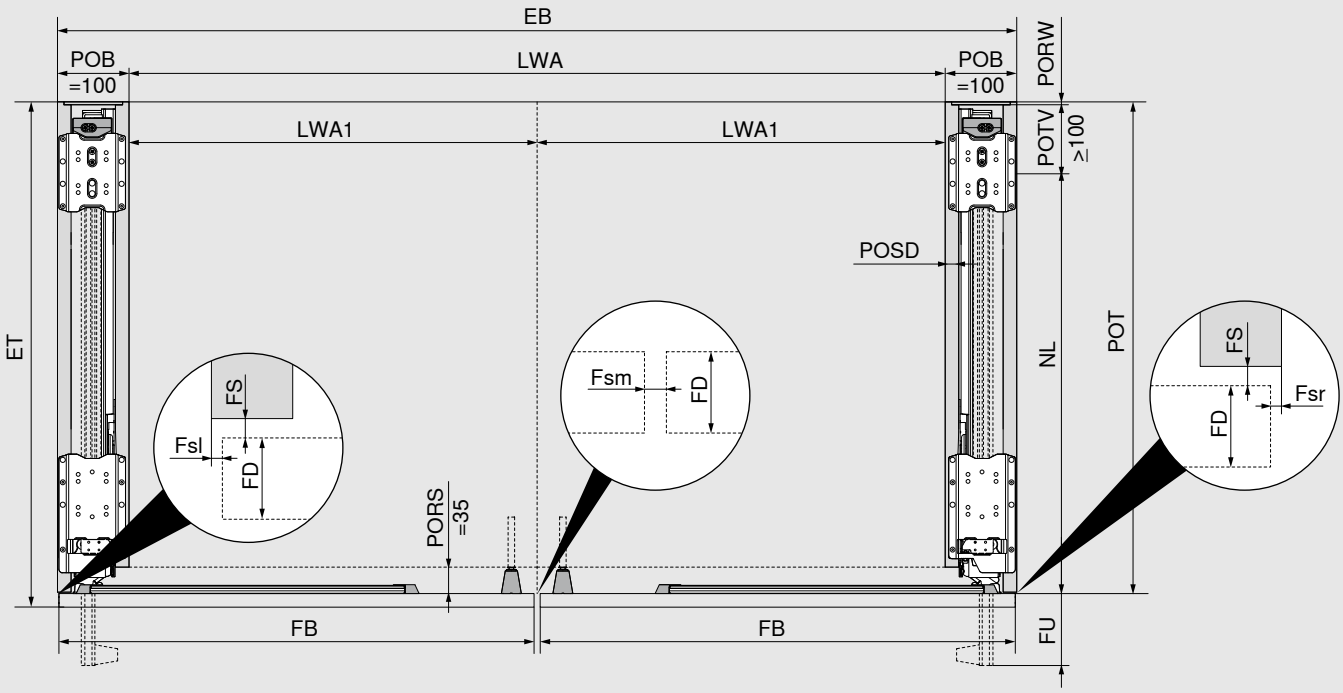

Installation depth/pocket depth
ET = POT + FS (2 mm) + FD
Min. POT = NL + POTV (≥ 100 mm) + PORW (≥ 3 mm)
Installation width/internal width within the application
EB = 2 x LWA1 + 2 x POB (100 + 100 mm)
FB = EB - Fsl - Fsr Fsl/Fsr = 1.0–4.0 mm; Fsm = 2.0–8.0 mm FD = 18–26 mm
Max. NL = FB + 8 mm
FU = FB - NL + 15 mm (min. FU = 7 mm)
FD = 18–26 mm


- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- A partition side is required for a stand-alone application, or one adjacent to a worktop area.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18 mm (possible depending on material/stability), we recommend a trial application.

EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
Fsm	Centre side gap (between the fronts)
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
LWA1	Internal width within the application, single door
NL	Nominal length
POB	Pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss


Planning

Minimum side gap

Pocket to pocket/adjacent cabinet

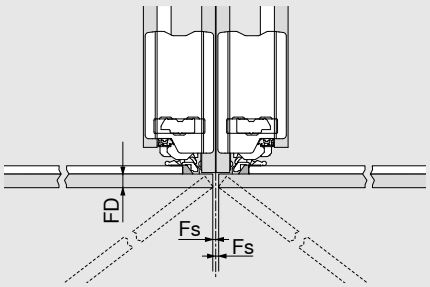

Pocket to wall/decor panel

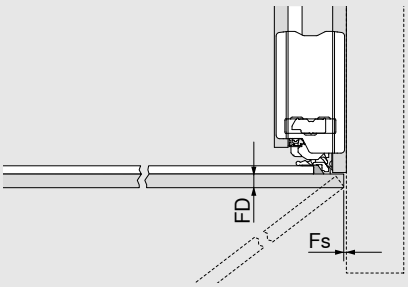


FD (mm)	Min. Fs (mm)
18 –20	2
20.1–23	2.5
23.1–26	3

For free-standing applications,
Fs must be minimum 1 mm

FD	Front thickness
Fs	Side gap

Installation height, front height

Application with plinth

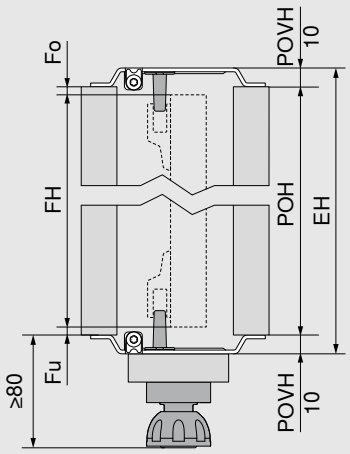

FH = POH - Fo - Fu

EH = POH + POVH top and bottom


POVH 10 mm: gap 0–6 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3 mm,
  for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80 mm

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Application with set-back plinth


Additional rear pocket connector

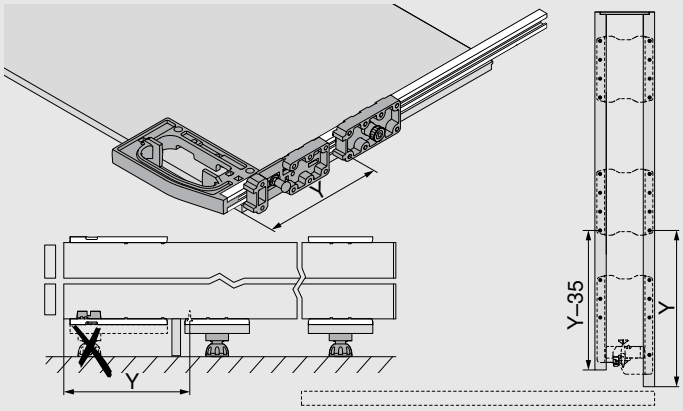

Planning

Installation height, front height

Application without plinth

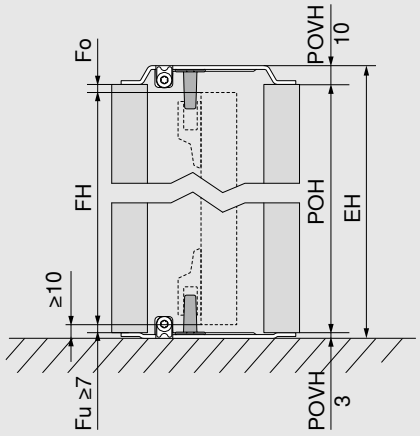

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm


POVH bottom 3 mm: gap from 7–13 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10 mm
- Minimum distance to the next movable element above 3 mm, for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Installation height, front height

Worktop-mounted cabinet application

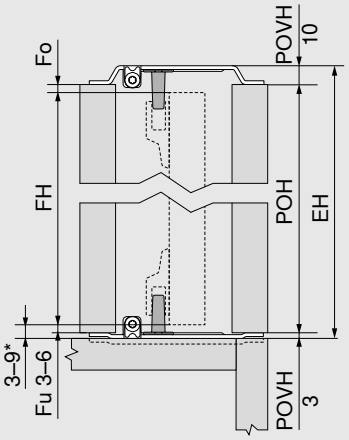

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm

POVH bottom 3 mm: gap from 3–6 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance between front and next element below with flush front/worktop is 3 mm
- Minimum distance between front and next element below with protruding front (e.g. protruding worktop) is 6 mm
- The minimum distance to the next movable element above is 3 mm, for non-movable elements a front insertion space of 6 mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

* If the distance between the front and the next element below is < 6 mm, the pocket connector must be embedded in the worktop

Planning


Max. front weights for worktop-mounted cabinets in kg per front

Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130–1349	22	20	18	16	15	14	13
1350–1499	23	21	19	18	17	16	15
1500–1649	25	23	21	19	18	17	16
1650–1803	27	25	23	21	20	19	18

Note

- The max. front width when planning a worktop-mounted cabinet is 750 mm
- The max. pocket height when planning a worktop-mounted cabinet is 1806 mm

Internal height and internal depth within the application

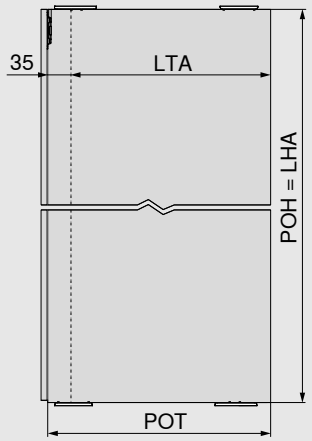


LHA = POH

LTA = POT - 35 mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry.

LHA	Internal height within the application
LTA	Internal depth within the application
POH	Pocket height
POT	Pocket depth

Inter-door support

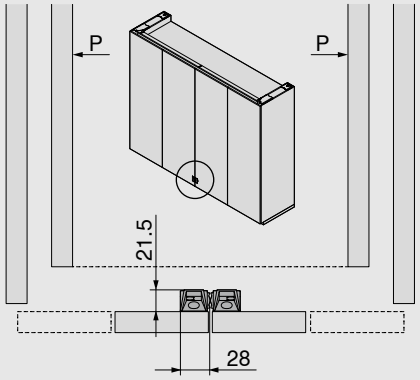

- Supports a single door against a double door, two single doors against each other or two double doors against each other


P	Pocket

REVEGO duo – double door right or left



Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	900–1500	1155–3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 1350	up to 2884	from 483
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	150	1142–2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442–748	1130–2980	18–26
Front weight FG	up to 35 kg per front		

Overview

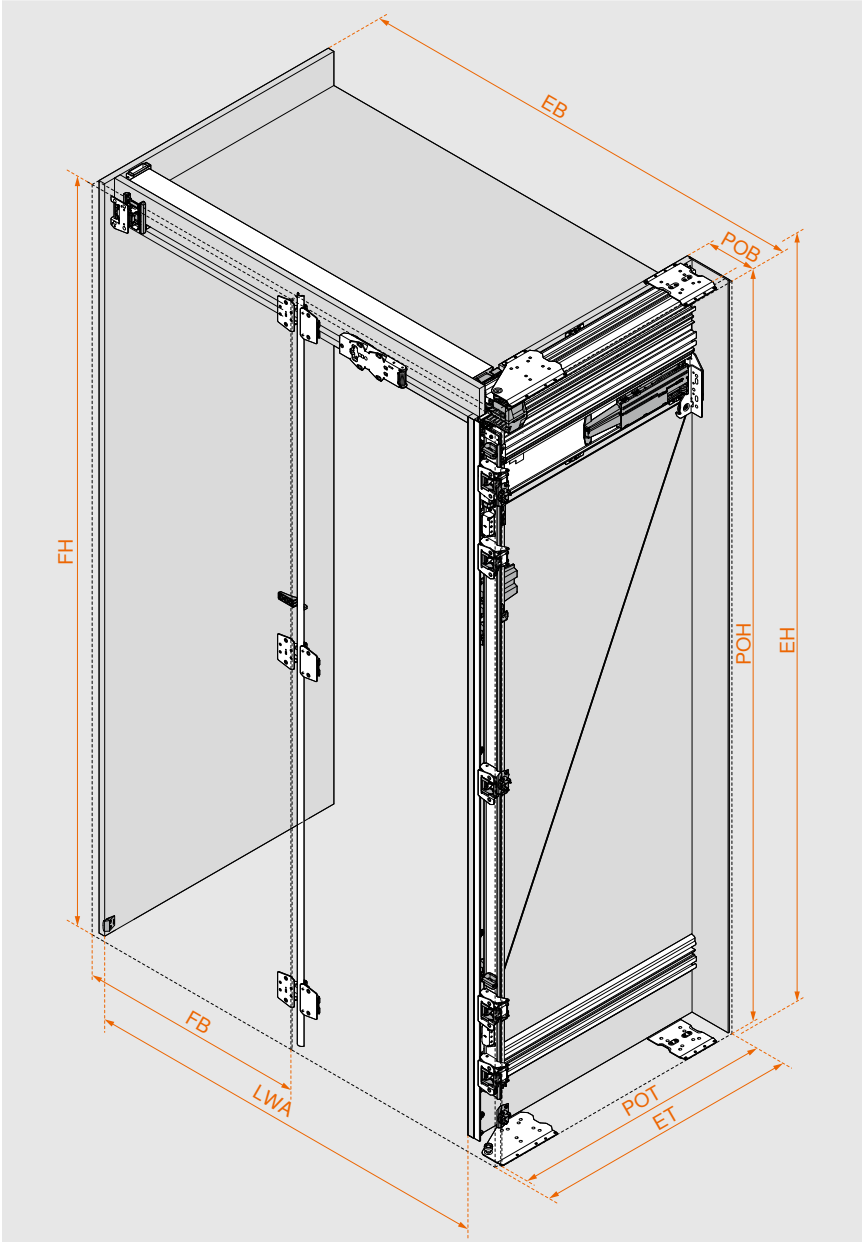

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.


Web code **DQITIM**

Product Configurator
www.blum.com/rev10

Assembly and adjustment
www.blum.com/rev6

Component overview


Pocket

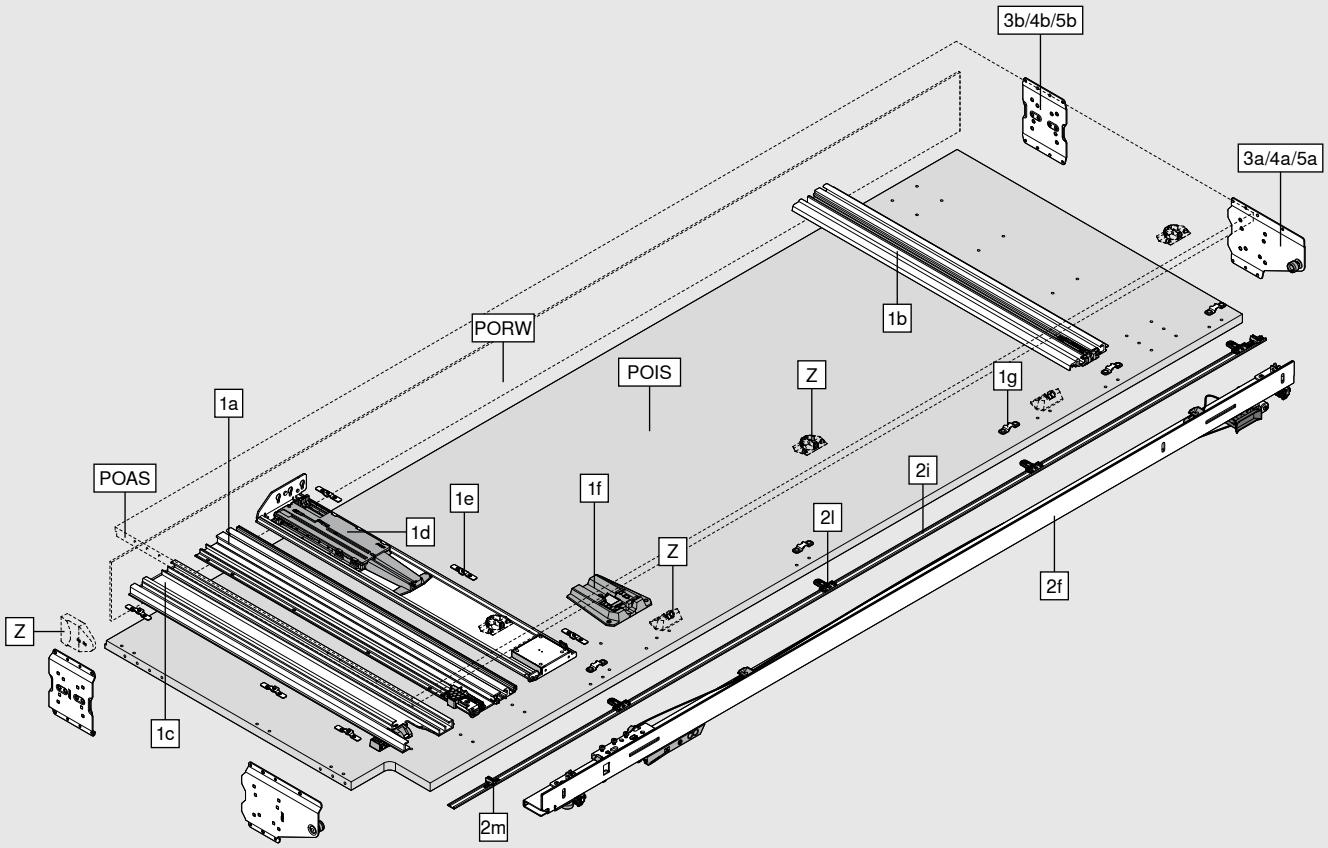

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1c	Roller profile
1d	TIP-ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
2m	Pocket cover strip support
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Adapter for electrical appliance switch-off
	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

Component overview

Front

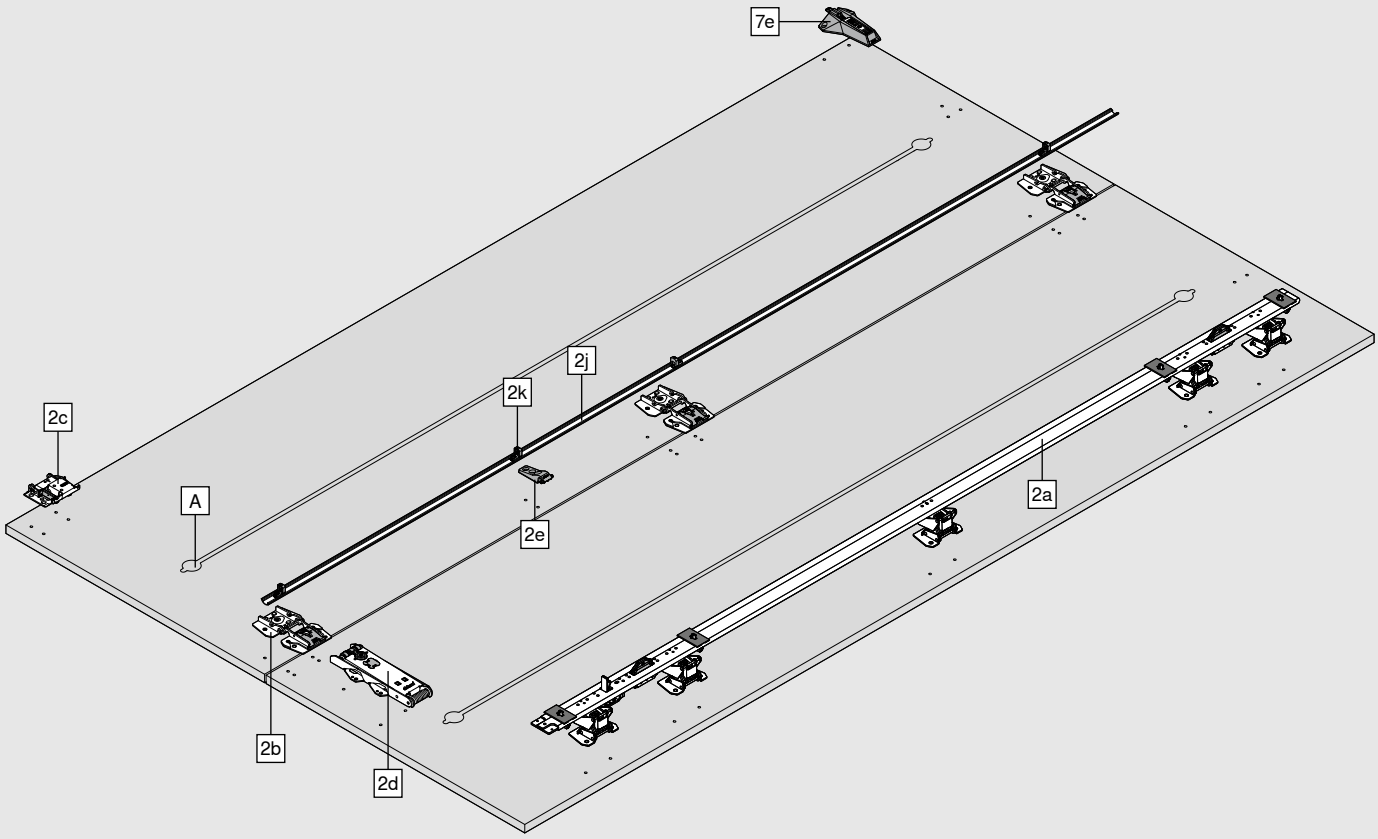


Consisting of:

2a	Hinge strip
2b	Centre hinge
2c	Roller carriage hinge
2d	TIP-ON unit door
2e	Support for door cover strip
2j	Door cover strip
2k	Mounting for door cover strip
7e	Door support for decor panel/cabinet side

A We recommend at least one alignment fitting per front with a maximum installation height of 20 mm.
The space available between the pair of folding fronts is 20 mm.

Component overview

Track

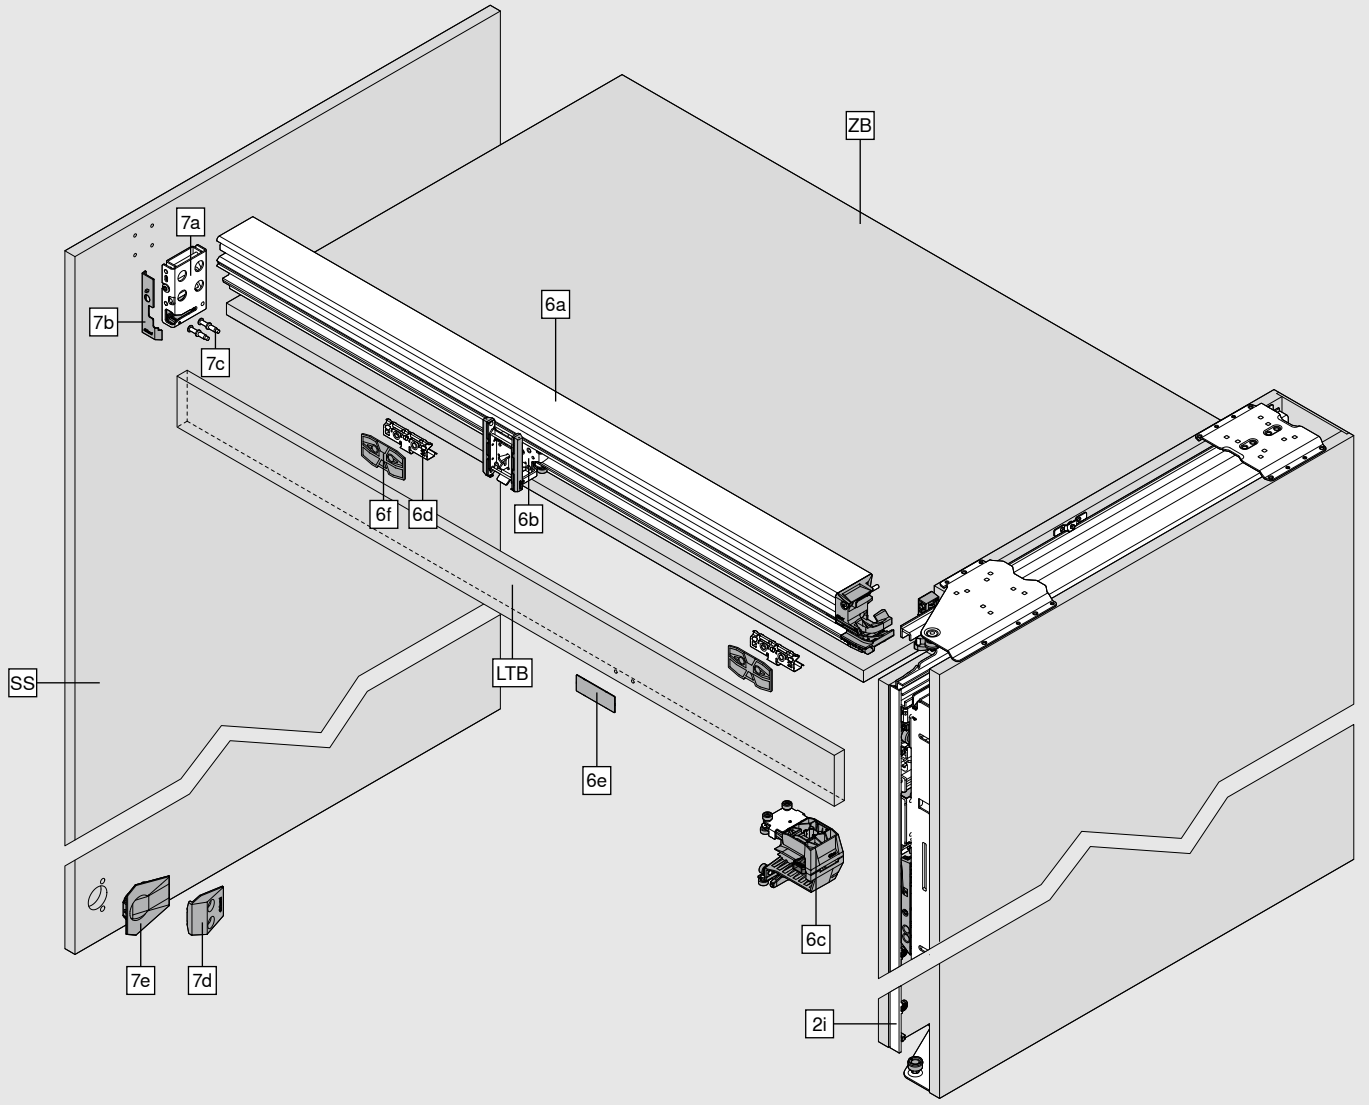

Consisting of:	
2i	Pocket cover strip
6a	Track
6b	Roller carriage
6c	Roller carriage transporter
6d	Mounting for track cover panel
6e	Catch plate
6f	Spacer
7a	Track fixing
7b	Cover for track fixing
7c	Pin for track fixing
7d	Door support on partition side
7e	Door support for decor panel/cabinet side
SS	Optional partition side
ZB	Fixed shelf
LTB	Track cover panel

Ordering information

1	Pocket profile set with TIP-ON			
	**Nominal length NL (mm)**	**Min. pocket depth POT* (mm)**	**Left**	**Right**
	450	550	802P450D.L3	802P450D.R3
	525	625	802P525D.L3	802P525D.R3
	600	700	802P600D.L3	802P600D.R3
	675	775	802P675D.L3	802P675D.R3
	750	850	802P750D.L3	802P750D.R3

* Specification without pocket back. A back construction with a thickness of at least 3 mm is required.
Pocket and roller profiles as well as TIP-ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1c	1 x	Roller profile
1d	1 x	TIP-ON unit pocket
1e	6 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip

2	Hinge bracket set with TIP-ON		
	**Pocket height (mm)**	**Left**	**Right**
	1142–1356	802T1140.L3	802T1140.R3
	1357–1506	802T1350.L3	802T1350.R3
	1507–1656	802T1500.L3	802T1500.R3
	1657–1806	802T1650.L3	802T1650.R3
	1807–1956	802T1800.L3	802T1800.R3
	1957–2106	802T1950.L3	802T1950.R3
	2107–2256	802T2100.L3	802T2100.R3
	2257–2406	802T2250.L3	802T2250.R3
	2407–2556	802T2400.L3	802T2400.R3
	2557–2706	802T2550.L3	802T2550.R3
	2707–2856	802T2700.L3	802T2700.R3
	2857–2999	802T2850.L3	802T2850.R3

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip
2b	3 x	Centre hinge
2c	1 x	Roller carriage hinge
2d	1 x	TIP-ON unit door
2e	1 x	Support for door cover strip
2f	1 x	Hinge bracket
2i	1 x	Pocket cover strip, black anodised
2j	1 x	Door cover strip, black anodised
2k	4 x	Mounting for door cover strip
2l	2–4 x	Mountings for pocket cover strip
2m	1 x	Pocket cover strip support

Ordering information

Pocket connector set				
3	**Application with plinth**			
	**Pocket side thickness (mm)**	**Colour**		
	15–17	Black		**802V560B**
	18–19	Black		**802V580B**
Pocket connector top + bottom: POVH 10 mm for 0–6 mm gap				
POVH Pocket connector height				
Consisting of:				
3a	**2 x**	Front pocket connector		
3b	**2 x**	Rear pocket connector		

Pocket connector set					
4	**Application without plinth**				
	**Pocket side thickness (mm)**	**Colour**	**Left**	**Right**	
	15–17	Black	**802V660B.L1**	**802V660B.R1**	
	18–19	Black	**802V680B.L1**	**802V680B.R1**	
Top pocket connector: POVH 10 mm for 0–6 mm gap					
Bottom pocket connector: POVH 3 mm for gap from 7–13 mm					
POVH Pocket connector height					
Consisting of:					
4a	**2 x**	Front pocket connector			
4b	**2 x**	Rear pocket connector			

Pocket connector set					
5	**Worktop-mounted cabinet application**				
	**Pocket side thickness (mm)**	**Colour**	**Left**	**Right**	
	15–17	Black	**802V760B.L3**	**802V760B.R3**	
	18–19	Black	**802V780B.L3**	**802V780B.R3**	
Top pocket connector: POVH 10 mm for 0–6 mm gap					
Bottom pocket connector: POVH 3 mm for gap from 3–6 mm					
POVH Pocket connector height					
Consisting of:					
5a	**2 x**	Front pocket connector			
5b	**2 x**	Rear pocket connector			


6	**Track set**			
	**LWA double door (mm)**	**Colour**	**Left**	**Right**
	1050	Black anodised	**802L1050DL3**	**802L1050DR3**
	1200	Black anodised	**802L1200DL3**	**802L1200DR3**
	1250	Black anodised	**802L1250DL3**	**802L1250DR3**
	1350	Black anodised	**802L1350DL3**	**802L1350DR3**
Track can be shortened to any length.				
LWA Internal width within the application				
Consisting of:				
6a	**1 x**	Track		
6b	**1 x**	Roller carriage		
6c	**1 x**	Roller carriage transporter		
6d	**2 x**	Mounting for track cover panels		
6e	**1 x**	Catch plate, black		
6f	**2 x**	Spacer		

Ordering information

7	Assembly set for one double door		
	**Colour**	**Left**	**Right**
	Black	**802M0002.L2**	**802M0002.R2**
Consisting of:			
7a	**1 x**	Track fixing	
7b	**1 x**	Cover for track fixing	
7c	**2 x**	Pin for track fixing	
7d	**1 x**	Door support on partition side (can be selected depending on installation situation)	
7e	**1 x**	Door support for decor panel/cabinet side incl. attachment (can be selected depending on installation situation)	

Z	Accessories	
Adapter for electrical appliance switch-off		
		**802ZG0CS**
	Suitable exclusively for electrical appliance switch-off with magnetic contact (part number 3623011) from Halemeier GmbH (www.halemeier.de)	
	Liability disclaimer: Blum does not accept any liability for the function of the electrical appliance switch-off	
Consisting of:		
1 x	Contact switch adapter	
1 x	Ring magnet with catch plate	
4 x	M4x12 countersunk screws for contact switch adapter	
2 x	M4x5 round head screws for contact switch adapter	
Scuff guard		
	For front thicknesses starting from 23 mm	**802ZA00S**
	For front thicknesses less than 23 mm, the scuff guard can be used as additional front protection	
Consisting of:		
3 x	External pocket side scuff guard	
2 x	Internal pocket side scuff guard	
Screws		
	6 x 14.5 mm system screws, nickel plated	**661.1450.HG**
	4 x 35 mm chipboard screws, nickel plated	**664.3500**
Pocket connector		
	Rear pocket connector, pocket connector height (POVH) 10 mm	**802V5002**
Additional pocket connector for set-back plinth leg		
EXPANDO T – for thin fronts		
	EXPANDO T – single	**70T4532T**
EXPANDO T suitable for thin fronts – see page 81		
For front thicknesses less than 18 mm, we recommend a trial application		
Screws are not included in the scope of delivery		

Planning

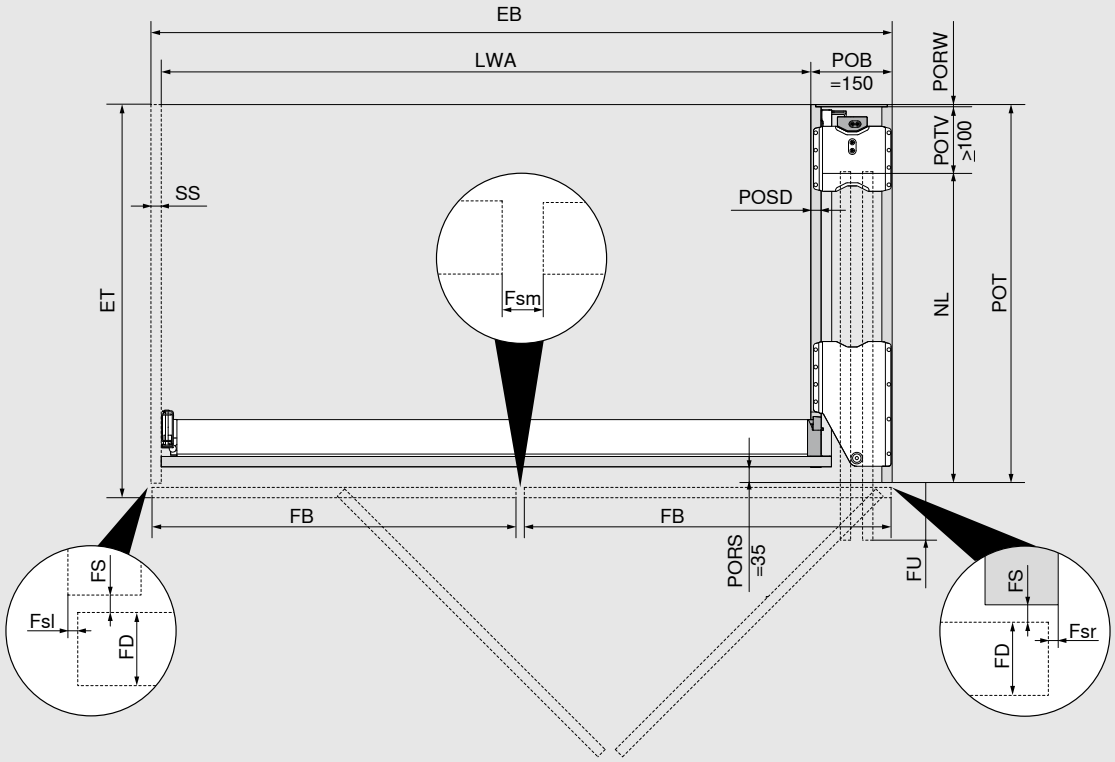

Installation width/internal width within the application
Without partition side: EB = LWA + POB (150 mm)
With partition side: EB = LWA + POB (150 mm) + SS
Front width/front protrusion
FB = (EB - Fsl - Fsm - Fsr) : 2 (fronts) Fsl/Fsr = 1.0–4.0 mm; Fsm = 2.0–8.0 mm
Max. NL = FB + 8 mm
FU = FB - NL + 15 mm (min. FU = 7 mm)
Installation depth/pocket depth
ET = POT + FS (2 mm) + FD
FD = 18–26 mm
Min. POT = NL + POTV (≥ 100 mm) + PORW (≥ 3 mm)
POSD = 15–19 mm


- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18 mm (possible depending on material/stability), we recommend a trial application.

EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
Fsm	Centre side gap (between the fronts)
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
NL	Nominal length
POB	Pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss
SS	Partition side (optional)


Planning

Minimum side gap

Pocket to pocket/adjacent cabinet

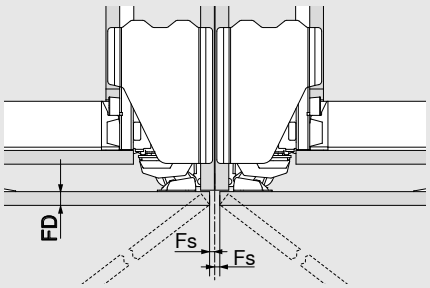

Pocket to wall/decor panel

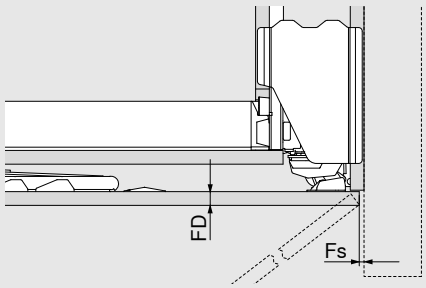


FD (mm)	Min. Fs (mm)
18 –20	2
20.1–23	2.5
23.1–26	3

For free-standing applications,
Fs must be minimum 1 mm

FD	Front thickness
Fs	Side gap

Installation height, front height

Application with plinth

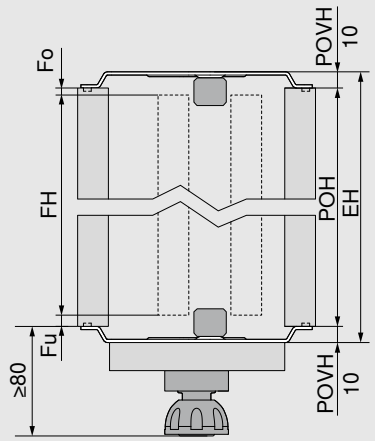

FH = POH - Fo - Fu

EH = POH + POVH top and bottom


POVH 10 mm: gap 0–6 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3 mm,
  for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80 mm

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Application with set-back plinth


Additional rear pocket connector

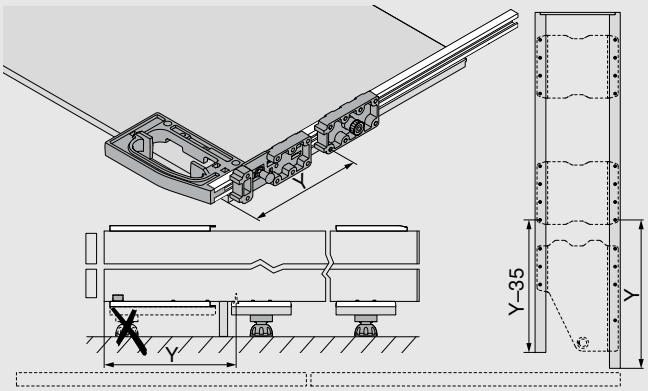

Planning

Installation height, front height

Application without plinth

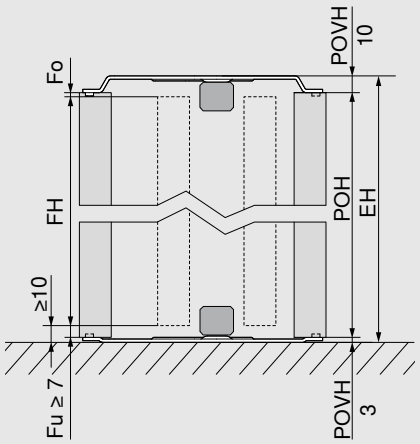

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm


POVH bottom 3 mm: gap from 7–13 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10 mm
- Minimum distance to the next movable element above 3 mm,
  for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Installation height, front height

Worktop-mounted cabinet application

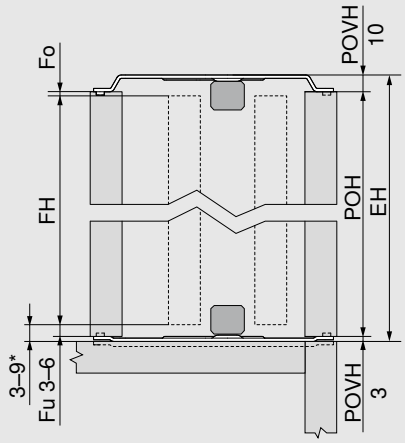

* If the distance between the front and the next element below is < 6 mm, the pocket connector must be embedded in the worktop

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm

POVH bottom 3 mm: gap from 3–6 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance between front and next element below with flush front/worktop is 3 mm
- Minimum distance between front and next element below with protruding front
  (e.g. protruding worktop) is 6 mm
- Minimum distance to the next movable element above 3 mm,
  for non-movable elements a front insertion space of 6 mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Planning


Max. front weights for worktop-mounted cabinets in kg per front

Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130–1349	22	20	18	16	15	14	13
1350–1499	23	21	19	18	17	16	15
1500–1649	25	23	21	19	18	17	16
1650–1803	27	25	23	21	20	19	18

Note

– The max. pocket height when planning a worktop-mounted cabinet is 1806 mm


Door support on partition side

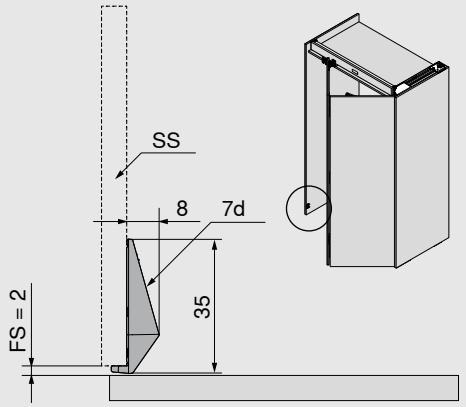

– Assembly height of the door support ideally as far down as possible, however up to a maximum height of 1000 mm from the front bottom edge
– Ensure collision-free installation

FS	Front gap
SS	Partition side
7d	Door support on partition side

Door support for decor panel/cabinet side

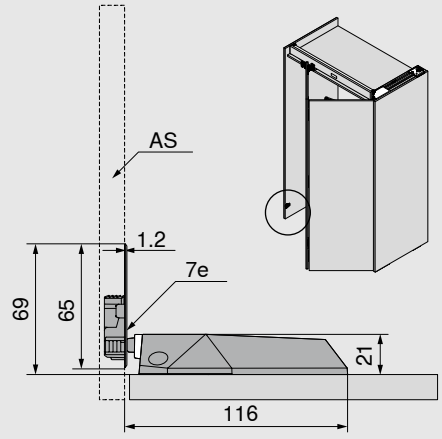


– Installation height AS: 64 mm + Fu from the decor panel/cabinet bottom edge
– Installation height front: 64 mm from the front bottom edge
– Ensure collision-free installation

AS	Decor panel/cabinet side
Fu	Bottom gap
7e	Door support for decor panel/cabinet side

Planning

Track installation dimension

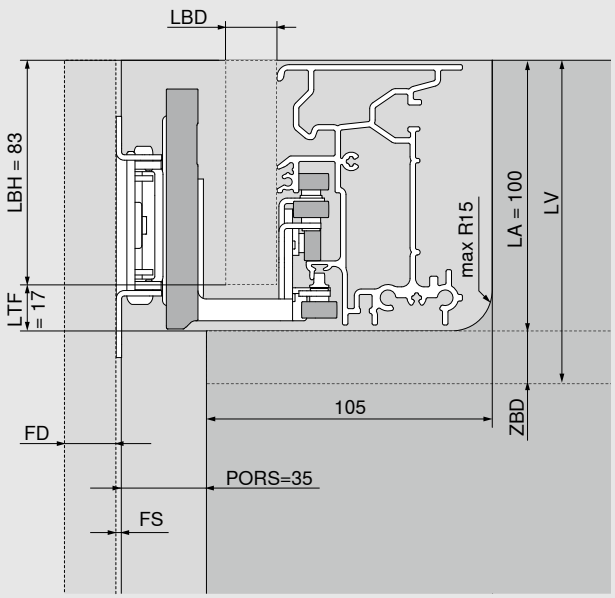

LBH = 83 mm

LBD = 15–19 mm
(the spacer must be used ≤ 17 mm)

LTF = 17 mm


LA = 100 mm

LV = LA + ZBD (≥ 15 mm)

- We recommend using a cross member to stabilise the fixed shelf. Minimum distance to front edge of internal pocket side = 170 mm
- A solid connection between the fixed shelf and the pocket with connector fittings is recommended for an attractive gap layout
- No mounting of add-on parts directly on the track

FD	Front thickness
LA	Track cut-out
LV	Track installation
LBD	Track cover panel thickness
LBH	Track cover panel height
LTF	Track gap
PORS	Pocket back cut
ZBD	Fixed shelf thickness

Internal height and internal depth within the application

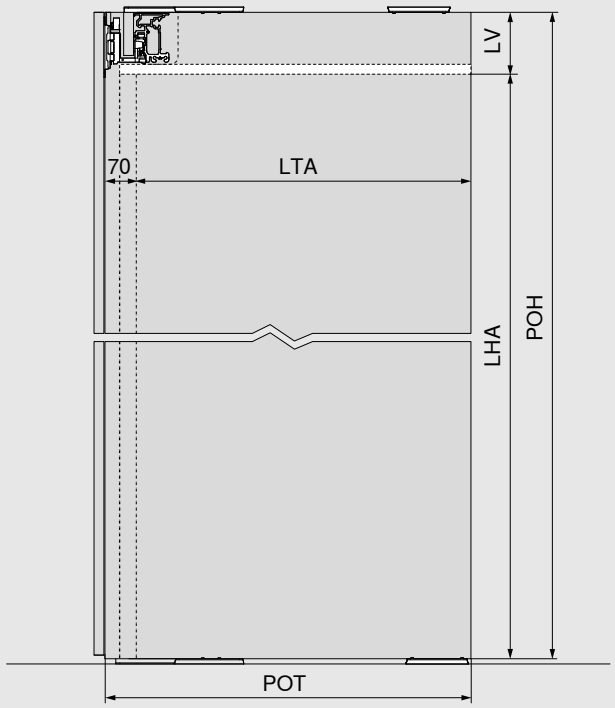

LHA = POH - LV

LTA = POT - 70 mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry.


LHA	Internal height within the application
LTA	Internal depth within the application
LV	Track installation
POH	Pocket height
POT	Pocket depth

REVEGO uno + duo – single door right or left and double door right or left



Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	1350–2400	1155–3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 2150	up to 2884	from 483
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	100 / 150	1142–2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442–898/748	1130–2980	18–26
Front weight FG	up to 35 kg per front		

Overview

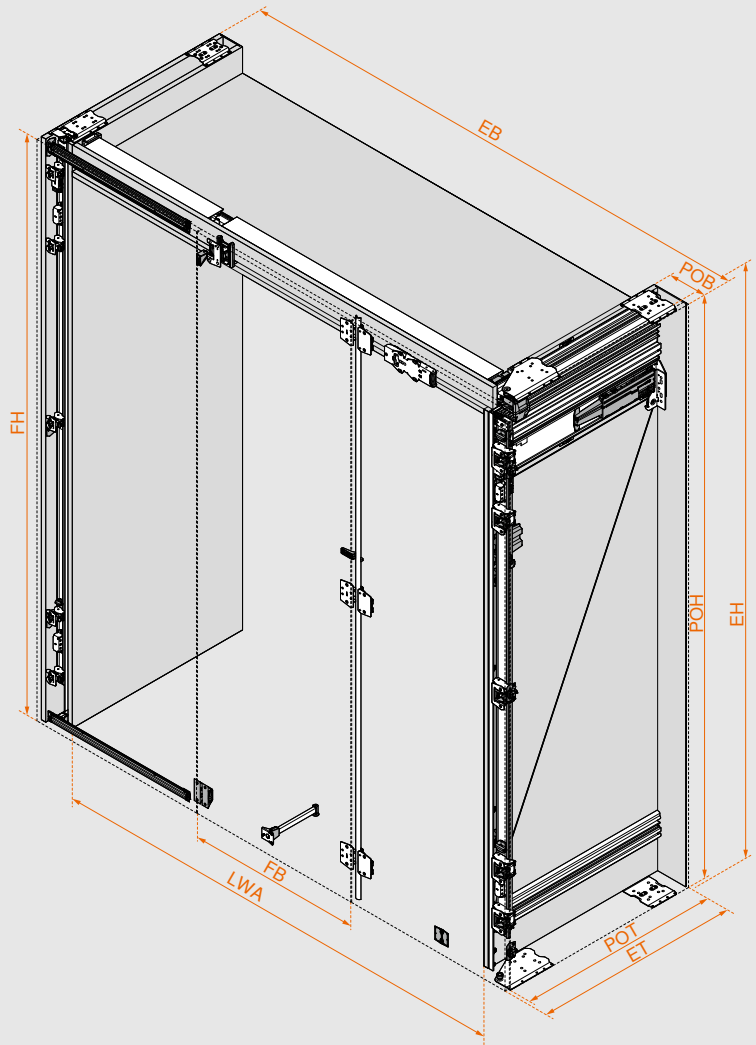

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.


Web code **DQIVXA**

Product Configurator
www.blum.com/rev11

Assembly and adjustment
www.blum.com/rev7

Double door component overview


Pocket

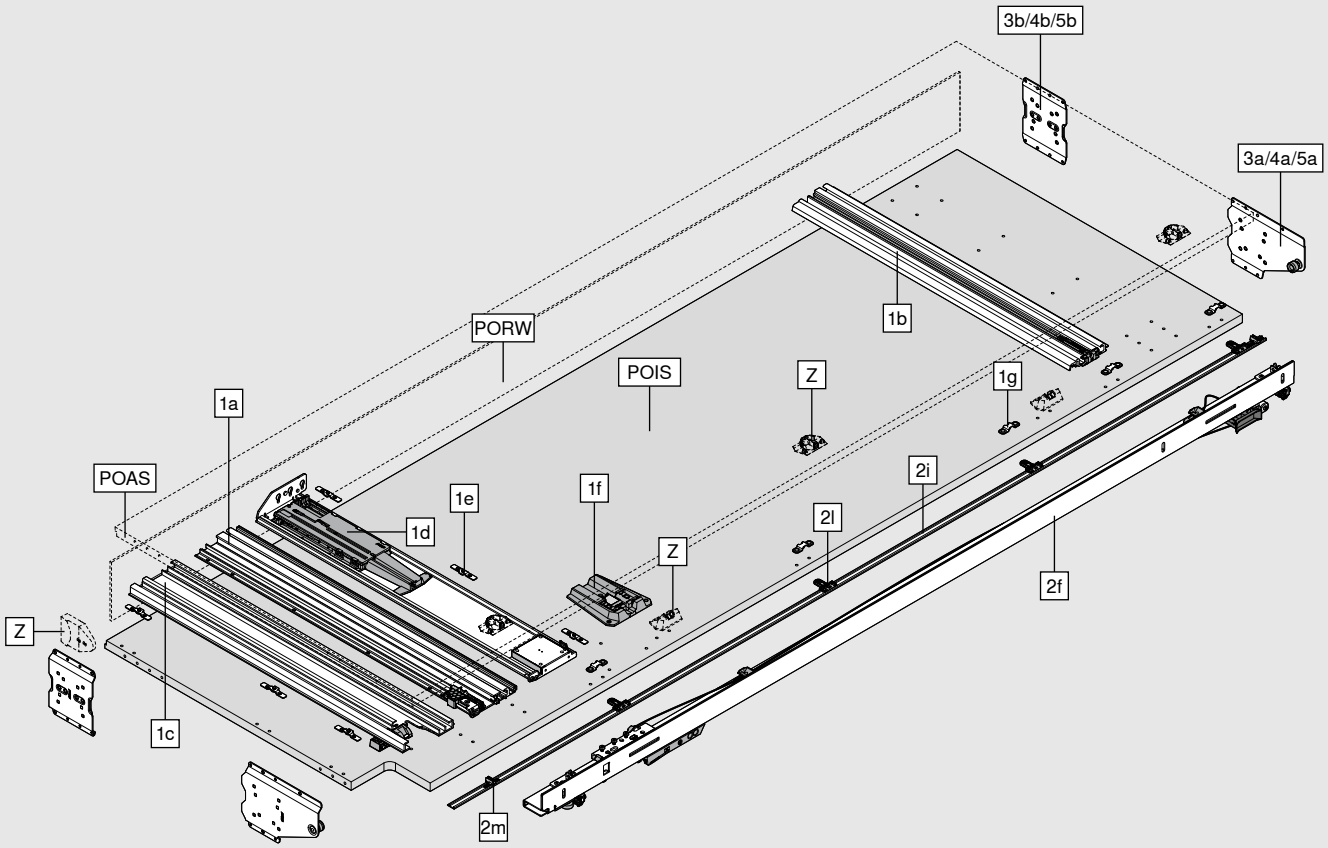

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1c	Roller profile
1d	TIP-ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
2m	Pocket cover strip support
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Adapter for electrical appliance switch-off
	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

Double door component overview

Front

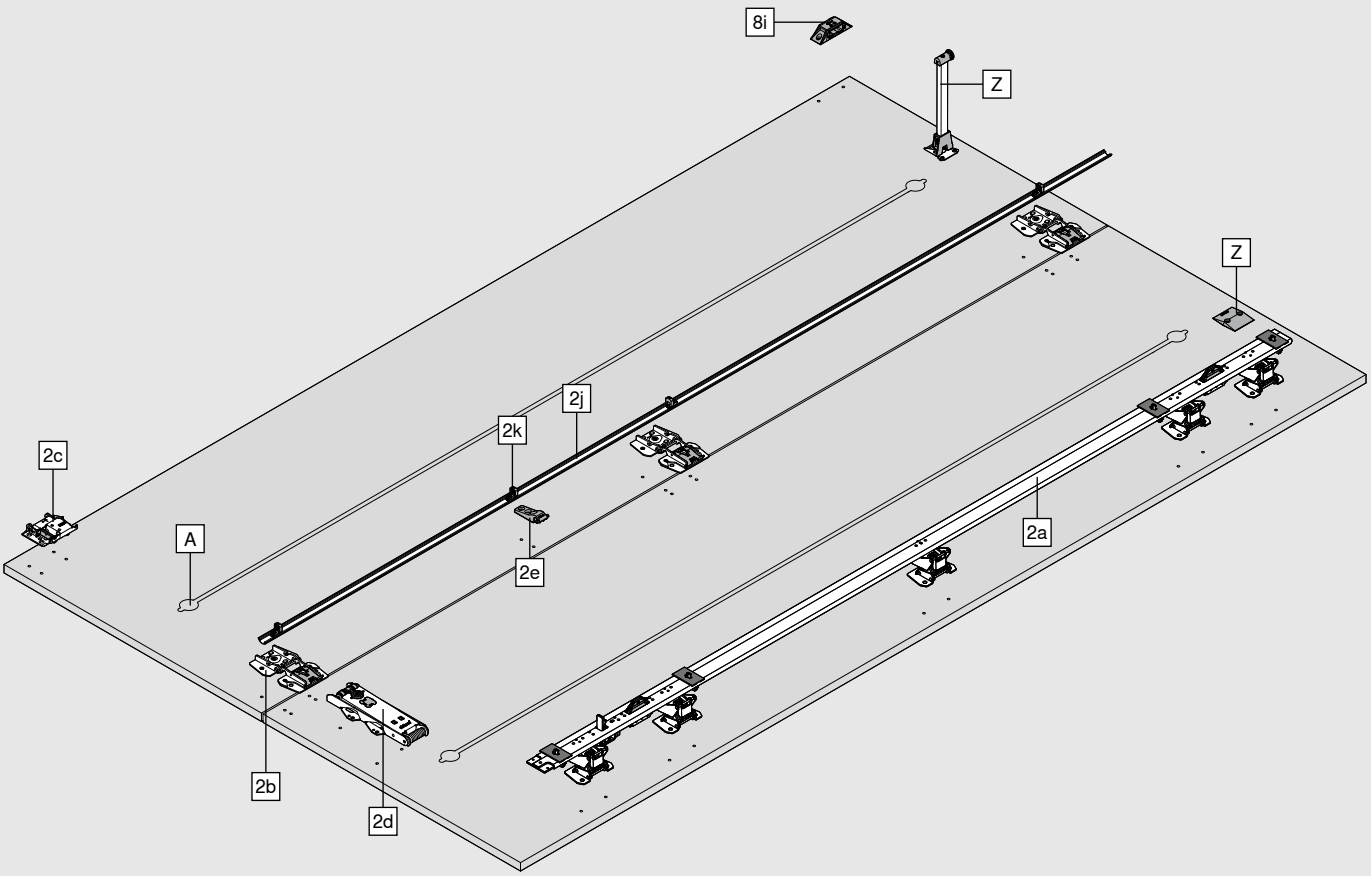


Consisting of:

2a	Hinge strip
2b	Centre hinge
2c	Roller carriage hinge
2d	TIP-ON unit door
2e	Support for door cover strip
2j	Door cover strip
2k	Mounting for door cover strip
8i	Inter-door support
Z	Inner door support incl. tip-assist

A We recommend at least one alignment fitting per front with a maximum installation height of 20 mm.
The space available between the pair of folding fronts is 20 mm.

Double door component overview


Track

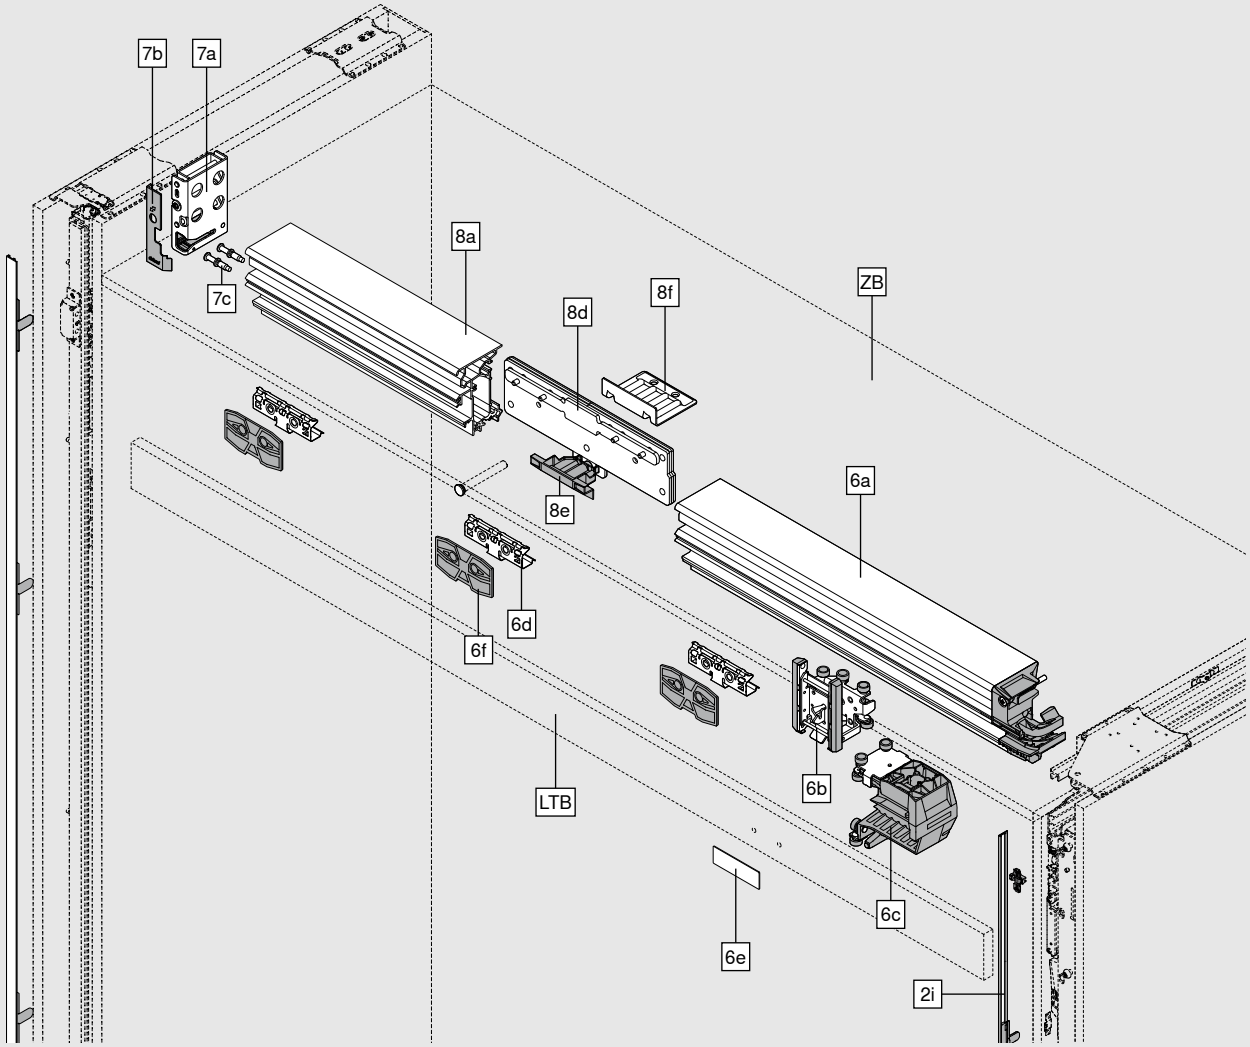

Consisting of:	
2h	TIP-ON incl. catch plate
2i	Pocket cover strip incl. mounting
6a	Track
6b	Roller carriage
6c	Roller carriage transporter
6d	Mounting for track cover panels
6e	Catch plate
6f	Spacer
7a	Track fixing
7b	Cover for track fixing
7c	Pin for track fixing
8a	Track extension
8d	Track connection
8e	Cover for track connection
8f	Support angle for depth adjustment
LTB	Track cover panel
ZB	Fixed shelf

Single door component overview


Pocket

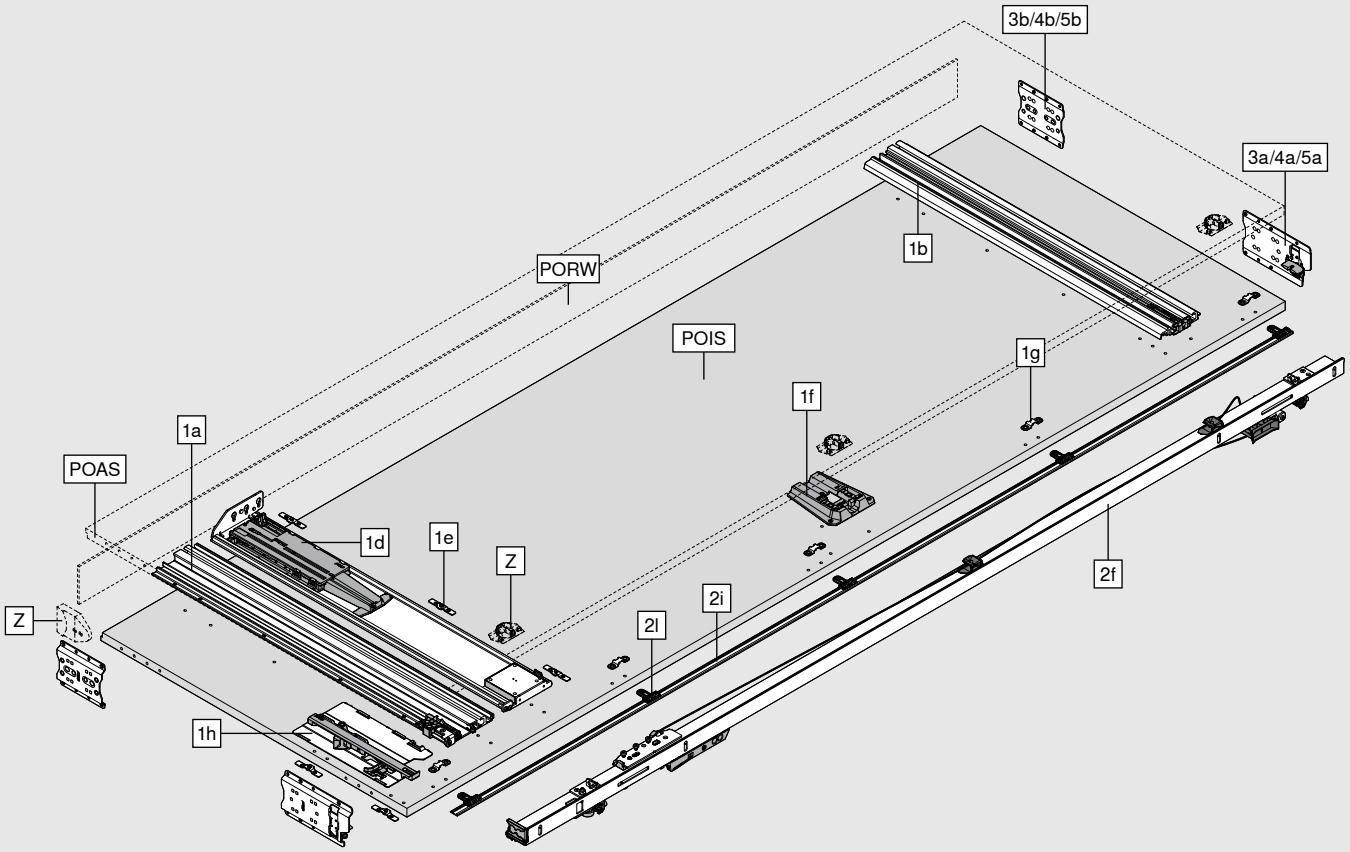

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1d	TIP-ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
1h	BLUMATIC unit
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Adapter for electrical appliance switch-off
	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

Single door component overview

Front

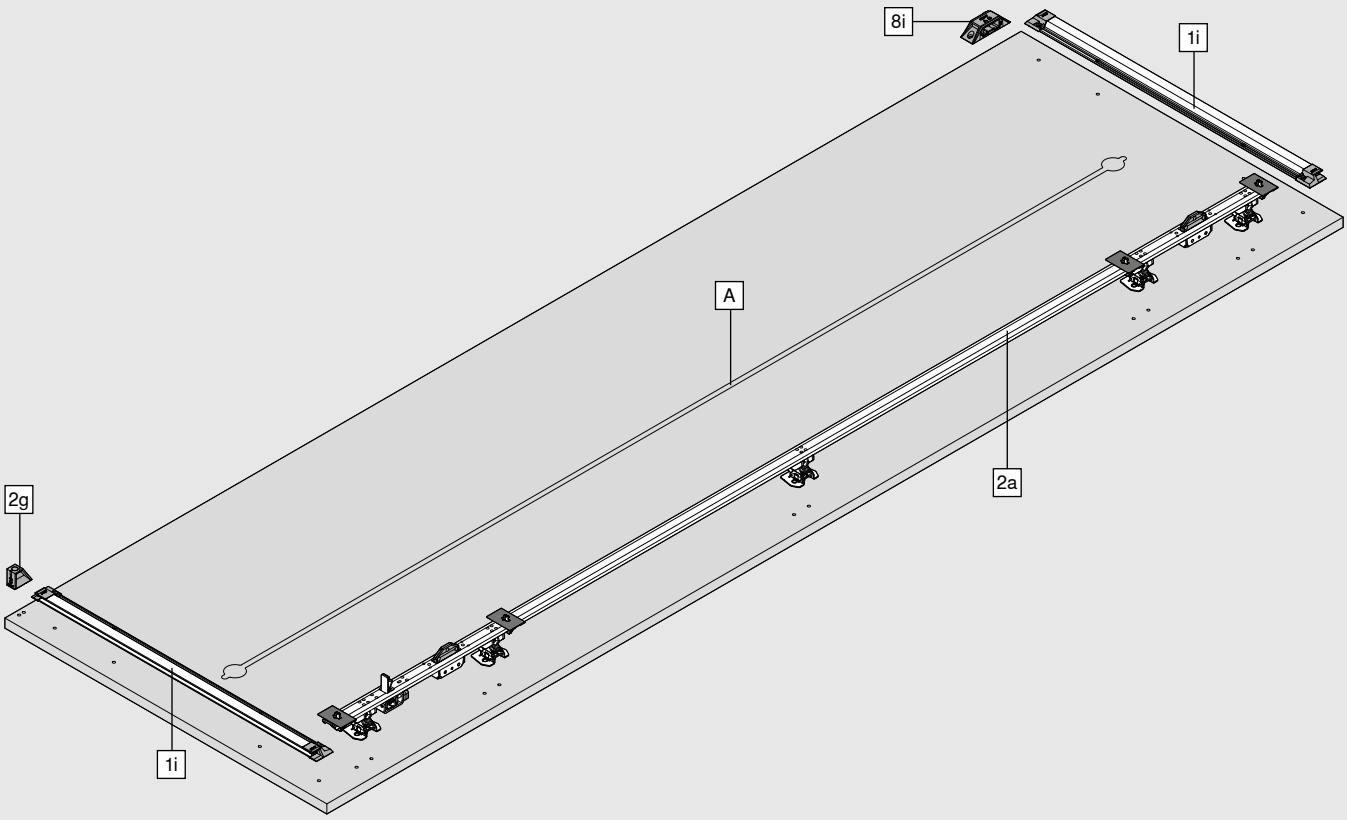

Consisting of:

1i	Door stabiliser
2a	Hinge strip
2g	TIP-ON spacer
8i	Inter-door support

A We recommend at least one alignment fitting with a maximum installation height of 3 mm.
Alignment fittings with a height of more than 3 mm must not be used in the pocket.

Double door ordering information

1	Pocket profile set with TIP-ON			
	**Nominal length NL (mm)**	**Min. pocket depth POT* (mm)**	**Left**	**Right**
	450	550	802P450D.L3	802P450D.R3
	525	625	802P525D.L3	802P525D.R3
	600	700	802P600D.L3	802P600D.R3
	675	775	802P675D.L3	802P675D.R3
	750	850	802P750D.L3	802P750D.R3

* Specification without pocket back. A back construction with a thickness of at least 3 mm is required.
Pocket and roller profiles as well as TIP-ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1c	1 x	Roller profile
1d	1 x	TIP-ON unit pocket
1e	6 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip

2	Hinge bracket set with TIP-ON		
	**Pocket height (mm)**	**Left**	**Right**
	1142–1356	802T1140.L3	802T1140.R3
	1357–1506	802T1350.L3	802T1350.R3
	1507–1656	802T1500.L3	802T1500.R3
	1657–1806	802T1650.L3	802T1650.R3
	1807–1956	802T1800.L3	802T1800.R3
	1957–2106	802T1950.L3	802T1950.R3
	2107–2256	802T2100.L3	802T2100.R3
	2257–2406	802T2250.L3	802T2250.R3
	2407–2556	802T2400.L3	802T2400.R3
	2557–2706	802T2550.L3	802T2550.R3
	2707–2856	802T2700.L3	802T2700.R3
	2857–2999	802T2850.L3	802T2850.R3

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip
2b	3 x	Centre hinge
2c	1 x	Roller carriage hinge
2d	1 x	TIP-ON unit door
2e	1 x	Support for door cover strip
2f	1 x	Hinge bracket
2i	1 x	Pocket cover strip, black anodised
2j	1 x	Door cover strip, black anodised
2k	4 x	Mounting for door cover strip
2l	2–4 x	Mountings for pocket cover strip
2m	1 x	Pocket cover strip support

Double door ordering information

Pocket connector set					
3	Application with plinth				
		Pocket side thickness (mm)	Colour		
		15–17	Black		802V560B
		18–19	Black		802V580B
Pocket connector top + bottom: POVH 10 mm for 0–6 mm gap					
POVH Pocket connector height					
Consisting of:					
3a	2 x	Front pocket connector			
3b	2 x	Rear pocket connector			

Pocket connector set					
4	Application without plinth				
		Pocket side thickness (mm)	Colour	Left	Right
		15–17	Black	802V660B.L1	802V660B.R1
		18–19	Black	802V680B.L1	802V680B.R1
Top pocket connector: POVH 10 mm for 0–6 mm gap					
Bottom pocket connector: POVH 3 mm for gap from 7–13 mm					
POVH Pocket connector height					
Consisting of:					
4a	2 x	Front pocket connector			
4b	2 x	Rear pocket connector			

Pocket connector set					
5	Worktop-mounted cabinet application				
		Pocket side thickness (mm)	Colour	Left	Right
		15–17	Black	802V760B.L3	802V760B.R3
		18–19	Black	802V780B.L3	802V780B.R3
Top pocket connector: POVH 10 mm for 0–6 mm gap					
Bottom pocket connector: POVH 3 mm for gap from 3–6 mm					
POVH Pocket connector height					
Consisting of:					
5a	2 x	Front pocket connector			
5b	2 x	Rear pocket connector			

6	Track set				
		LWA2 double door (mm)	Colour	Left	Right
		1050	Black anodised	802L1050DL3	802L1050DR3
		1200	Black anodised	802L1200DL3	802L1200DR3
		1250	Black anodised	802L1250DL3	802L1250DR3
		1350	Black anodised	802L1350DL3	802L1350DR3
Track can be shortened to any length.					
LWA2 Internal width within the application, double door					
Consisting of:					
6a	1 x	Track			
6b	1 x	Roller carriage			
6c	1 x	Roller carriage transporter			
6d	2 x	Mounting for track cover panels			
6e	1 x	Catch plate, black			
6f	2 x	Spacer			

Double door ordering information

8	Assembly set for a single door and double door combined		
	**LWA1 single door (mm)**	**Left**	**Right**
	600	802M6003.L3	802M6003.R3
	700	802M7003.L3	802M7003.R3
	800	802M8003.L3	802M8003.R3
Track extension can be shortened to any length.			
LWA1 Internal width within the application, single door			
Consisting of:			
6d	**1 x**	Mounting for track cover panel	
6f	**1 x**	Spacer	
7a	**1 x**	Track fixing	
7b	**1 x**	Cover for track fixing	
7c	**2 x**	Pin for track fixing	
8a	**1 x**	Track extension	
8d	**1 x**	Track connection	
8e	**1 x**	Cover for track connection	
8f	**1 x**	Support angle for depth adjustment	
8i	**1 x**	Inter-door support (right + left)	

Z	Accessories	
Inner door support incl. tip-assist		
	Support length up to 218 mm	802ZA030
	Support length up to 350 mm	802ZA031
For additional support on the worktop area, plinth front, cabinet, etc.		
Adapter for electrical appliance switch-off		
		802ZG0CS
	Suitable exclusively for electrical appliance switch-off with magnetic contact (part number 3623011) from Halemeier GmbH (www.halemeier.de)	
	Liability disclaimer: Blum does not accept any liability for the function of the electrical appliance switch-off	
Consisting of:		
1 x	Contact switch adapter	
1 x	Ring magnet with catch plate	
4 x	M4x12 countersunk screws for contact switch adapter	
2 x	M4x5 round head screws for contact switch adapter	
Scuff guard		
	For front thicknesses starting from 23 mm	802ZA00S
	For front thicknesses less than 23 mm, the scuff guard can be used as additional front protection	
Consisting of:		
3 x	External pocket side scuff guard	
2 x	Internal pocket side scuff guard	

Double door ordering information

Z	Accessories	
Screws		
	6 x 14.5 mm system screws, nickel plated	661.1450.HG
	4 x 35 mm chipboard screws, nickel plated	664.3500
Pocket connector		
	Rear pocket connector, pocket connector height (POVH) 10 mm	802V5002
Additional pocket connector for set-back plinth leg		
EXPANDO T – for thin fronts		
	EXPANDO T – single	70T4532T
EXPANDO T suitable for thin fronts – see page 81		
For front thicknesses less than 18 mm, we recommend a trial application		
Screws are not included in the scope of delivery		

Single door ordering information

1	Pocket profile set with TIP-ON			
	**Nominal length NL (mm)**	**Min. pocket depth POT* (mm)**	**Left**	**Right**
	450	550	801P450E.L3	801P450E.R3
	500	600	801P500E.L3	801P500E.R3
	600	700	801P600E.L3	801P600E.R3
	700	800	801P700E.L3	801P700E.R3
	800	900	801P800E.L3	801P800E.R3

* Specification without pocket back. A back construction with a thickness of at least 3 mm is required.
Pocket profiles and TIP-ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1d	1 x	TIP-ON unit pocket
1e	5 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip
1h	1 x	BLUMATIC unit
1i	2 x	Door stabiliser: runner profile incl. end cap, black anodised

2	Hinge bracket set		
	**Pocket height (mm)**	**Left**	**Right**
	1142–1356	801T1140.L3	801T1140.R3
	1357–1506	801T1350.L3	801T1350.R3
	1507–1656	801T1500.L3	801T1500.R3
	1657–1806	801T1650.L3	801T1650.R3
	1807–1956	801T1800.L3	801T1800.R3
	1957–2106	801T1950.L3	801T1950.R3
	2107–2256	801T2100.L3	801T2100.R3
	2257–2406	801T2250.L3	801T2250.R3
	2407–2556	801T2400.L3	801T2400.R3
	2557–2706	801T2550.L3	801T2550.R3
	2707–2856	801T2700.L3	801T2700.R3
	2857–2999	801T2850.L3	801T2850.R3

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip, black
2f	1 x	Hinge bracket
2g	1 x	TIP-ON spacer
2h	1 x	TIP-ON incl. catch plate, black
2i	1 x	Pocket cover strip, black anodised
2l	3–5 x	Mountings for pocket cover strip
-	21 x	System screws for 1i, 2a, 2g and 8i, 6 x 14.5 mm, black

Single door ordering information

Pocket connector set					
3	Application with plinth				
		Pocket side thickness (mm)	Colour		
		15–19	Black		801V505B
Pocket connector top + bottom: POVH 10 mm for 0–6 mm gap					
POVH Pocket connector height					
Consisting of:					
3a	2 x	Front pocket connector			
3b	2 x	Rear pocket connector			

Pocket connector set					
4	Application without plinth				
		Pocket side thickness (mm)	Colour	Left	Right
		15–19	Black	801V605B.L1	801V605B.R1
Top pocket connector: POVH 10 mm for 0–6 mm gap					
Bottom pocket connector: POVH 3 mm for gap from 7–13 mm					
POVH Pocket connector height					
Consisting of:					
4a	2 x	Front pocket connector			
4b	2 x	Rear pocket connector			

Pocket connector set					
5	Worktop-mounted cabinet application				
		Pocket side thickness (mm)	Colour	Left	Right
		15–19	Black	801V705B.L3	801V705B.R3
Top pocket connector: POVH 10 mm for 0–6 mm gap					
Bottom pocket connector: POVH 3 mm for gap from 3–6 mm					
POVH Pocket connector height					
Consisting of:					
5a	2 x	Front pocket connector			
5b	2 x	Rear pocket connector			

Single door ordering information

Z	Accessories

Adapter for electrical appliance switch-off



801ZG0BS

Suitable exclusively for electrical appliance switch-off with magnetic contact (part number 3623011) from Halemeier GmbH (www.halemeier.de)

Liability disclaimer: Blum does not accept any liability for the function of the electrical appliance switch-off

Consisting of:

1 x	Contact switch adapter
1 x	Ring magnet with catch plate
4 x	M4x12 countersunk screws for contact switch adapter
2 x	M4x5 round head screws for contact switch adapter

Scuff guard



For front thicknesses starting from 23 mm — 801ZA00S

For front thicknesses less than 23 mm, the scuff guard can be used as additional front protection

Consisting of:

3 x	External pocket side scuff guard

Screws



6 x 14.5 mm system screws, nickel plated — 661.1450.HG



4 x 35 mm chipboard screws, nickel plated — 664.3500

Pocket connector



Rear pocket connector, pocket connector height (POVH) 10 mm — 801V5002

Additional pocket connector for set-back plinth leg

EXPANDO T – for thin fronts




EXPANDO T – single — 70T4532T

EXPANDO T suitable for thin fronts – see page 81

For front thicknesses less than 18 mm, we recommend a trial application

Screws are not included in the scope of delivery

Planning

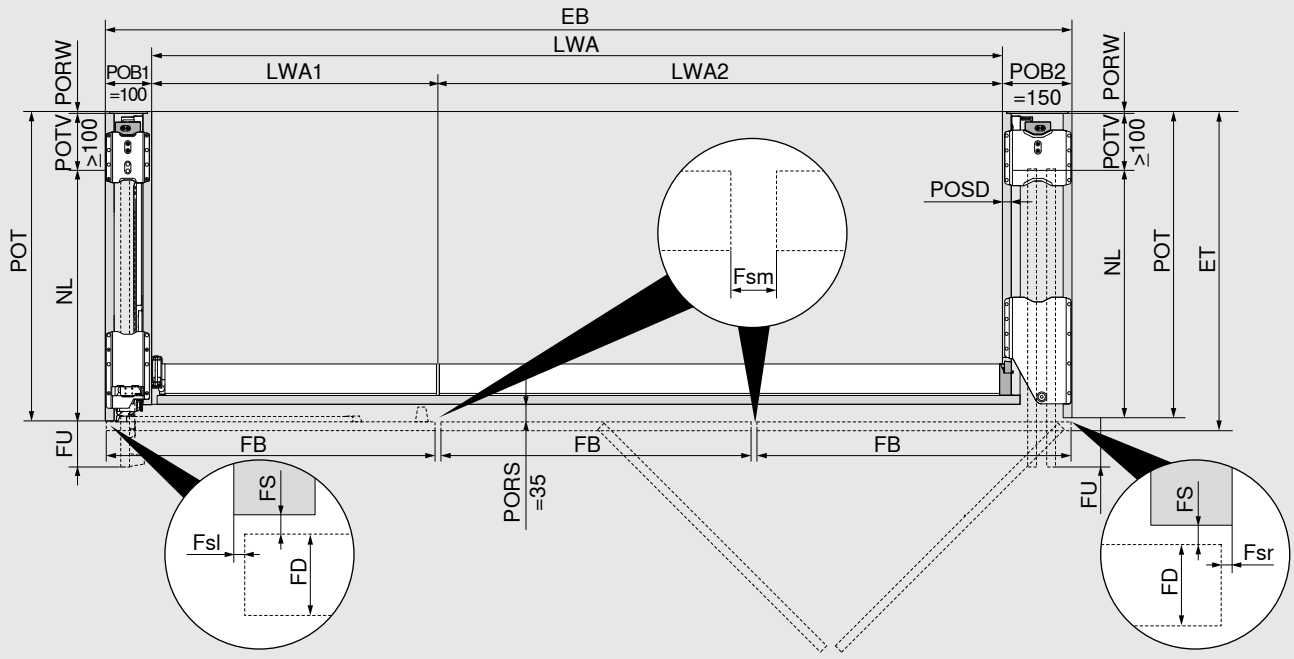

Installation width/internal width within the application

EB = LWA1 + LWA2 + POB1 (100 mm) + POB2 (150 mm)

Front width/front protrusion

Double door: FB = (LWA2 + POB2 - Fsl - Fsm - Fsr): 2 (fronts)
Single door: FB = LWA1 + POB1 - Fsl - Fsr
Fsl/Fsr = 1.0–4.0 mm; Fsm = 2.0–8.0 mm

Max. NL = FB + 8 mm

FU = FB - NL + 15 mm
(min. FU = 7 mm)

Installation depth/pocket depth

ET = POT + FS (2 mm) + FD

FD = 18–26 mm

Min. POT = NL + POTV (≥ 100 mm) + PORW (≥ 3 mm)

POSD = 15–19 mm


- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18 mm (possible depending on material/stability), we recommend a trial application.

EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
Fsm	Centre side gap (between the fronts)
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
LWA1	Internal width within the application, single door
LWA2	Internal width within the application, double door
NL	Nominal length
POB1	Single door pocket width
POB2	Double door pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss


Planning

Minimum side gap

Pocket to pocket/adjacent cabinet

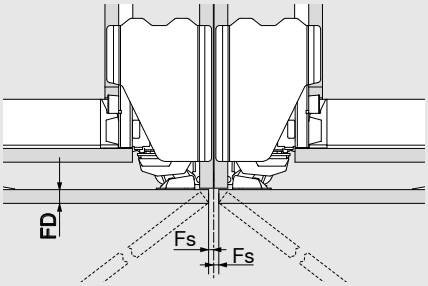

Pocket to wall/decor panel

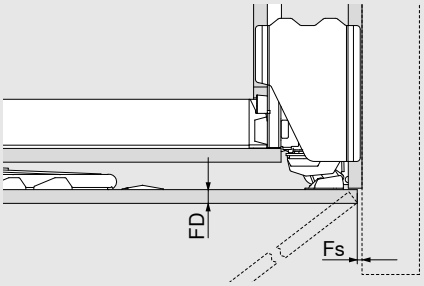


FD (mm)	Min. Fs (mm)
18 –20	2
20.1–23	2.5
23.1–26	3

For free-standing applications, Fs must be minimum 1 mm

FD	Front thickness
Fs	Side gap

Installation height, front height

Application with plinth

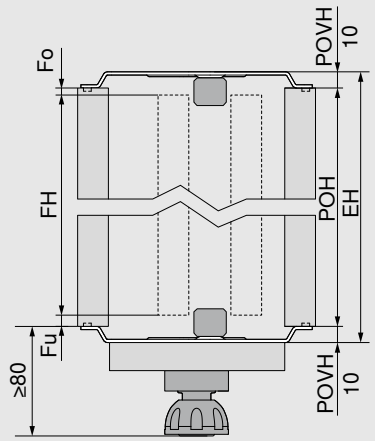

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH 10 mm: gap 0–6 mm


- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3 mm, for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80 mm

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height


Application with set-back plinth

Additional rear pocket connector

REVEGO uno

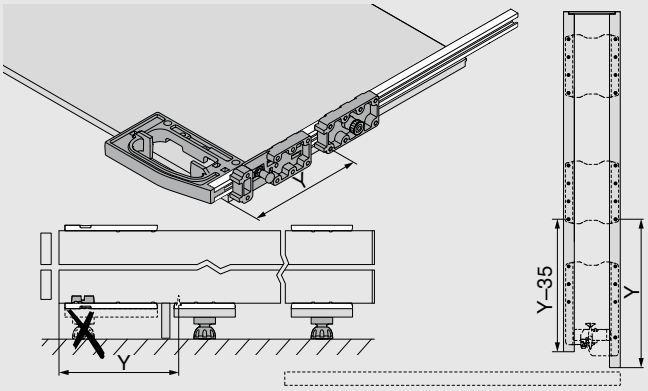


REVEGO duo

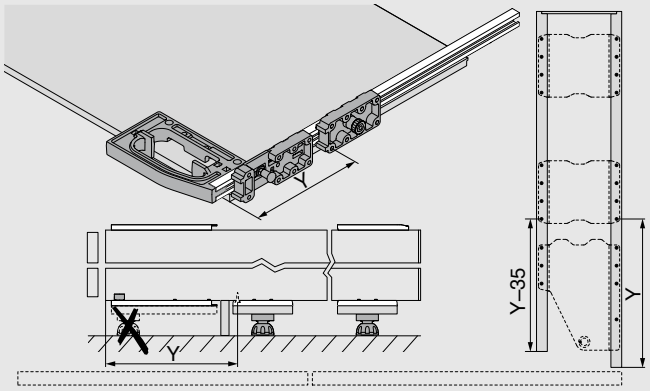

Planning

Installation height, front height

Application without plinth

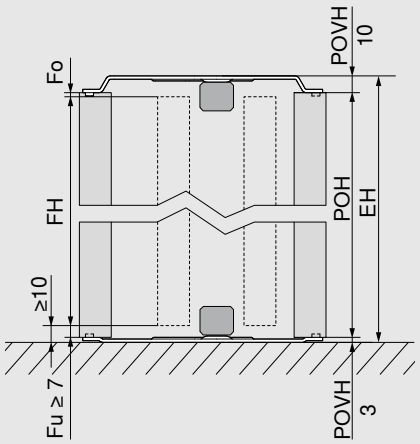

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm


POVH bottom 3 mm: gap from 7–13 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10 mm
- Minimum distance to the next movable element above 3 mm,
  for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Installation height, front height

Worktop-mounted cabinet application

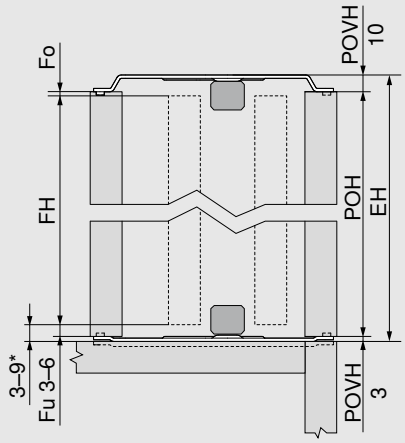

* If the distance between the front and the next element below is < 6 mm, the pocket connector must be embedded in the worktop

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm

POVH bottom 3 mm: gap from 3–6 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance between front and next element below with flush front/worktop is 3 mm
- Minimum distance between front and next element below with protruding front
  (e.g. protruding worktop) is 6 mm
- Minimum distance to the next movable element above 3 mm,
  for non-movable elements a front insertion space of 6 mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Planning

Max. front weights for worktop-mounted cabinets in kg per front


Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130–1349	22	20	18	16	15	14	13
1350–1499	23	21	19	18	17	16	15
1500–1649	25	23	21	19	18	17	16
1650–1803	27	25	23	21	20	19	18

Note

REVEGO uno:
- The max. front width when planning a worktop-mounted cabinet is 750 mm
- The max. pocket height when planning a worktop-mounted cabinet is 1806 mm

REVEGO duo:
- The max. pocket height when planning a worktop-mounted cabinet is 1806 mm


Inter-door support

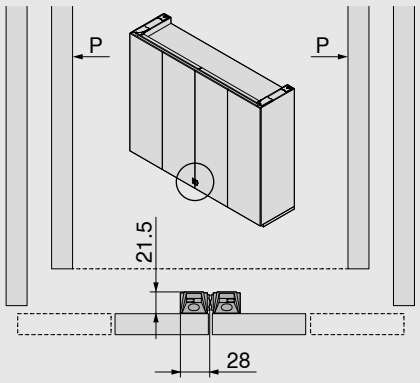

- Supports a single door against a double door, two single doors against each other or two double doors against each other

P Pocket

Inner door support incl. tip-assist

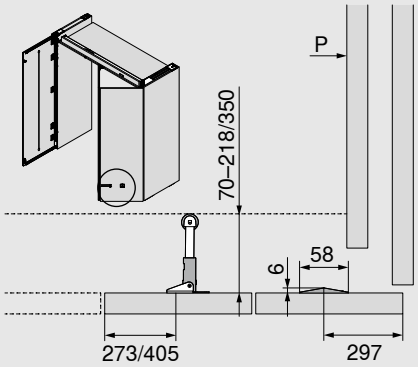


- Support on the worktop area, plinth front, cabinet, etc.
- Distance from internal cabinetry: 70–218/350 mm
- Assembly height of the door support ideally as far down as possible, however up to a maximum height of 1000 mm from the front bottom edge

P Pocket

Planning

Track installation dimension

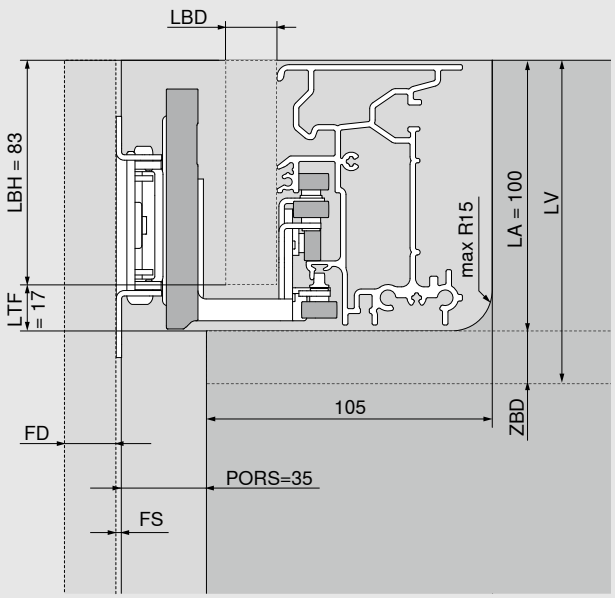

LBH = 83 mm

LBD = 15–19 mm
(the spacer must be used ≤ 17 mm)

LTF = 17 mm


LA = 100 mm

LV = LA + ZBD (≥ 15 mm)

- We recommend using a cross member to stabilise the fixed shelf. Minimum distance to front edge of internal pocket side = 170 mm
- A solid connection between the fixed shelf and the pocket with connector fittings is recommended for an attractive gap layout
- No mounting of add-on parts directly on the track

FD	Front thickness
LA	Track cut-out
LV	Track installation
LBD	Track cover panel thickness
LBH	Track cover panel height
LTF	Track gap
PORS	Pocket back cut
ZBD	Fixed shelf thickness

Internal height and internal depth within the application

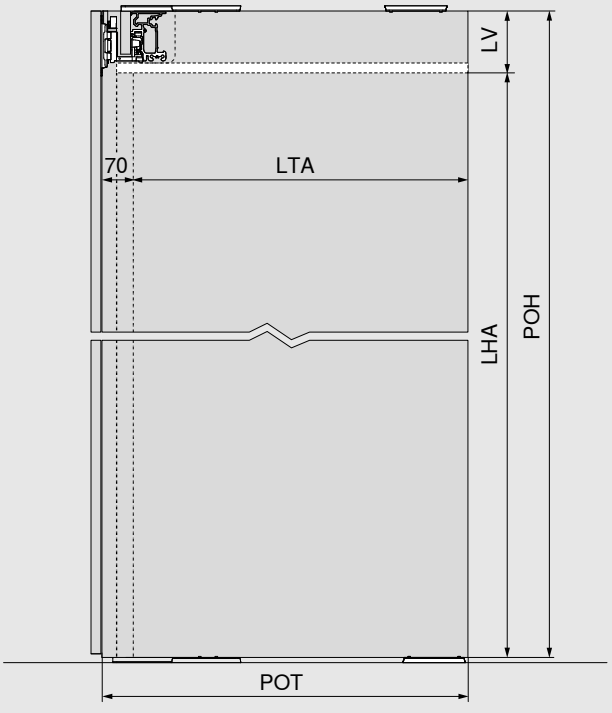

LHA = POH - LV

LTA = POT - 70 mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry.


LHA	Internal height within the application
LTA	Internal depth within the application
LV	Track installation
POH	Pocket height
POT	Pocket depth

REVEGO duo + duo – double door right and double door left



Space requirement			
Installation dimensions (mm)	**Installation width EB**	**Installation height EH**	**Installation depth ET**
	1800–3000	1155–3012	from 573
Internal dimensions within the application (mm)	**Internal width within the application LWA**	**Internal height within the application LHA**	**Internal depth within the application LTA**
	up to 2700	up to 2884	from 483
Pocket dimensions (mm)	**Pocket width POB**	**Pocket height POH**	**Pocket depth POT**
	150	1142–2999	from 553
Front dimensions (mm)	**Front width FB**	**Front height FH**	**Front thickness FD**
	442–748	1130–2980	18–26
Front weight FG	up to 35 kg per front		

Overview

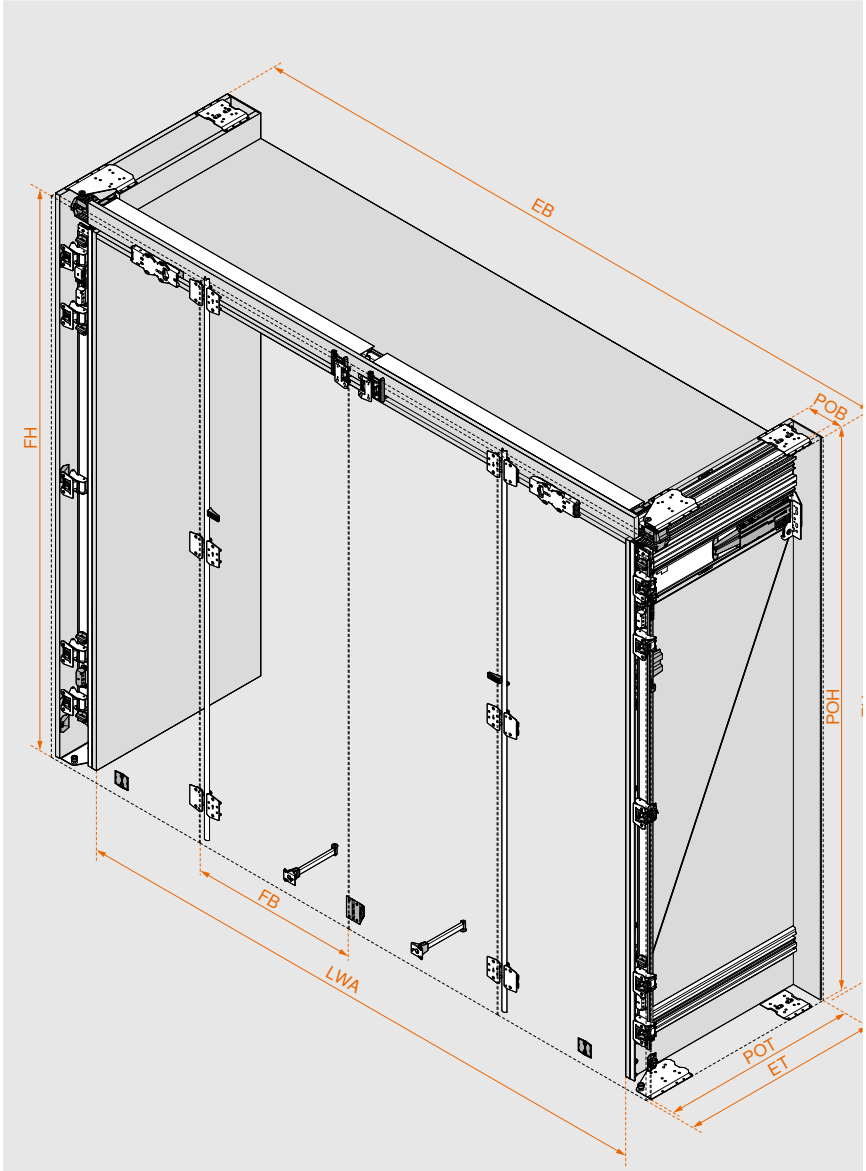

Fittings selection made easy

It is easy to work out the fittings and drilling positions you need using the Product Configurator.

With every product configuration, you will receive manufacturing drawings, cutting lists for wooden parts and fittings, 3D CAD data for your design software, as well as CAM programs including drilling information for direct machining on your CNC machine, in addition to the checked parts list.

Enter the web code in the Product Configurator, click on the short URL or scan the QR code.
Don't have login information for digital services yet? Register here and get access free of charge.


Web code **DQIVMM**

Product Configurator
www.blum.com/rev12

Assembly and adjustment
www.blum.com/rev6

Component overview


Pocket

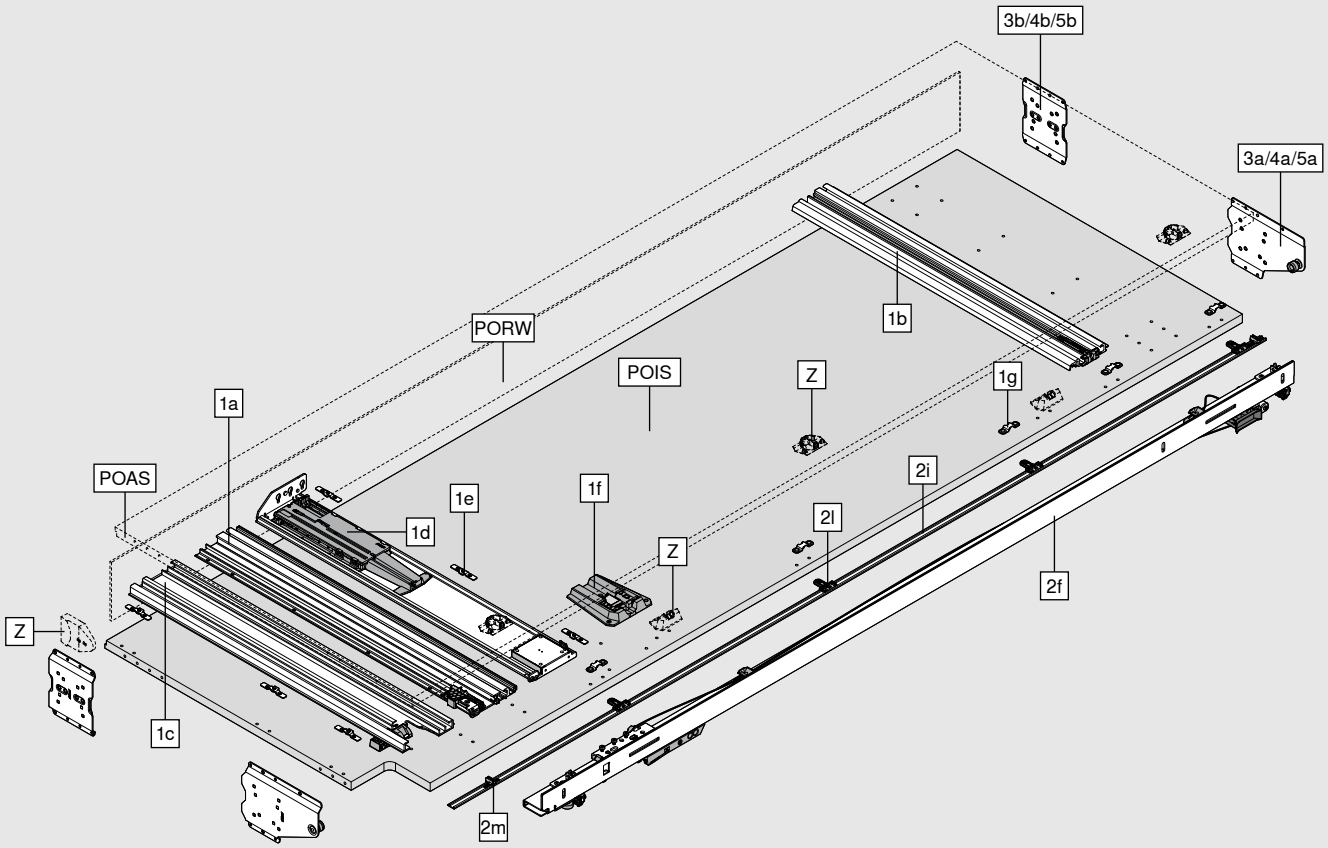

Consisting of:	
1a	Top pocket profile
1b	Bottom pocket profile
1c	Roller profile
1d	TIP-ON unit pocket
1e	Fixing clips
1f	BLUMOTION unit pocket
1g	Attachment for pocket cover strip
2f	Hinge bracket
2i	Pocket cover strip
2l	Mounting for pocket cover strip
2m	Pocket cover strip support
3a/4a/5a	Front pocket connector
3b/4b/5b	Rear pocket connector
Z	Adapter for electrical appliance switch-off
	Scuff guard
POAS	External pocket side
POIS	Internal pocket side
PORW	Pocket back

Component overview

Front

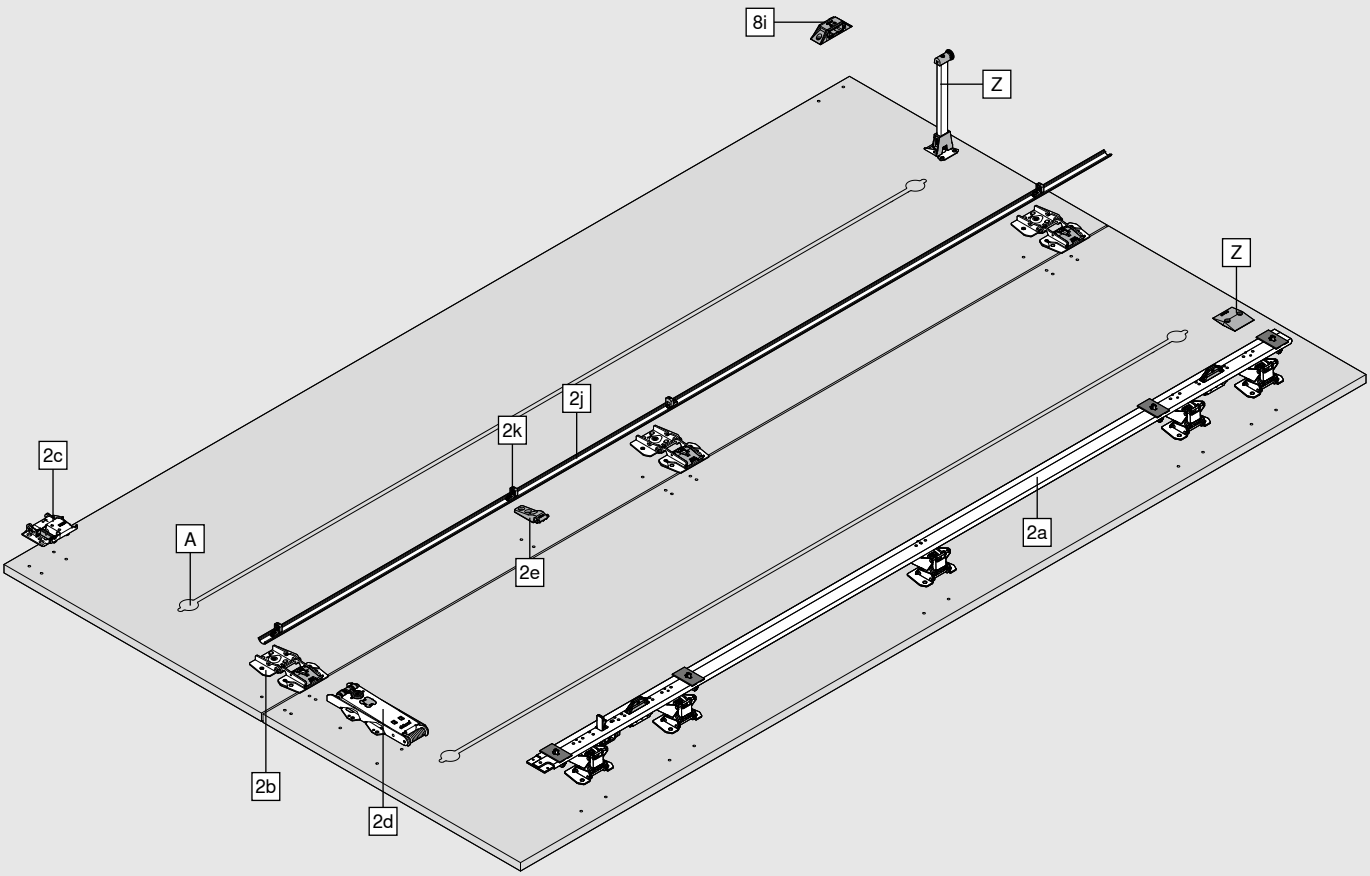


Consisting of:

2a	Hinge strip
2b	Centre hinge
2c	Roller carriage hinge
2d	TIP-ON unit door
2e	Support for door cover strip
2j	Door cover strip
2k	Mounting for door cover strip
8i	Inter-door support
Z	Inner door support incl. tip-assist

A We recommend at least one alignment fitting per front with a maximum installation height of 20 mm.
The space available between the pair of folding fronts is 20 mm.

Component overview

Track

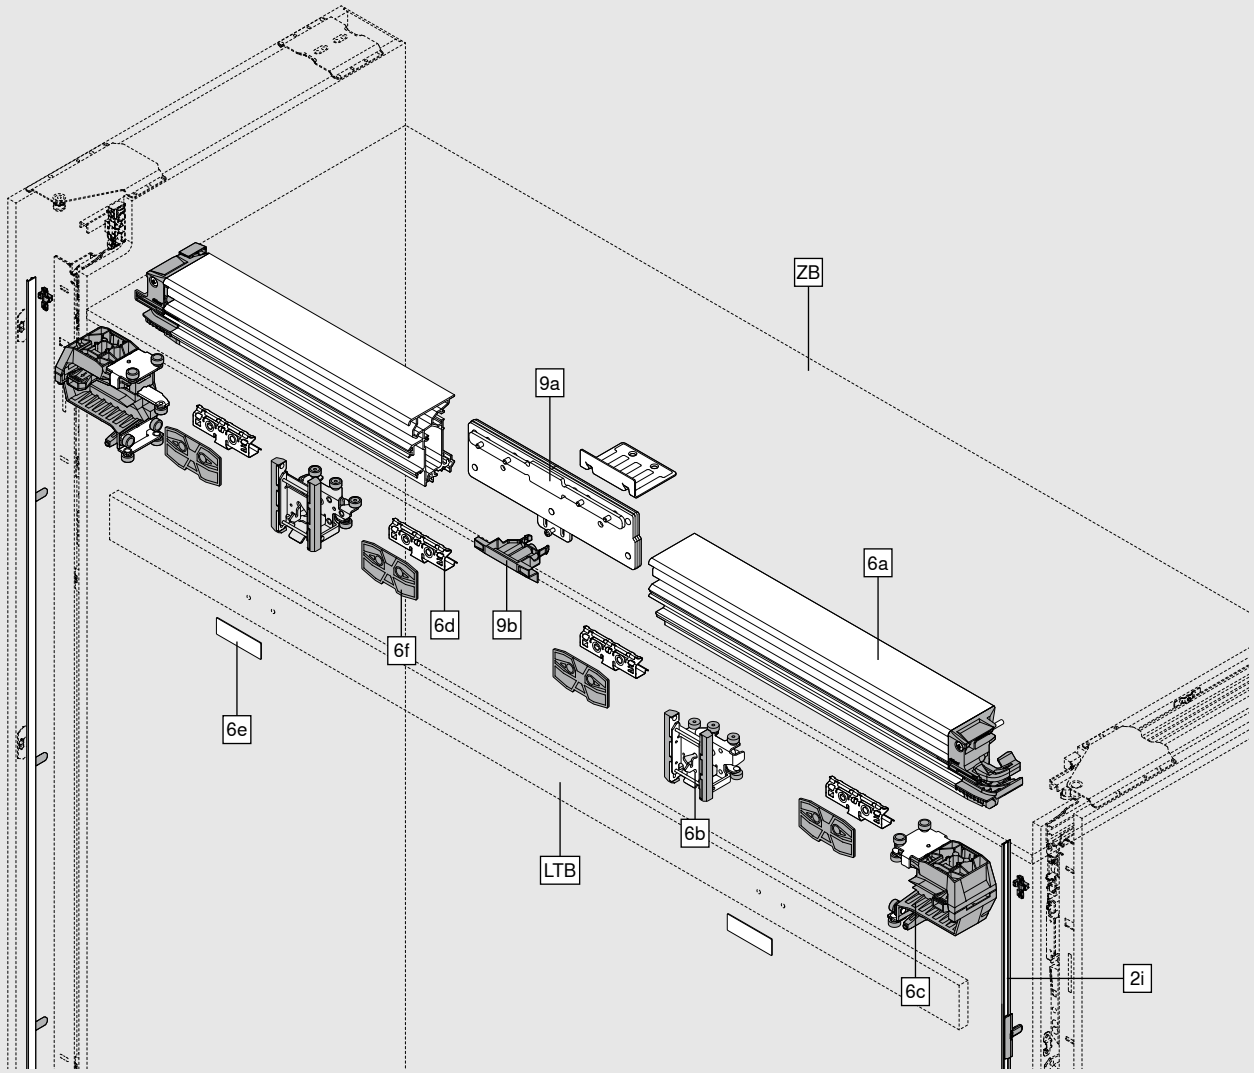

Consisting of:	
2i	Pocket cover strip incl. mounting
6a	Track
6b	Roller carriage
6c	Roller carriage transporter
6d	Mounting for track cover panels
6e	Catch plate
6f	Spacer
9a	Track connection
9b	Cover for track connection
9c	Support angle for depth adjustment
LTB	Track cover panel
ZB	Fixed shelf

Ordering information

1	Pocket profile set with TIP-ON			
	**Nominal length NL (mm)**	**Min. pocket depth POT* (mm)**	**Left**	**Right**
	450	550	802P450D.L3	802P450D.R3
	525	625	802P525D.L3	802P525D.R3
	600	700	802P600D.L3	802P600D.R3
	675	775	802P675D.L3	802P675D.R3
	750	850	802P750D.L3	802P750D.R3

* Specification without pocket back. A back construction with a thickness of at least 3 mm is required. Pocket and roller profiles as well as TIP-ON unit pocket can be shortened to any nominal length.

Consisting of:		
1a	1 x	Top pocket profile
1b	1 x	Bottom pocket profile
1c	1 x	Roller profile
1d	1 x	TIP-ON unit pocket
1e	6 x	Fixing clips
1f	1 x	BLUMOTION unit pocket
1g	5 x	Attachment for pocket cover strip

Order set for each double door, 1x left and 1x right

2	Hinge bracket set with TIP-ON		
	**Pocket height (mm)**	**Left**	**Right**
	1142–1356	802T1140.L3	802T1140.R3
	1357–1506	802T1350.L3	802T1350.R3
	1507–1656	802T1500.L3	802T1500.R3
	1657–1806	802T1650.L3	802T1650.R3
	1807–1956	802T1800.L3	802T1800.R3
	1957–2106	802T1950.L3	802T1950.R3
	2107–2256	802T2100.L3	802T2100.R3
	2257–2406	802T2250.L3	802T2250.R3
	2407–2556	802T2400.L3	802T2400.R3
	2557–2706	802T2550.L3	802T2550.R3
	2707–2856	802T2700.L3	802T2700.R3
	2857–2999	802T2850.L3	802T2850.R3

Cover strips must be shortened to the required length

Consisting of:		
2a	1 x	Hinge strip
2b	3 x	Centre hinge
2c	1 x	Roller carriage hinge
2d	1 x	TIP-ON unit door
2e	1 x	Support for door cover strip
2f	1 x	Hinge bracket
2i	1 x	Pocket cover strip, black anodised
2j	1 x	Door cover strip, black anodised
2k	4 x	Mounting for door cover strip
2l	2–4 x	Mountings for pocket cover strip
2m	1 x	Pocket cover strip support

Order set for each double door, 1x left and 1x right

Ordering information

Pocket connector set				
3	**Application with plinth**			
	**Pocket side thickness (mm)**	**Colour**		
	15–17	Black		**802V560B**
	18–19	Black		**802V580B**
Pocket connector top + bottom: POVH 10 mm for 0–6 mm gap				
POVH Pocket connector height				
Consisting of:				
3a	**2 x**	Front pocket connector		
3b	**2 x**	Rear pocket connector		
Order 1 set per double door				

Pocket connector set					
4	**Application without plinth**				
	**Pocket side thickness (mm)**	**Colour**	**Left**	**Right**	
	15–17	Black	**802V660B.L1**	**802V660B.R1**	
	18–19	Black	**802V680B.L1**	**802V680B.R1**	
Top pocket connector: POVH 10 mm for 0–6 mm gap					
Bottom pocket connector: POVH 3 mm for gap from 7–13 mm					
POVH Pocket connector height					
Consisting of:					
4a	**2 x**	Front pocket connector			
4b	**2 x**	Rear pocket connector			
Order set for each double door, 1x left and 1x right					

Pocket connector set					
5	**Worktop-mounted cabinet application**				
	**Pocket side thickness (mm)**	**Colour**	**Left**	**Right**	
	15–17	Black	**802V760B.L3**	**802V760B.R3**	
	18–19	Black	**802V780B.L3**	**802V780B.R3**	
Top pocket connector: POVH 10 mm for 0–6 mm gap					
Bottom pocket connector: POVH 3 mm for gap from 3–6 mm					
POVH Pocket connector height					
Consisting of:					
5a	**2 x**	Front pocket connector			
5b	**2 x**	Rear pocket connector			
Order set for each double door, 1x left and 1x right					

Ordering information


6	Track set				
	**LWA double door (mm)**	**Colour**	**Left**	**Right**
	1050	Black anodised	802L1050DL3	802L1050DR3
	1200	Black anodised	802L1200DL3	802L1200DR3
	1250	Black anodised	802L1250DL3	802L1250DR3
	1350	Black anodised	802L1350DL3	802L1350DR3
Track can be shortened to any length.				
LWA Internal width within the application				
Consisting of:				
6a	**1 x**	Track		
6b	**1 x**	Roller carriage		
6c	**1 x**	Roller carriage transporter		
6d	**2 x**	Mounting for track cover panels		
6e	**1 x**	Catch plate, black		
6f	**2 x**	Spacer		
Order set for each double door, 1x left and 1x right				

9	Assembly set for two double doors combined		
	**Colour**		
	Black		802M0004.03
Consisting of:			
9a	**1 x**	Track connection	
9b	**1 x**	Cover for track connection	
9c	**1 x**	Support angle for depth adjustment	
9e	**1 x**	Inter-door support (right + left)	

Ordering information

Z	Accessories	
Inner door support incl. tip-assist		
	Support length up to 218 mm	802ZA030
	Support length up to 350 mm	802ZA031
For additional support on the worktop area, plinth front, cabinet, etc.		
Adapter for electrical appliance switch-off		
		802ZG0CS
	Suitable exclusively for electrical appliance switch-off with magnetic contact (part number 3623011) from Halemeier GmbH (www.halemeier.de)	
	Liability disclaimer: Blum does not accept any liability for the function of the electrical appliance switch-off	
Consisting of:		
1 x	Contact switch adapter	
1 x	Ring magnet with catch plate	
4 x	M4x12 countersunk screws for contact switch adapter	
2 x	M4x5 round head screws for contact switch adapter	
Scuff guard		
	For front thicknesses starting from 23 mm	802ZA00S
	For front thicknesses less than 23 mm, the scuff guard can be used as additional front protection	
Consisting of:		
3 x	External pocket side scuff guard	
2 x	Internal pocket side scuff guard	
Screws		
	6 x 14.5 mm system screws, nickel plated	661.1450.HG
	4 x 35 mm chipboard screws, nickel plated	664.3500
Pocket connector		
	Rear pocket connector, pocket connector height (POVH) 10 mm	802V5002
Additional pocket connector for set-back plinth leg		
EXPANDO T – for thin fronts		
	EXPANDO T – single	70T4532T
EXPANDO T suitable for thin fronts – see page 81		
For front thicknesses less than 18 mm, we recommend a trial application		
Screws are not included in the scope of delivery		

Planning

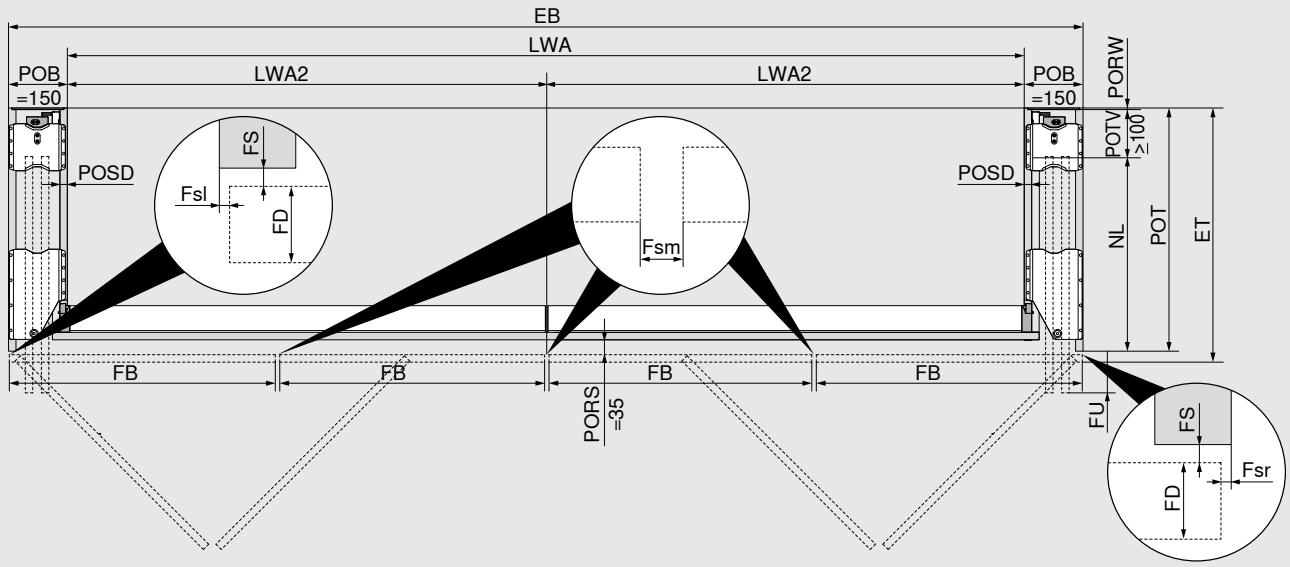


Installation width/internal width within the application
EB = 2 x LWA2 + 2 x POB (150 + 150 mm)
Front width/front protrusion
FB = (EB - Fsl - 3x Fsm - Fsr): 4 (fronts)
Fsl/Fsr = 1.0–4.0 mm; Fsm = 2.0–8.0 mm
Max. NL = FB + 8 mm
FU = FB - NL + 15 mm (min. FU = 7 mm)
Installation depth/pocket depth
ET = POT + FS (2 mm) + FD
FD = 18–26 mm
Min. POT = NL + POTV (≥ 100 mm) + PORW (≥ 3 mm)
POSD = 15–19 mm

- By cutting the profiles to size, the front protrusion (FU) can be customised.
- To ensure optimum functionality, the fronts are at a slight angle inside the pocket.
- The internal width within the application determines the maximum width available for the internal cabinetry.
- For front thicknesses (FD) less than 18 mm (possible depending on material/stability), we recommend a trial application.


EB	Installation width
ET	Installation depth
Fsl	Gap left
Fsr	Gap right
Fsm	Centre gap (between the fronts)
FB	Front width
FD	Front thickness
FS	Front gap
FU	Front protrusion
LWA	Internal width within the application
LWA2	Internal width within the application, double door
NL	Nominal length
POB	Pocket width
POT	Pocket depth
PORS	Pocket back cut
PORW	Pocket back
POSD	Pocket side thickness
POTV	Pocket depth loss

Minimum side gap

Pocket to pocket/adjacent cabinet

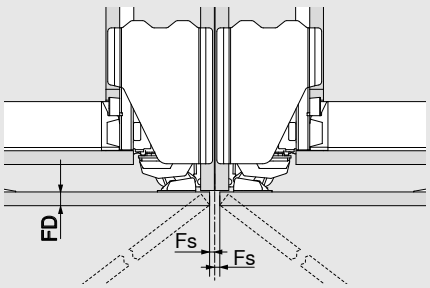

Pocket to wall/decor panel

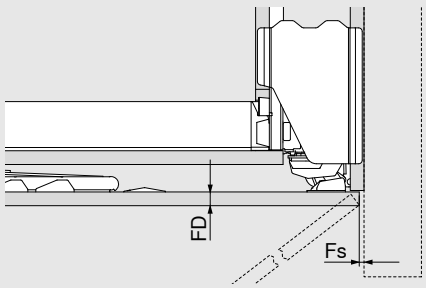

FD (mm)	Min. Fs (mm)
18 –20	2
20.1–23	2.5
23.1–26	3


For free-standing applications,
Fs must be minimum 1 mm

FD	Front thickness
Fs	Side gap

Planning

Installation height, front height

Application with plinth

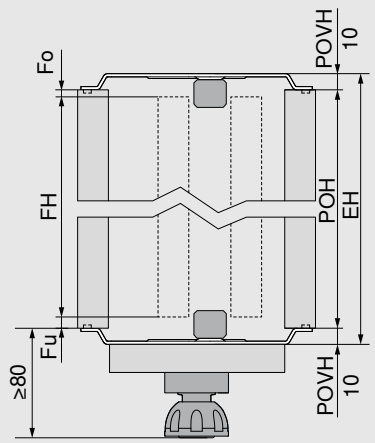

FH = POH - Fo - Fu

EH = POH + POVH top and bottom


POVH 10 mm: gap 0–6 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance to the next movable element above 3 mm, for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning
- Minimum plinth height 80 mm

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height


Application with set-back plinth

Additional rear pocket connector

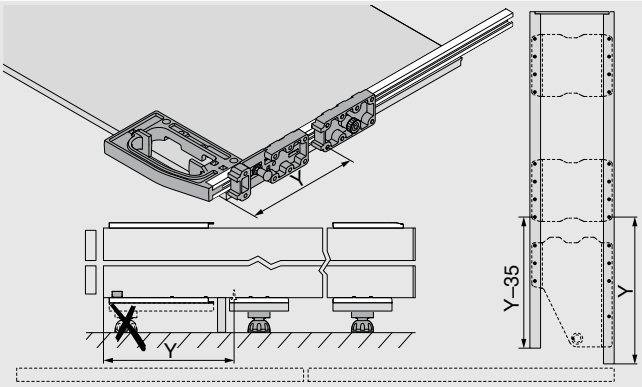

Installation height, front height

Application without plinth

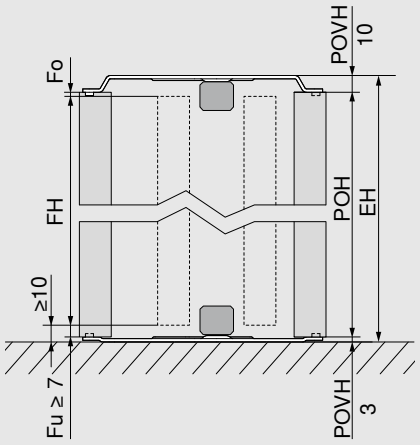

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm

POVH bottom 3 mm: gap from 7–13 mm


- Take into account that the pocket must be tilted during installation.
- Minimum distance from the bottom front edge to the floor or next element below is 10 mm
- Minimum distance to the next movable element above 3 mm, for non-movable elements a front insertion space of 6 mm must be taken into account
- The pocket connector height must be taken into account during planning

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Planning

Installation height, front height

Worktop-mounted cabinet application

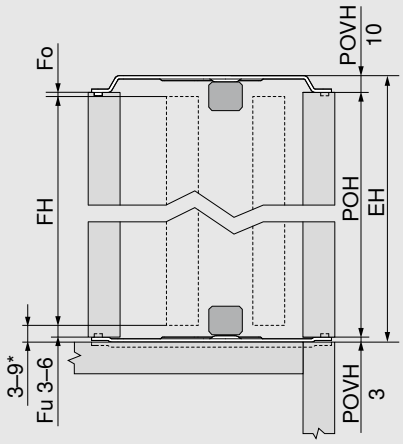

* If the distance between the front and the next element below is < 6 mm, the pocket connector must be embedded in the worktop

FH = POH - Fo - Fu

EH = POH + POVH top and bottom

POVH top 10 mm: gap 0–6 mm

POVH bottom 3 mm: gap from 3–6 mm

- Take into account that the pocket must be tilted during installation.
- Minimum distance between front and next element below with flush front/worktop is 3 mm
- Minimum distance between front and next element below with protruding front (e.g. protruding worktop) is 6 mm
- Minimum distance to the next movable element above 3 mm, for non-movable elements a front insertion space of 6 mm must be taken into account
- A trial application is recommended in the edge areas
- The pocket connector height must be taken into account during planning
- The distance between the front and the next element above and below is made up of Fu or Fo + POVH

EH	Installation height
Fo	Top gap
Fu	Bottom gap
FH	Front height
POH	Pocket height
POVH	Pocket connector height

Max. front weights for worktop-mounted cabinets in kg per front


Front height FH (mm)	Front width FB (mm)						
	450	500	550	600	650	700	750
1130–1349	22	20	18	16	15	14	13
1350–1499	23	21	19	18	17	16	15
1500–1649	25	23	21	19	18	17	16
1650–1803	27	25	23	21	20	19	18

Note

- The max. pocket height when planning a worktop-mounted cabinet is 1806 mm

Planning


Inner door support

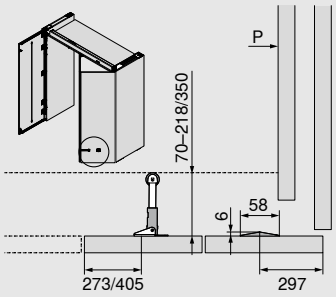

- Support on the worktop area, plinth front, cabinet, etc.
- Distance from internal cabinetry: 70–218/350 mm
- Assembly height of the door support ideally as far down as possible, however up to a maximum height of 1000 mm from the front bottom edge

P Pocket

Inter-door support

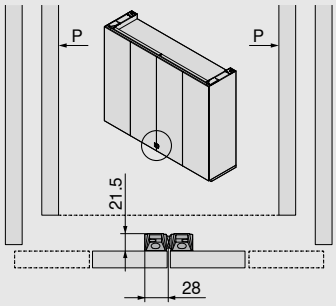

- Supports a single door against a double door, two single doors against each other or two double doors against each other

P Pocket

Track installation dimension


LBH = 83 mm

LBD = 15–19 mm
(the spacer must be used ≤ 17 mm)

LTF = 17 mm

LA = 100 mm


LV = LA + ZBD (≥ 15 mm)

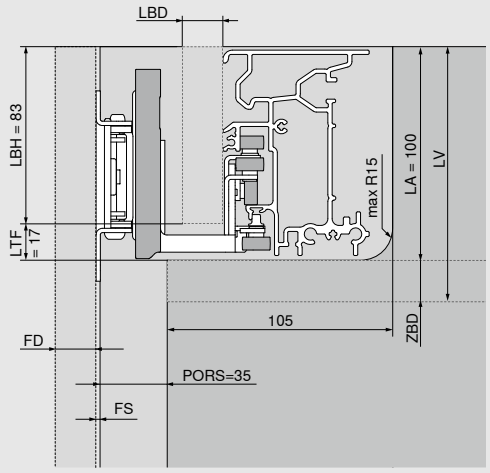

- We recommend using a cross member to stabilise the fixed shelf. Minimum distance to front edge of internal pocket side = 170 mm
- A solid connection between the fixed shelf and the pocket with connector fittings is recommended for an attractive gap layout
- No mounting of add-on parts directly on the track

FD	Front thickness
LA	Track cut-out
LV	Track installation
LBD	Track cover panel thickness
LBH	Track cover panel height
LTF	Track gap
PORS	Pocket back cut
ZBD	Fixed shelf thickness

Internal height and internal depth within the application

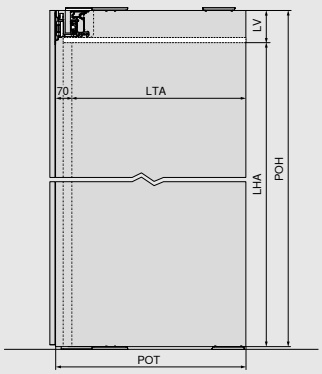


LHA = POH - LV

LTA = POT - 70 mm

- The internal height/internal depth within the application determines the maximum height/depth available for the internal cabinetry

LHA	Internal height within the application
LTA	Internal depth within the application
LV	Track installation
POH	Pocket height
POT	Pocket depth

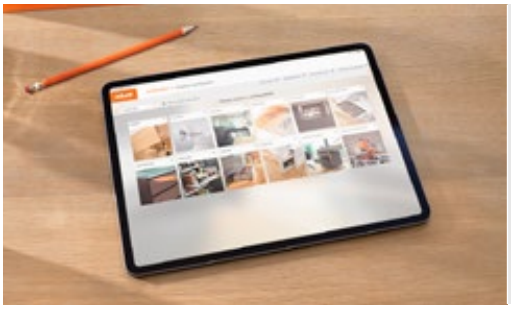

Product Configurator


Obtain the exact calculation for assembling the cut-to-size profiles quickly and efficiently using the Product Configurator. The configurator calculates all the dimensions for each configuration and also outputs them as drawings.

www.blum.com/rev1

Calculations and assembly of the profiles

REVEGO duo | Double door

Pocket cover strip, door cover strip

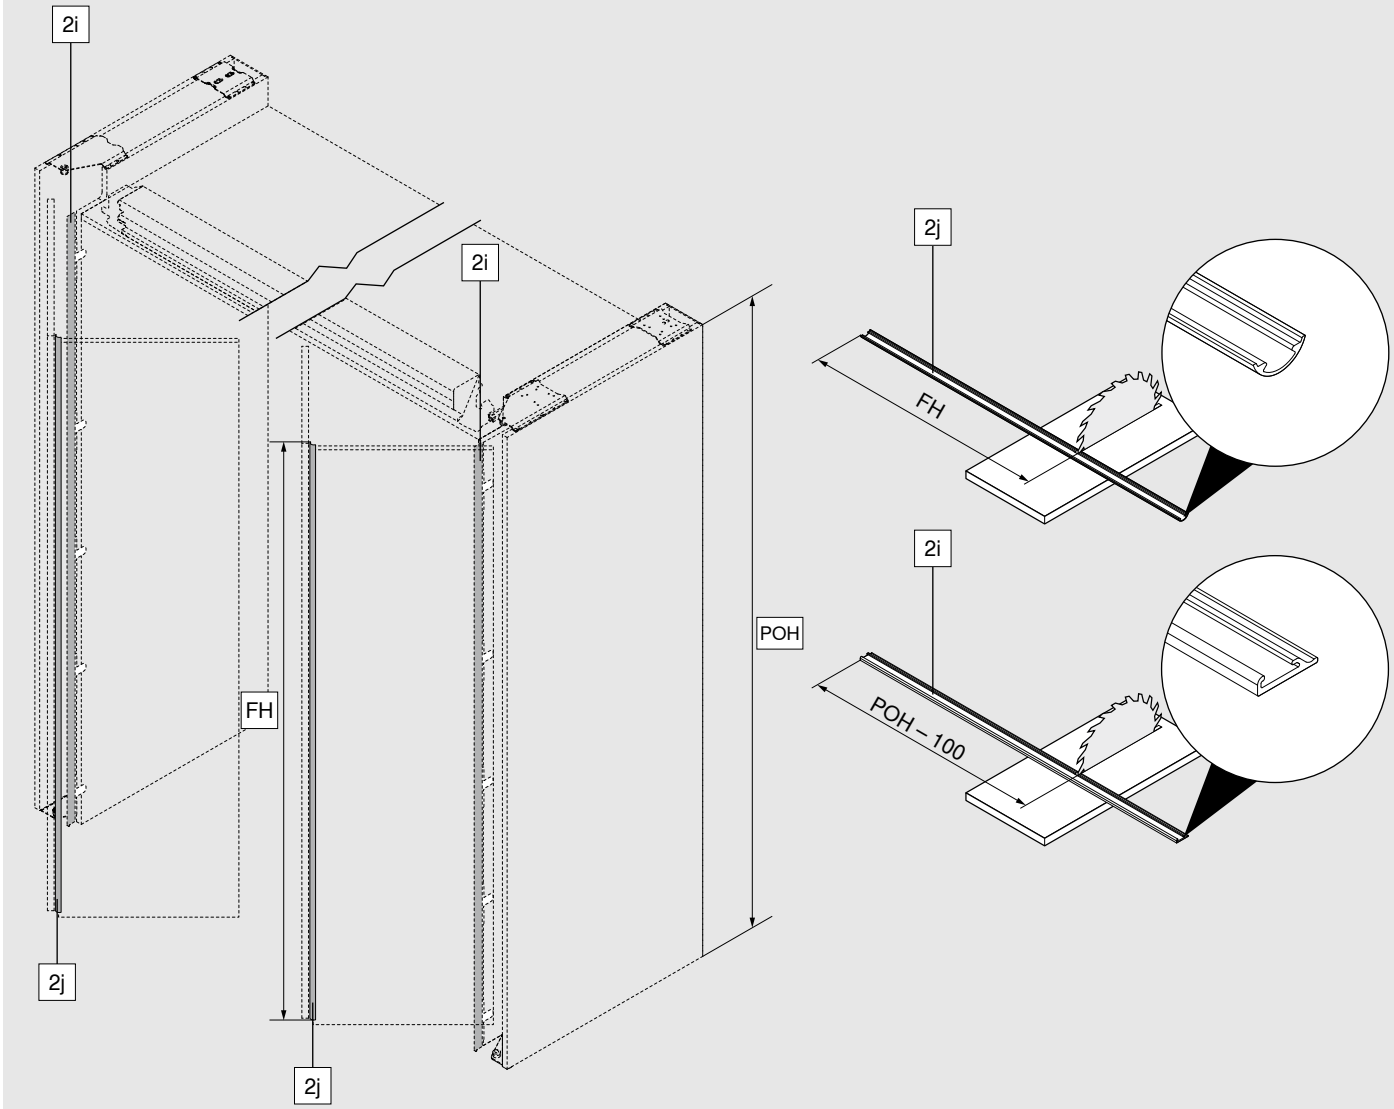


FH	Front height
POH	Pocket height
2i	Pocket cover strip
2j	Door cover strip

Calculations and assembly of the profiles

REVEGO duo | Double door

Roller profile, pocket profile, TIP-ON unit pocket

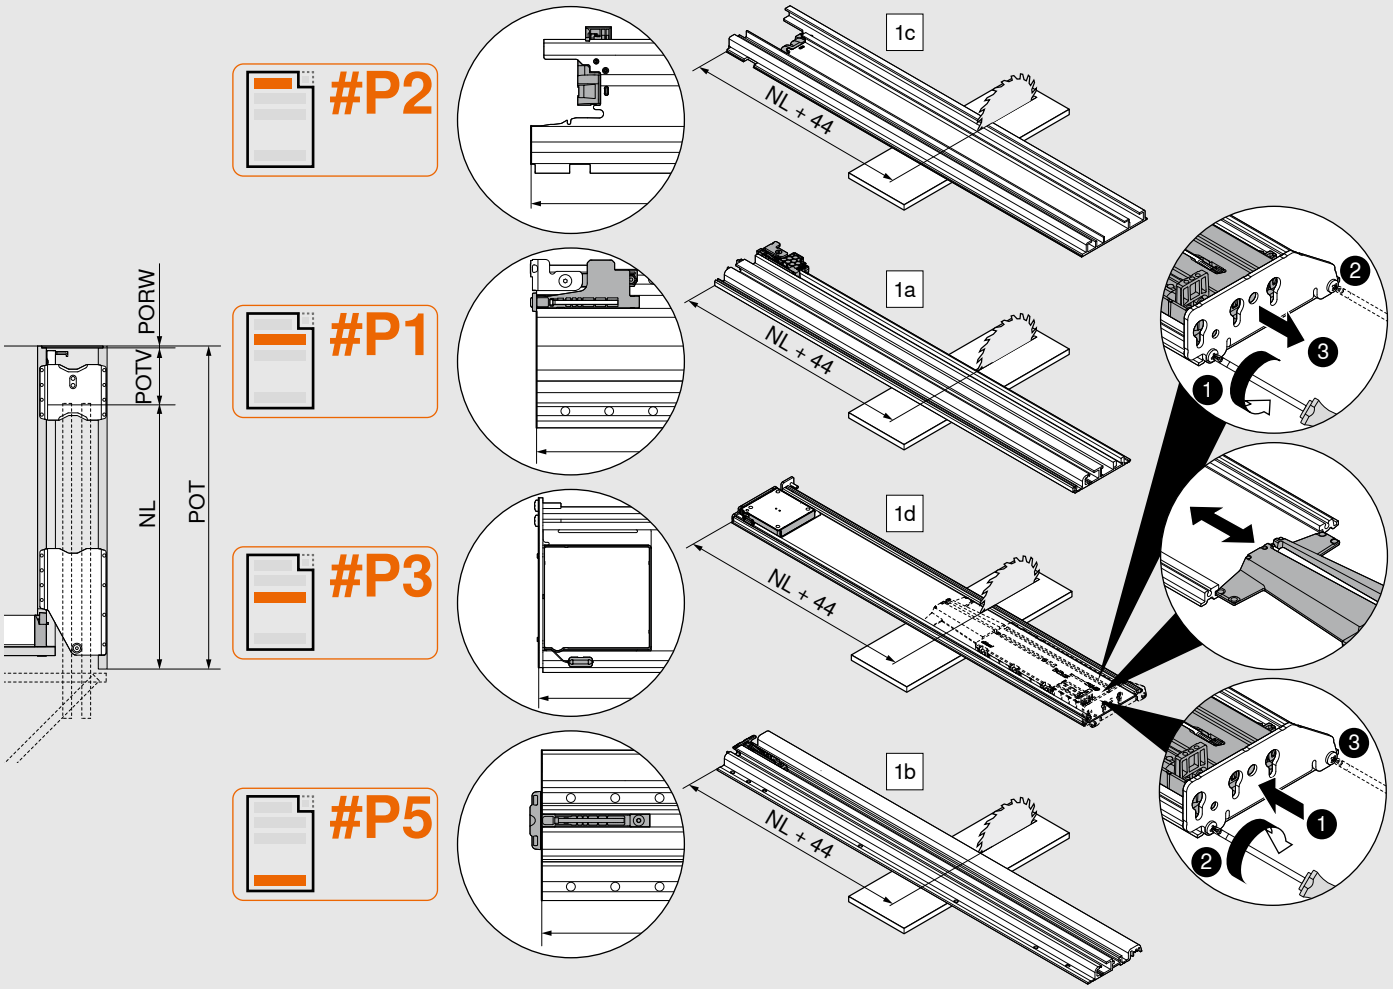

NL = POT – POTV – PORW

#P1	1a	Top pocket profile
#P2	1c	Roller profile
#P3	1d	TIP-ON unit pocket
#P5	1b	Bottom pocket profile

NL	Nominal length
POT	Pocket depth
PORW	Pocket back
POTV	Pocket depth loss


Note

- Pocket and roller profiles as well as TIP-ON unit pocket must not be damaged during cutting to size.
- Pocket and roller profiles as well as TIP-ON unit pocket must be cleaned to remove any dirt and deburred before installation.

Calculations and assembly of the profiles

REVEGO uno | Single door

Pocket cover strip

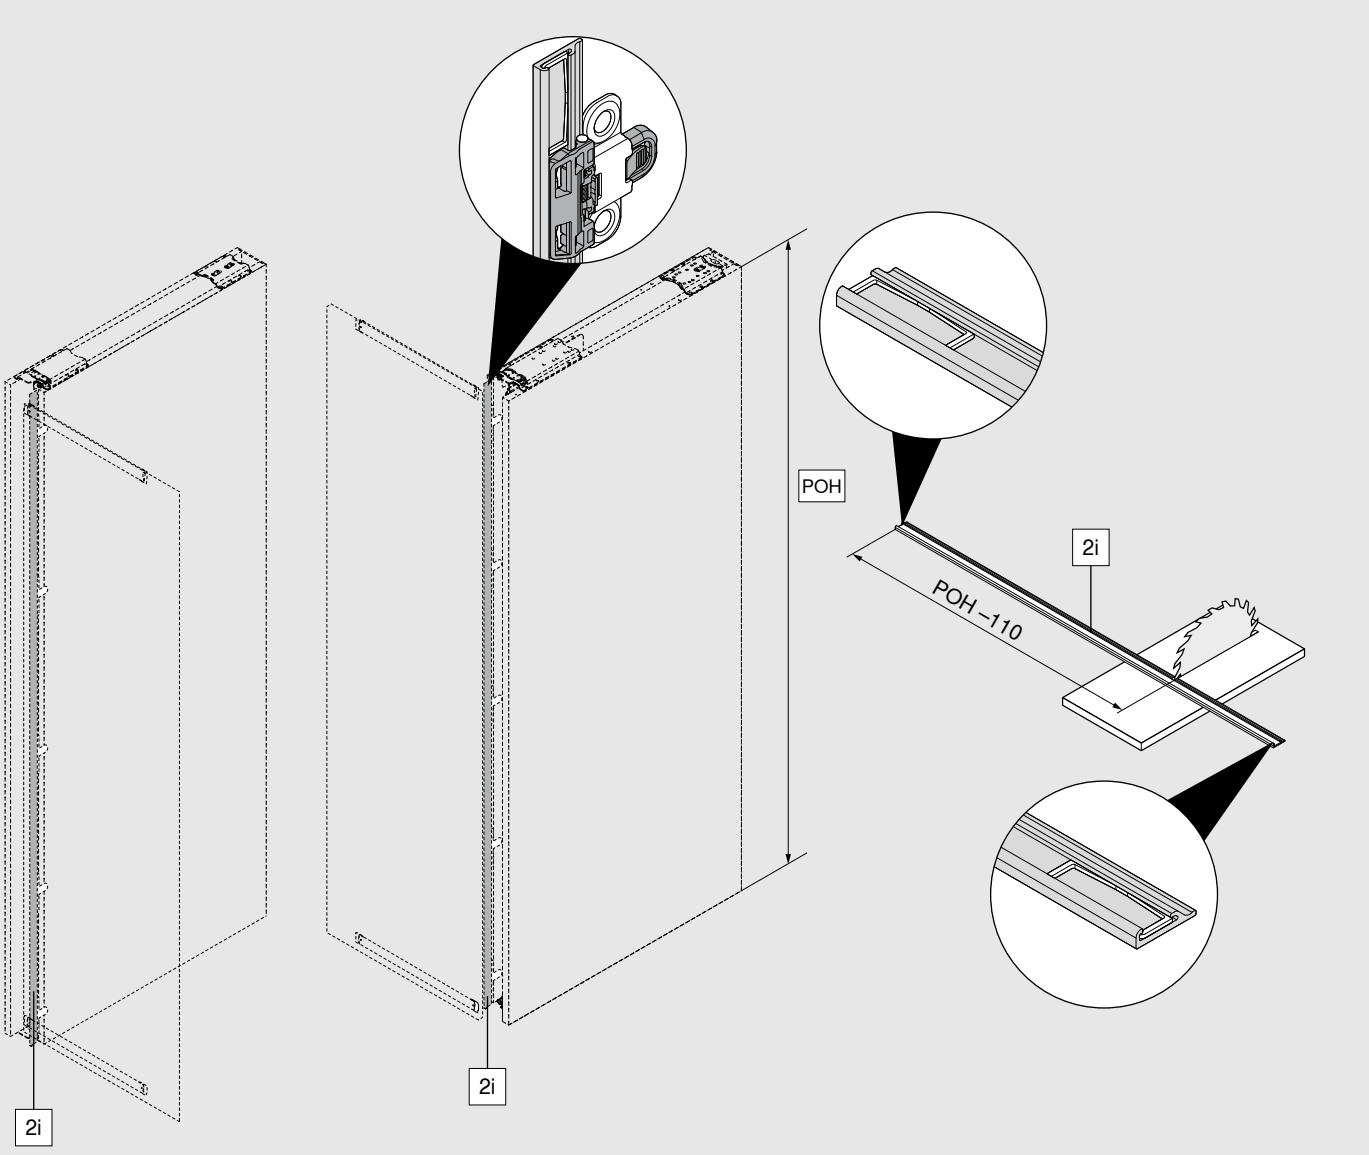


POH	Pocket height
2i	Pocket cover strip

Calculations and assembly of the profiles

REVEGO uno | Single door

Pocket profile, TIP-ON unit pocket, door stabiliser

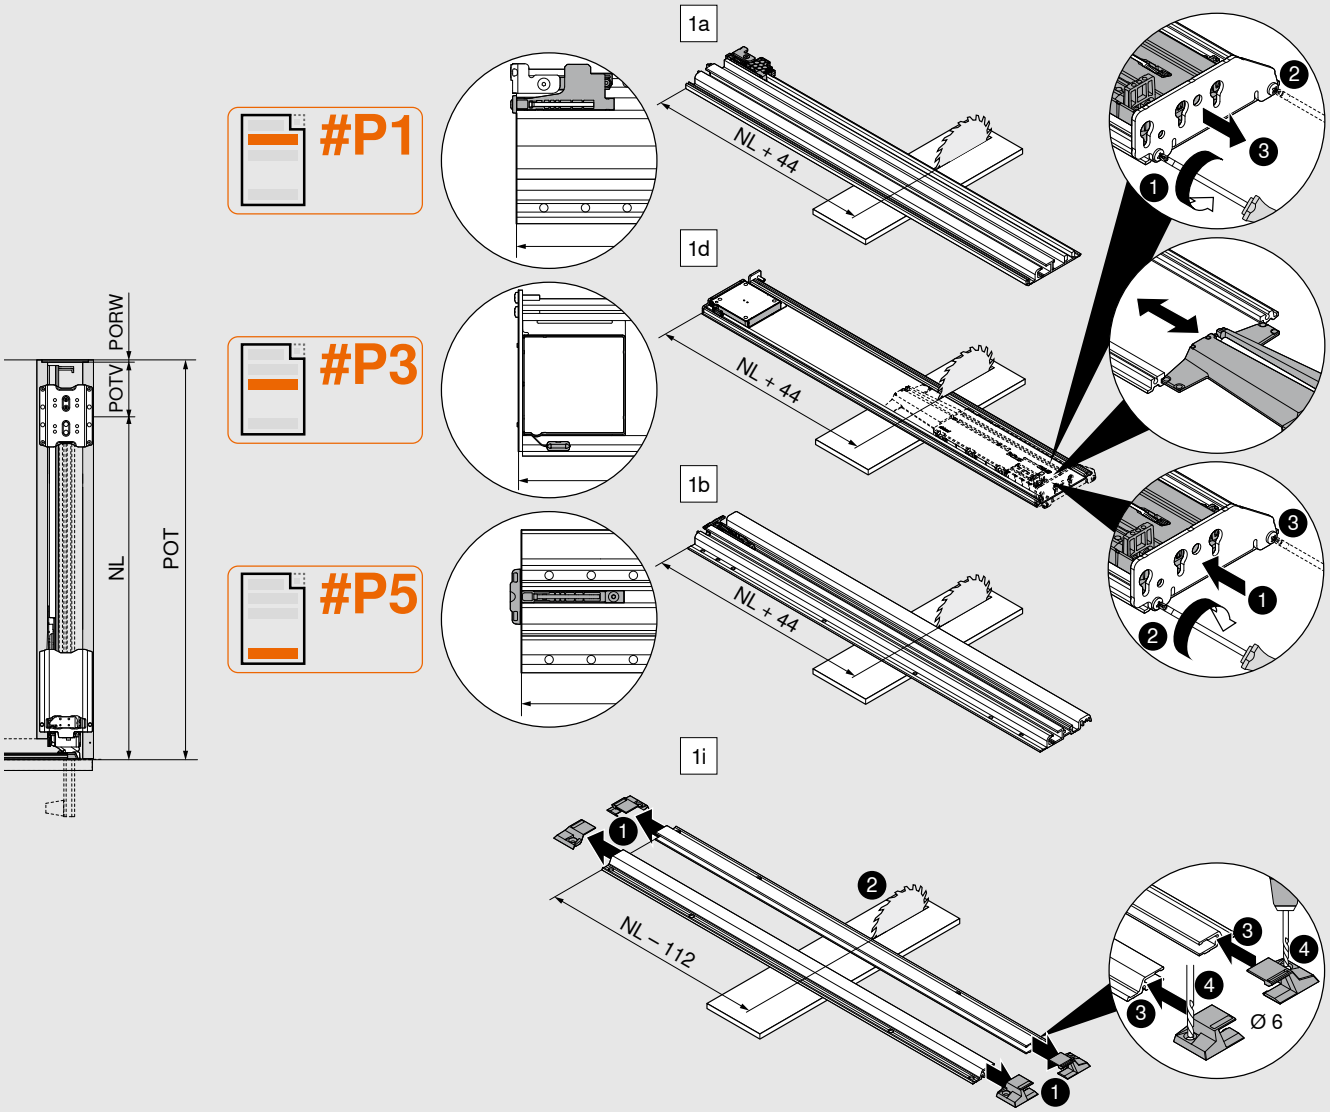

NL = POT – POTV – PORW

#P1	1a	Top pocket profile
#P3	1d	TIP-ON unit pocket
#P5	1b	Bottom pocket profile
	1i	Door stabiliser

NL	Nominal length
POT	Pocket depth
PORW	Pocket back
POTV	Pocket depth loss


Note

- Pocket profiles, TIP-ON unit pocket and door stabiliser must not be damaged during cutting to size.
- Pocket profiles, TIP-ON unit pocket and door stabiliser must be cleaned to remove any dirt and deburred before installation.

Calculations and assembly of the profiles

REVEGO duo | Double door

Track, track extension

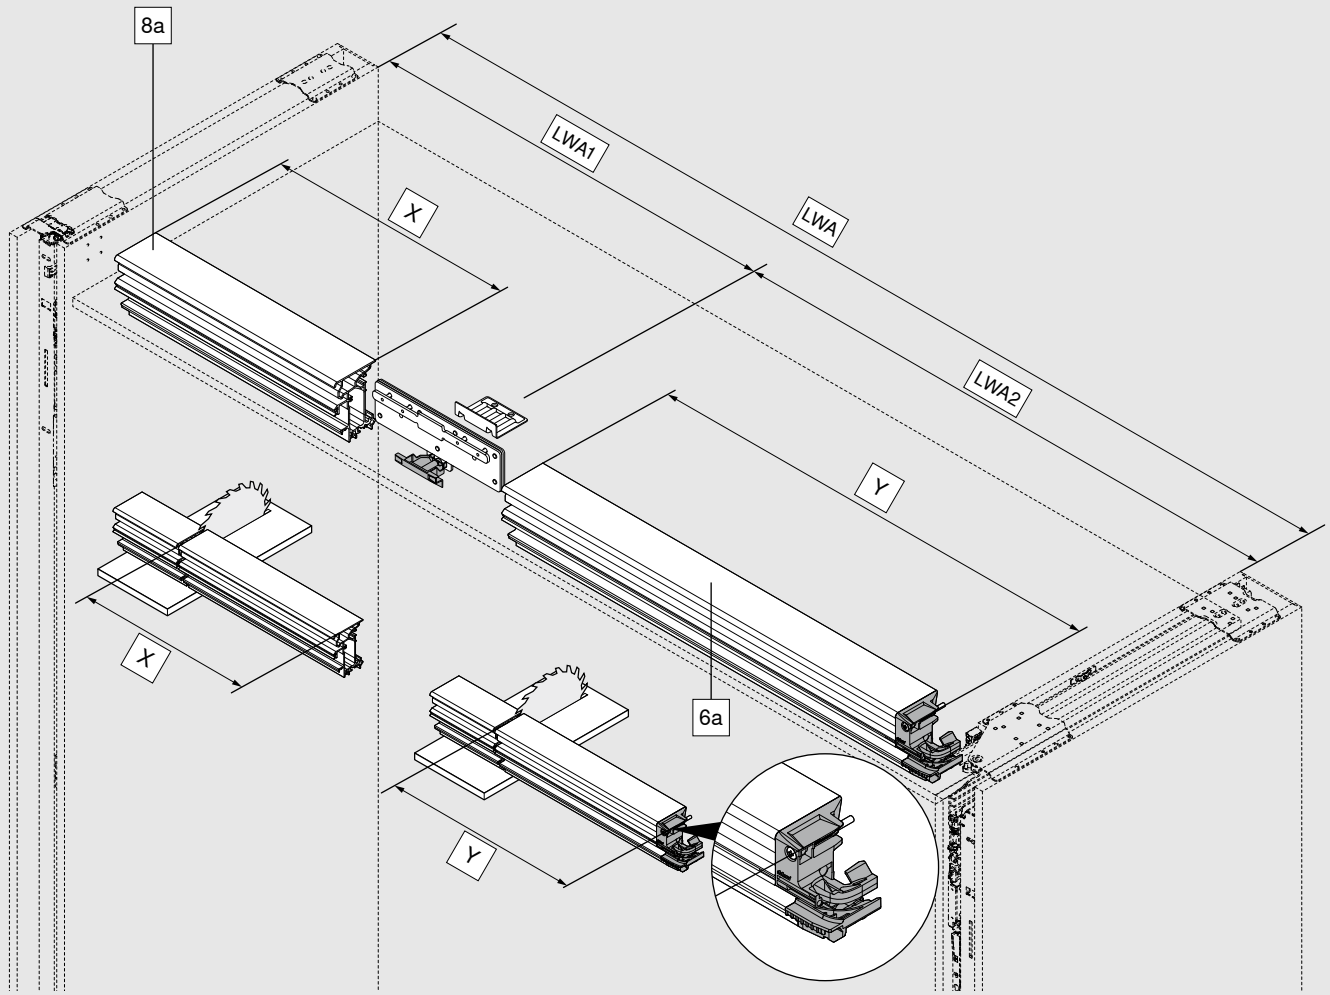

Application	X	Y
REVEGO duo	–	LWA - 12 mm
REVEGO uno + duo	LWA1 - 58 mm	LWA2 - 12 mm
REVEGO duo + duo	–	LWA2 - 12 mm

LWA	Internal width within the application
LWA1	Internal width within the application, single door
LWA2	Internal width within the application, double door
6a	Track
8a	Track extension

EXPANDO T




- EXPANDO T – fixing system
- Thin fronts measuring 8 mm or more
- Different front materials

EXPANDO T – single



Colour	Material	
Dark grey	Nylon/steel	70T4532T

Drilling depth | Screw selection – EXPANDO T

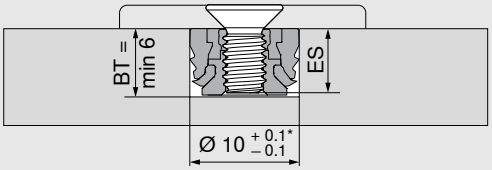

Screws with M4 thread have to be used for EXPANDO T single

Select the lowest possible drilling depth to suit the screw length when using the single dowel

BT Drilling depth


ES Screw penetration depth

ES min. = 4 mm

ES max. = BT - 0.5 mm

* Stone and ceramic +0.2/-0.1 mm

Assembly – EXPANDO T

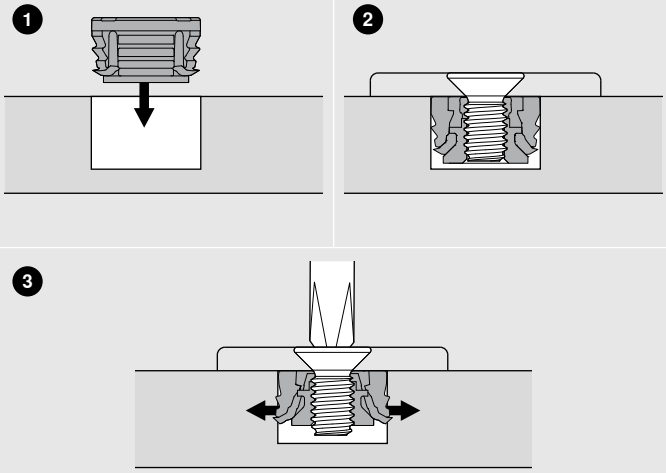

Area of application and assembly recommendation

EXPANDO T is suitable for fixing Blum fittings to thin cabinet fronts of all types of materials. Front materials can be just 8 mm thick or more, provided they are sufficiently stable and strong.

A trial application is recommended.

Nm Minimum tightening torque

Materials tested by Blum	Nm
Chipboard (transverse tensile strength > 0.4 N/mm²)	1.5
MDF (transverse tensile strength > 0.6 N/mm²)	1.5
HDF	2
HPL	2
Mineral composites	2
Front weight	
Max. 35 kg per front	

Limitation of liability

Blum accepts no liability for the use of EXPANDO T in combination with materials not listed or fittings from other manufacturers. It is recommended that assembly be carried out by an experienced furniture manufacturer.

Find more information on assembly and adjustment of EXPANDO T at **www.blum.com/rev13**

Gauge set for REVEGO pocket connector





– Drilling template for horizontal drillings of REVEGO pocket connectors on the pocket side wall
– Material: nylon/steel/aluminium

Ordering information	
	STL.8000

Internal testing and inspection regulations


Durability

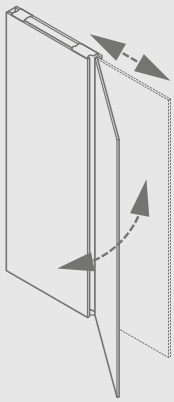


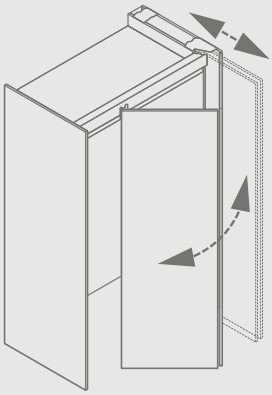

40,000 opening and closing cycles.


Abuse test

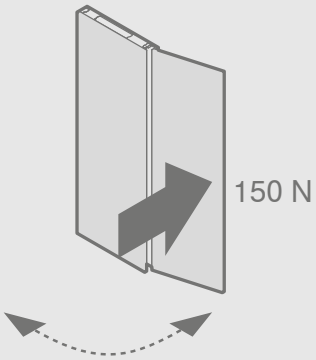


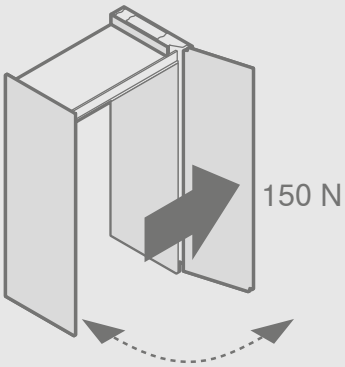

Horizontal load test to ensure that system will withstand misuse


Slam open/slam shut test

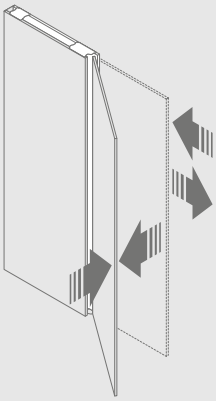

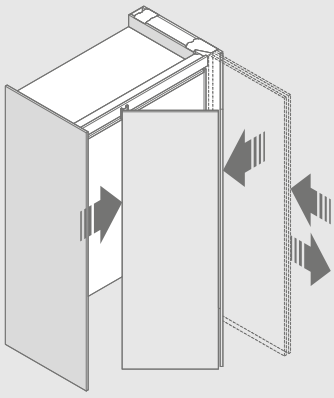

To simulate overload when opening and closing and ensure that the fronts do not detach from fittings.

Corrosion testing

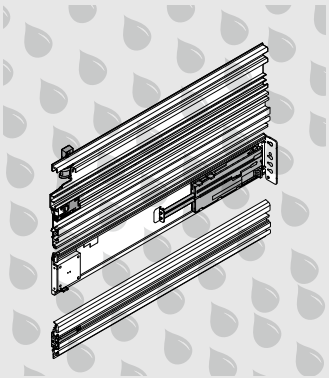

Based on DIN EN ISO 9227 and DIN EN ISO 6270-2 for simulating corrosion influences.

Look for our FSC™-certified products

FSC
www.fsc.org
FSC™ C115115

All content is copyrighted by Blum.
Subject to technical modifications and changes to the range without notice.
IDNR: 970.290.9 · EP-649/1 EN-NZ/10.25

Blum New Zealand Ltd
16 Avenger Crescent, Wigram
Christchurch 8042
New Zealand
Phone: 03 379-4984
E-mail: info.nz@blum.com
www.blum.com

Blum New Zealand Ltd
621 Rosebank Road, Avondale
Auckland 1026
New Zealand
Phone: 09 820-5051
E-mail: info.nz@blum.com
www.blum.com

Julius Blum GmbH
6973 Höchst, Austria
Tel.: +43 5578 705-0
Fax: +43 5578 705-44
E-mail: info@blum.com
www.blum.com

Our sites in Austria, Poland and China are certified to the international standards mentioned below.
Our site in the USA is certified to ISO 9001.
Our site in Brazil is certified to ISO 9001, ISO 14001 and ISO 45001.

ISO 9001 Certified Quality System
ISO 14001 Certified Environmental System
ISO 50001 Certified Energy System

blum®