


Dear Valued Blum Customer,

The Blum hinge and mounting plate you currently have are now discontinued/obsolete. Please refer to the illustrations below to determine the necessary modifications for your door and frame, based on the hinge and the style of mounting plate you currently have.


Obsolete hinges (door side)

COMPACT 31

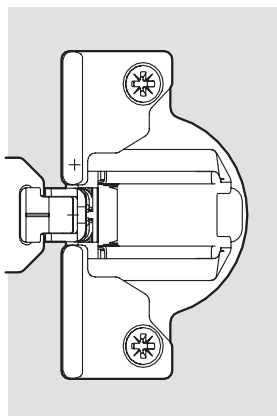

***COMPACT 31 -**
See steps below for
door side replacement
before page 2

COMPACT 33

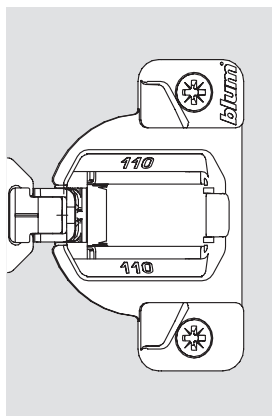


COMPACT 33 -
Skip the steps below and
proceed to page 2



Current hinge


COMPACT 38B

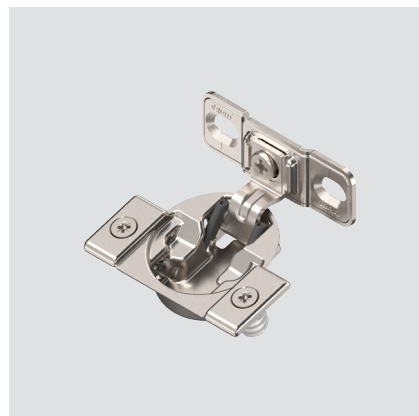

COMPACT 31 replacement (door side)

When replacing a COMPACT 31, the direction of the hinge cup is rotated and the previous mounting holes will still be visible as shown below.




- For the hinge cup, you will need **#6 x 5/8 wood screws**

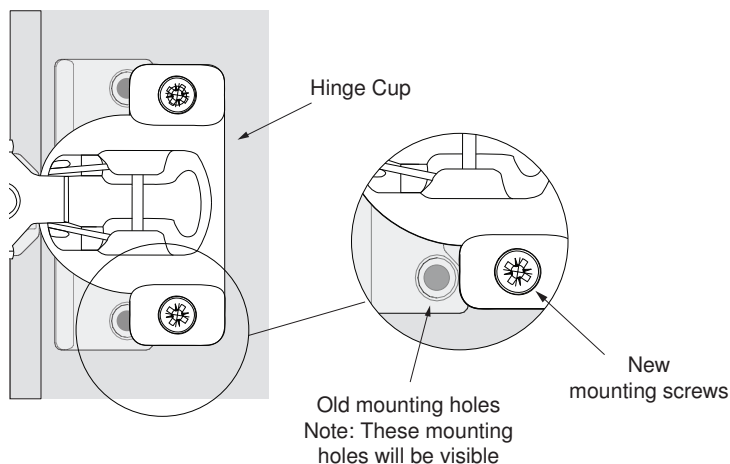



Scan the
QR code for
*COMPACT 31
replacement
video

Obsolete mounting plates (cabinet side)

130.116-01

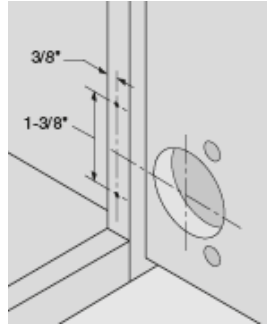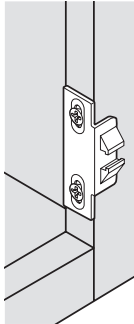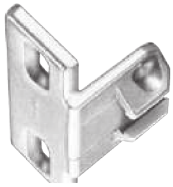

130.216-01



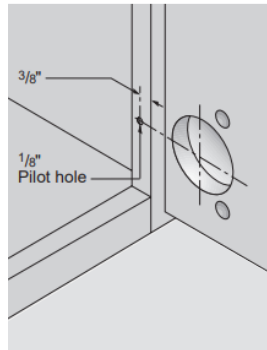
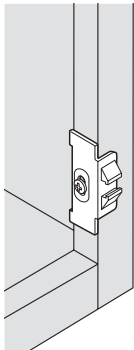


If your mounting plate is either showing the numbers **130.116-01** or **130.216-01** (see above), you have a **1-5/8"** overlay.



Scan the QR code for
COMPACT 31/33 to
COMPACT 38B facemount
replacement video




Current replacement 38B

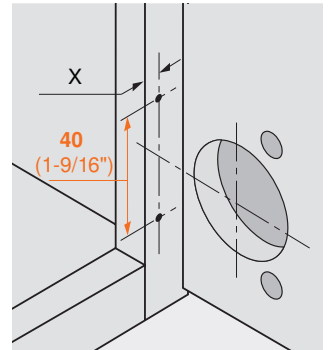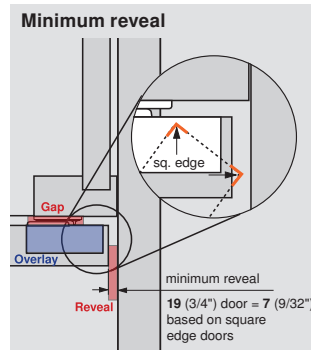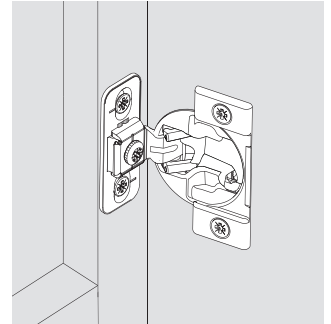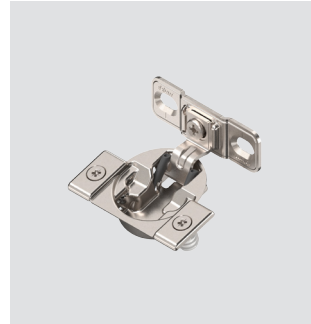


Overlay (OL)	X
41 (1-5/8")	15 (19/32")
For any other overlays, use formula: $X = OL - 35 (1-3/8") + 9 (11/32")$	

Obsolete mounting plate (cabinet side)

133.024-01

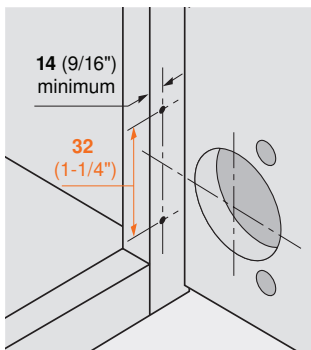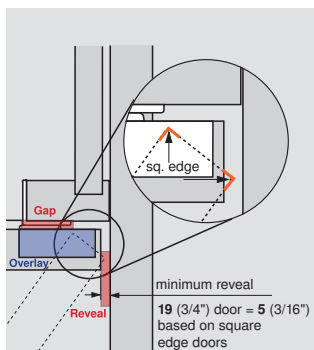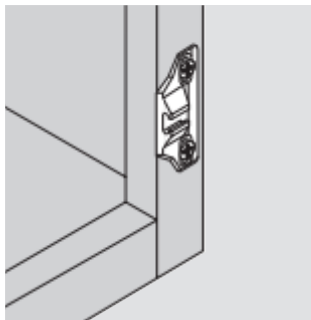

Current replacement 38B

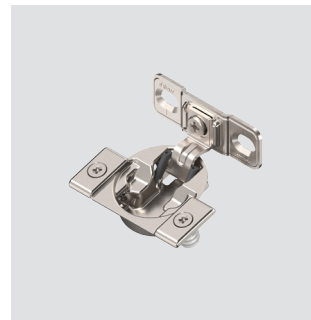

- Increase screw hole spacing to **40 (1-9/16")** on the new plate (previously **32 (1-1/4")**)
- Each screw hole shifts **4 (1/4")** outward from the cup hole centerline

